

DT-131常规说明书尺寸:360mm*135mm折页:五折六页

封面

User Manual
Wireless Smart Meat Thermometer



 
CONTENTS

Package Contents	1
Diagram	II&III
Specifications	IV
Using for the First Time	V
Operation	VI
Power Control	VII
Connection Settings	VIII
App Interface	IX
Cooking Settings	X
Trouble Shooting	XI
Certification	XII
Maintenance & Safety Guidelines	XII

I. Package Contents



II. Probe Diagram



III. Booster Diagram



IV. Specifications

Probe	Booster
Ambient Temperature Sensor: -40°C~70°C / 0°F~158°F	0~100°C / 32°F~212°F
Accuracy: ±1.5°C / ±1.5°F	±1.5°C / ±1.5°F
Internal Temperature Sensor: -40°C~300°C / -40°F~572°F	0~100°C / 32°F~212°F
Water Resistance: IP67	IP67
Probe Material: Food-grade stainless steel	Stainless Steel
Charging Time: 4 hours	Charge Time

V. Using for the First Time

- Before using your device, ensure the product is fully charged and you have reviewed the important safety information.
- Download the free Tempore App for iOS or Android.
- Insert the probe into the meat. Ensuring that it passes the Safe Notch and that the internal sensor is in the center of the meat.
- Press once to silence the booster's alarm when reaching the target temp. Press twice to turn the bright mode after the screen is dim.
- Press to turn the booster on or off. Press and hold for 2 seconds to turn off the booster.
- Press to turn the booster on or off. Press and hold for 2 seconds to turn off the booster.
- Will sound when the internal or ambient temperature reaches its preset range. If the internal temperature exceeds 100°C/212°F or the ambient temperature exceeds 300°C/572°F, an over temperature warning will activate.
- Press and hold for 2 seconds to turn off the booster.

VI. Operation

Panel Instruction



Sleep Mode: The booster automatically enters default Sleep Mode after 5 minutes of Probe inactivity.



VII. Power Control


Power On: To power on the booster, press the  button at the side of booster for 2 seconds. The booster will activate immediately and the screen will change from  to .

Power off: Press and hold the  button for 2 seconds to shut down the screen. The top right screen will display .


VIII. Connection Settings

- Download the Tempore App
- Turn on Bluetooth
- This step is needed when using the probe for the first time or after
- Turn on the app
- Let's start cooking!

VIII. APP Interface

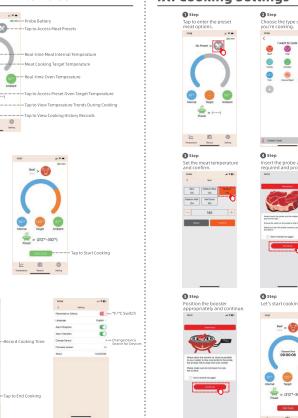

IX. Cooking Settings

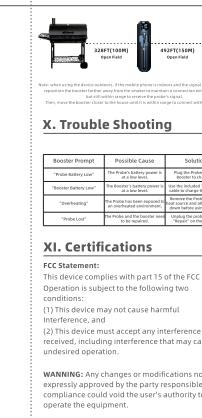

X. Trouble Shooting

Booster Prompt	Possible Cause	Solution
Probe battery low	The booster battery probe is low. The probe is not inserted into the meat.	Plug the probe into the meat. The booster battery probe is the probe with the red label. The probe with the blue label is the ambient temperature probe.
Booster battery low	The booster battery probe is low. The probe is not inserted into the meat.	Plug the probe into the meat. The booster battery probe is the probe with the red label. The probe with the blue label is the ambient temperature probe.
Overheating	The probe is too close to the heat source. The probe is too close to the heat source.	Move the probe away from the heat source.
Probe lost	The probe and the booster need to be paired.	Unpair the probe and the booster.

XI. Certifications

FCC Statement: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

XII. Maintenance & Safety Guidelines

- Make sure the probe is clean and completely dry before placing it in the booster's charging nest. Clean probes charge better. Wash with mild soapy water and avoid using abrasive sponges or cleaners that could scratch it.
- Clean the booster by wiping it with a damp cloth. Remember, the booster is not dishwasher-safe or waterproof, so don't submerge it in water.
- Always insert the probe beyond the safety notch to avoid damage and reduce injury risk. Do not use the probe in microwave ovens.
- Keep the booster away from grill covers or 1600°F heat sources.
- Never remove the probe while it's hot. If exposed to high heat or flames, wear eye protection when removing it.
- If the probe falls into the fire or direct heat, close the grill or cooking appliance's lid and turn off the heat. Let it cool completely before removing it.
- Keep the probe away from hot coals. Don't use it directly above hot coals. Always wear gloves when removing the probe from meat.
- After use, clean the probe with a kitchen towel or cloth. Allow only when it has cooled to a normal temperature to avoid damage.
- After cleaning, store the probe in the booster for charging.
- The probe has a sharp tip, so handle it carefully. Keep it out of reach of children or individuals with certain disabilities, and don't store or use it near them.