




## USER MANUAL

### PACKING LIST



- Keyboard x1
- USB Receiver x 1 (Stored in battery compartment)

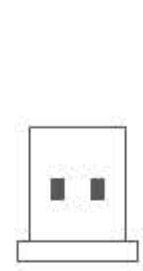

- User Manual x1

### OPERATION GUIDES

- Fetch the wireless keyboard
- Insert two 1.5V AAA batteries into the keyboard according to the positive and negative sign. And turn on the power switch.
- Turn on the power switch of the keyboard, which should be within 20 cm away from the receiver. Press and hold "ESC" and "K" keys together for 3-5 seconds to pair again.
- Plug the receiver into the USB port of your computer.
- When the computer installs driver automatically, they start to serve.

### NOTE

The calculator function is not available for Mac OS.

### KEY COMBINATION FUNCTION

FN + F1	Mute	FN + F2	Volume Down
FN + F3	Volume Up	FN + F4	Previous Track
FN + F5	Play/Pause	FN + F6	Next Track
FN + F7	Light Down	FN + F8	Light Up
FN + F9	Change Windows	FN + F10	Choose All
FN + F11	Copy	FN + F12	Paste

FN +

Lock the functions of F1~F12, after locking, press F1~F12 as combine keys.

Press FN + again

Unlock the functions of F1~F12, restore F1~F12 to normal functions

### INDEPENDENT MULTIMEDIA FUNCTIONS

Calculator Function Save Function

Search Function

### FUNCTIONAL DIAGRAM

- Dual-system function compatibility: Different systems correspond to different keyboard functions, and this product can be respectively compatible with Mac and Windows systems through adjustment.
  - Press the WIN key in the upper right corner to adapt to the Windows system
  - Press the OS button in the upper right corner to adapt to the OS/iOS system
- Full-size card slot (stand) design: Easily place mobile devices such as mobile phones or tablets in the full-size card slot on the top, and maintain a suitable angle for you to read while typing.

### SOLUTION TO CONNECTION FAILURES

#### Keyboard

- Take out the batteries from the keyboard and receiver from the computer.
- Reinstall batteries into the keyboard. And plug the receiver into the USB port of the computer.
- Turn on the power switch of the keyboard, which should be within 20 cm away from the receiver. Press and hold "ESC" and "K" keys together for 3-5 seconds to pair again.

### What if the keyboard response is lagging and works abnormally, how to solve it?

- The battery may be low, please replace the battery for the keyboard
- It may be caused by the computer being stuck, please restart the computer and try again.
- The maximum use distance of this product is 10M, please keep it within 10M. And avoid metal obstacles between the keyboard and the receiver.

#### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

### CORRECT DISPOSAL OF THIS PRODUCT



( Waste Electrical & Electronic Equipment )  
This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.