

CL-WP18 Wireless

Landline User's

1 Welcome

Thank you for purchasing the **CL-WP18**. Your **CL-WP18** is packaged with the following state of the art features:

- Single SIM (WCDMA /GSM)
- English/Spanish Support
- Quick dialing

Important:

1. Please read the contents of this manual to fully utilize the features of this phone.
2. Please read the Guidelines section provided with this Reference guide.

Warning words:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

User Guide

Table of Contents

1 Welcome	2
2 Know Your Phone.....	6
2.1 Insert SIM Card	6
3 Basic Operations.....	6
3.1 Switch Phone ON/OFF	6
3.2 Unlock the phone	6
3.3 Make a call	6
3.4 Choose User Profiles.....	7
4 Notable Features	7
Secure your Phone.....	7
5 Contacts	8
5.1New	8
5.2Delete multiple	8
5.3Others	8
6 Messages.....	9
6.1Write message	9
6.2 Inbox	9
6.3 Outbox	9
6.4Drafts	9
6.5 sentbox	9
6.6Templates	9
6.7 Options	10

User Guide

7 Call logs	10
7.1 Missed calls.....	10
Menu>call logs>missed calls.....	10
7.2 Dialed calls.....	10
7.3 Received calls.....	10
7.4 Delete all.....	11
7.5 Call timers.....	11
8 Call settings	11
9 Calendar	11
Calendar	11
Menu >tools> Calendar	11
10 Settings	11
10.1 Phone settings	11
10.2Display	12
10.3Security.....	12
10.4 Profiles	12
10.6Calculator.....	12
10.8 Lock O.....	12
11 Taking Care of Your Device	13

2 Know Your Phone

2.1 Insert SIM Card

The **device** is a Single SIM mobile phone

Turn off your mobile phone

1. Insert the SIM card correctly in the SIM slot(s).
2. Finally, replace the rear cover of the mobile phone.

3 Basic Operations

3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **End key** for a few seconds.

3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

Press **Left** key, and then press # key.

3.3 Make a call

You can make a call in the following ways:

User Guide

Enter the desired number in standby mode and press the **Call key** to make the call.

Go to **Menu > Contacts** and then select and dial the desired number.

Just press the **Call key** to dial the contacts listed in Call logs.

You can also dial a contact from the messages.

3.4 Choose User Profiles

Menu>Settings>Profiles

You can choose your profile and setting ring,volume.

4 Notable Features

Secure your Phone

Menu > Settings > Security > Phone Locked

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is **1122**.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

5 Contacts

Your Contacts stores all your saved contacts for anytime use. Your Contacts data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

Menu > Contacts

5.1New

Menu > Contacts> options > New

5.2Delete multiple

Menu > Contacts >options > Delete multiple

In the Contacts list, select the entry you want to delete.

5.3Others

Own number

Memory status

Menu > Contacts > options> Memory status

6 Messages

6.1 Write message

Menu > Messages > Write message > New SMS

You can compose and send SMS . Pressing the **Left Key** during/after composing the message gives you a host of messaging features.

6.2 Inbox

Menu > Messages >Inbox: Display received SMS

6.3 Outbox

Menu > Messages >outbox: Display sent out SMS

6.4 Drafts

Menu > Messages >drafts: Display save edit SMS

6.5 sentbox

Menu > Messages >sentbox: Save the information that has been sent

6.6 Templates

Menu > Messages > Templates

User Guide

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

6.7 Options

You can select SMS settings or message capacity

7 Call logs

Menu > Call logs

Tip: Directly access the call History of by pressing the Call key in idle mode.

The Call History lists the most recent calls you made, received, and missed

7.1 Missed calls

Menu>call logs>missed calls

7.2 Dialed calls

Menu>call logs>Dialed calls

7.3 Received calls

Menu>call logs> Received calls

7.4 Delete all

Menu>call logs> Delete all

7.5 Call timers

Menu>call logs> Call timers

8 Call settings

Call settings

Menu>settings>call settings: You can operate Memry key/Call divert/Call waiting/Call barring/Hide ID/Others

Others: You can operate IP prefix; call time minute reminder; auto redial; reply SMS after reject ; any-key answer.

9 Calendar

Calendar

Menu >tools> Calendar

10 Settings

10.1 Phone settings

Menu>settings>phone settings: You can set date & time; language

User Guide

settings; shortcut settings; auto power on/off; restore factory settings.

10.2 Display

Menu>settings>display: You can settings backlight; contrast;

10.3 Security

Menu>settings>security: You can settings PIN; modify PIN2; phone locked; modify the phone password; privacy; Auto keypad lock ; fixed dialing;

10.4 Profiles

Menu> profiles: You can settings effect

10.5 Speech settings

You can set key ring or incoming call ring.

10.6 Calculator

Menu >**settings**>calculator

10.7 Alarm

Entering alarm, choose Alarm, set time/Ringtone/Repeat mode

10.8 Lock 0

When you activate , enter the number with 0 will not dial out

11 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

User Guide

- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. **CL-WP18** will not be held responsible for user's safety when using unapproved accessories or supplies.

Recycle Your Handset

The WEEE logo (shown at the left) appears on battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of such hazardous waste.



User Guide

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

Disclaimers

1 The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

2 CL-WP18 keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of **CL-WP18** is strictly prohibited.

User Guide

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- This Product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Device Fixed Wireless Phone (FCC ID: 2A3KM-CL-WP18) has been tested against this SAR limit. SAR information on this can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, 10mm separation distance should be maintained to the user's bodies

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2A3KM-CL-WP18