

FREEDOTS.

使用说明书


User Guide

CATALOG

WHAT'S IN THE BOX	17
PRODUCT PARAMETER	18
PRODUCT CONNECTIONS	
Connect a new device	19
Reconnect a device	20
Clear pairing	20
POWER ON & POWER OFF	21
PRODUCT TOUCH CONTROL	22
BATTERY	
Charge the earbuds	23
Charge the charging case	24
Battery status light	25
HOW TO WEAR	
Check your fit	26
Replace ear-hooks	27
CARE AND MAINTENANCE	28
APPLICATION SUPPORTS	29

WHAT'S IN THE BOX

Confirm that the following parts are included:

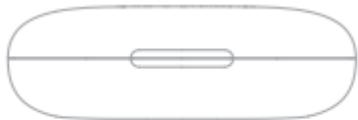

Charging case



FREEDOTS true wireless
opendevice™ earbuds



USB-C to USB-A cable

NOTE: If any part of the product is damaged, don't use it. Contact your authorized FREEDOTS dealer or FREEDOTS customer service.

PRODUCT PARAMETERS

Product name:	TRUE WIRELESS OPEN VOICE EARBUDS
Brand:	FREEDOTS
Model:	FREEDOTS REVO C1/S1
Earbud type:	Ture wireless openvoice earbuds
Earbud Dimensions:	40*47mm
Product Weight:	Earbud Weight:10g Charging case:70.6g
Ear-hook Hardness:	60HB
Earbud Battery Capacity:	63mA
Case Battery Capacity:	600mA
Earbuds Charging Time:	Earbuds:50min* Charging case:1.5h*
Audio Format:	ACC/SBC
* Earbuds Fully Charged	4 +20hours
Speaker Impedance:	16Ω
Bluetooth Range:	10m
Bluetooth:	Bluetooth 5.1
Bluetooth Protocols:	HFP/A2DP/AVRCP
Input:	5V/500mA
WorkingTemperature:	0°C-45°C
Frequency Range:	2.400GHz~2.4835GHz


Above data is from FREEDOTS lab

The playtime is tested under the laboratorial condition with AAC format at 50% volume which may vary according to factors like device settings, environmental or use habits.

PRODUCT CONNECTIONS

Connect a new mobile device

- 1.Tear off protective film before your first use. Keep the earbuds inside of the charging case. Press and hold the pairing button until indicator light blinks white.
- 2.Release the pairing button. Turn on bluetooth on your device and connect to FreeDots Revo C1/S1
- 3.Take the earbuds out from the charging case. Put them on according to the guide below.

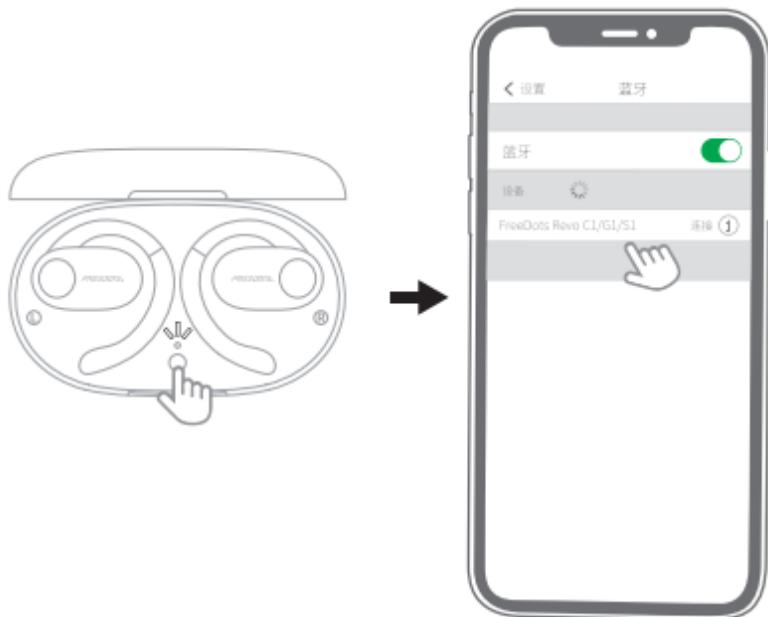

PRODUCT CONNECTIONS

Reconnect a device

FREEDOTS earbuds remember the previously paired device. When you try to reconnect them, all you need to do is turn on bluetooth on the device and take out both right and left earbuds at the same time. the Earbuds will connect automatically. If they do not connect automatically, please select the pairing name in the bluetooth list of the device to connect manually.

Clear pairing

- 1.Put the earbuds into the charging case. Press and hold case button for 3 seconds
- 2.The white light will stay on during the clearing process. After resetting, the earbuds enter automatically into pairing mode with the white light blinking.

Power on and Power off

Power on:


1. Earbuds power on when you open charging case .



Power off:

1. Earbuds turn off and begin charging when you put back them into the charging case.
2. The Earbuds will automatically shutdown if earbuds are NOT connected for 30 minutes.
3. The Earbuds will automatically shutdown if bluetooth is NOT connected for 30 minutes.
4. Earbuds enter low power mode if they are NOT connected for 5 minutes. During this session, the earbuds can be connected to previously connected devices. But they can NOT be connected to new devices. If you need to connect to new devices, please put the earbuds back in the charging case. Then press the button inside of charging case key for 3 seconds.
5. Choose the charging case , and earbuds will shutdown when earbuds in the charging case

Product Touch Control

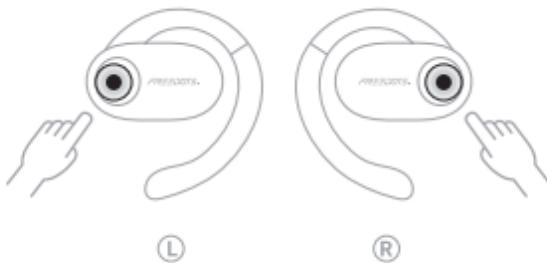

Gesture	Left Earbud	Right Earbud
● Touch	Play/Pause	Play/Pause
● ● Touch Twice	Last Play	Next Play
● Touch and Hold	Voice Assistant	Switch Mode

Battery

Charge the earbuds:

1. Place and adapt charging pins of earbuds to pins of charging case.



2. Place earbuds to magnetic location of charging case. And indicator light turns red while charging.




Battery

Charge the charging case:


Indicator light turns red when battery is low. Please charge the charging case:

1. Connect charging port via Type-C adapter to charge it.
2. Charge every three months if you do NOT use it in a long term.

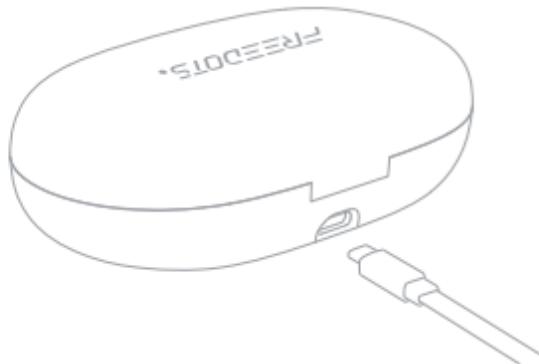

Battery

Status light:

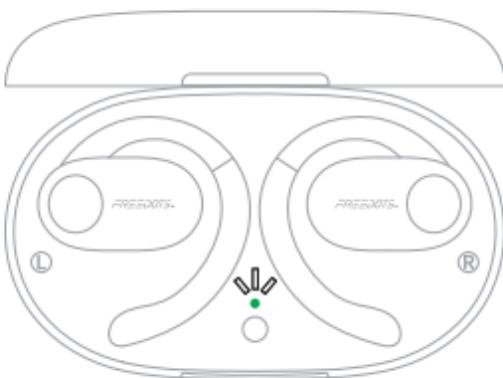

	● Green light	● Red light
Charging case connects external power supply & Earbuds are in the case	100% Charged for charging case and earbuds	<p>There are 3 possibilities when indicator light turns red under this condition:</p> <ol style="list-style-type: none">1. 100% Charged for charging case. Earbuds are NOT fully charged.2. 100% Charged for earbuds. Charging case is NOT fully charged.3. Neither charging case nor earbuds are 100% charged.
Charging case connects external power supply & Earbuds are NOT in the case	100% Charged for charging case	Charging case is NOT fully charged
Charging case does NOT connect external power & Earbuds are in the case	100% Charged for earbuds	Earbuds are NOT fully charged
Charging case does NOT connect external power & Earbuds are NOT in the case	Battery is above 40% for charging case	Battery is below 40% for charging case

Note: Open charging case, Status light will display for 30s. After the light off, Press the charging case button to view it again.


HOW TO WEAR

Check your fit

1. Take earbuds out from charging case.




2. Turn on the earbuds. Adjust the angle between earbud and ear-hook to maximum

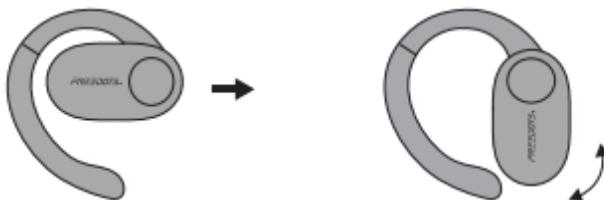


HOW TO WEAR

3.Put on earbuds. Rotate them to fit your back of ears comfortably.

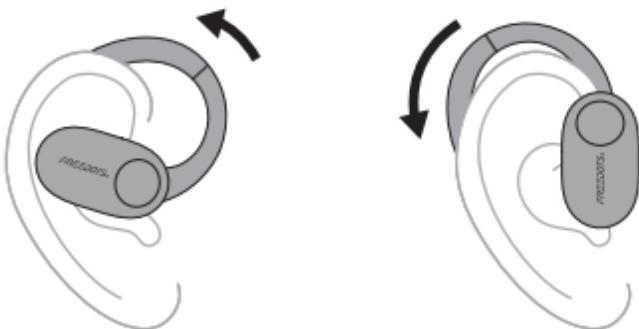


4.Adjust position of the sound outlet to a comfortable range

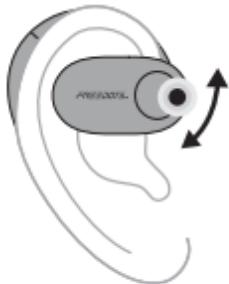

REPLACE EAR-HOOKS

1. Pull out ear-hooks

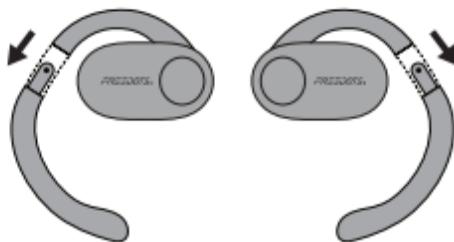

2. Align and install alternate ear-hooks with socket accordingly.



CARE AND MAINTENANCE

Clean the earbuds and charging case regularly

COMPONENT	PROCEDURE
Sport ear-hook	Remove the tips from the earbuds and wash them with a mild detergent and water. NOTE: Make sure you thoroughly rinse and dry the tips before re-attaching them to the earbuds.
Earbud nozzles	Wipe only with a dry, soft cotton swab or equivalent. CAUTION: Never insert any cleaning tool into the nozzle.
Charging contacts (on earbuds) and charging pins (in charging case)	To prevent rusting, wipe with a dry, soft cotton swab or equivalent.
Charging case	Wipe only with a dry, soft cotton swab or equivalent.

APPLICATION SUPPORTS



FREEDOTS



Download the FREEDOTS app to
easily connect your mobile device.



Download on the
App Store



GET IT ON
Google Play

WWW.FREEDOTS.COM



更多产品动态敬请浏览
官网及各大社交媒体平台

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment