


设计版本号	产品名称 Product name	比例 scale	日期 Date	设计师 Designer	审核 Audit
Rev_V0_EN	DR-HCF004S_美规说明书	1: 1	20241112	Beryl	Matias
Hesung innovation 和生创新	材质印刷与技术要求	尺寸:210x285mm 材质:封面封底80g书纸 内页:80g书纸 印刷要求:双面印刷,文字线图清晰 装订方式:骑马钉装订	字体 Fonts	Manrope	尺寸 Size 210mm × 285mm 3mm 出血

*此页删除不做印刷

图纸设计禁止修改, 尺寸刀模图为准

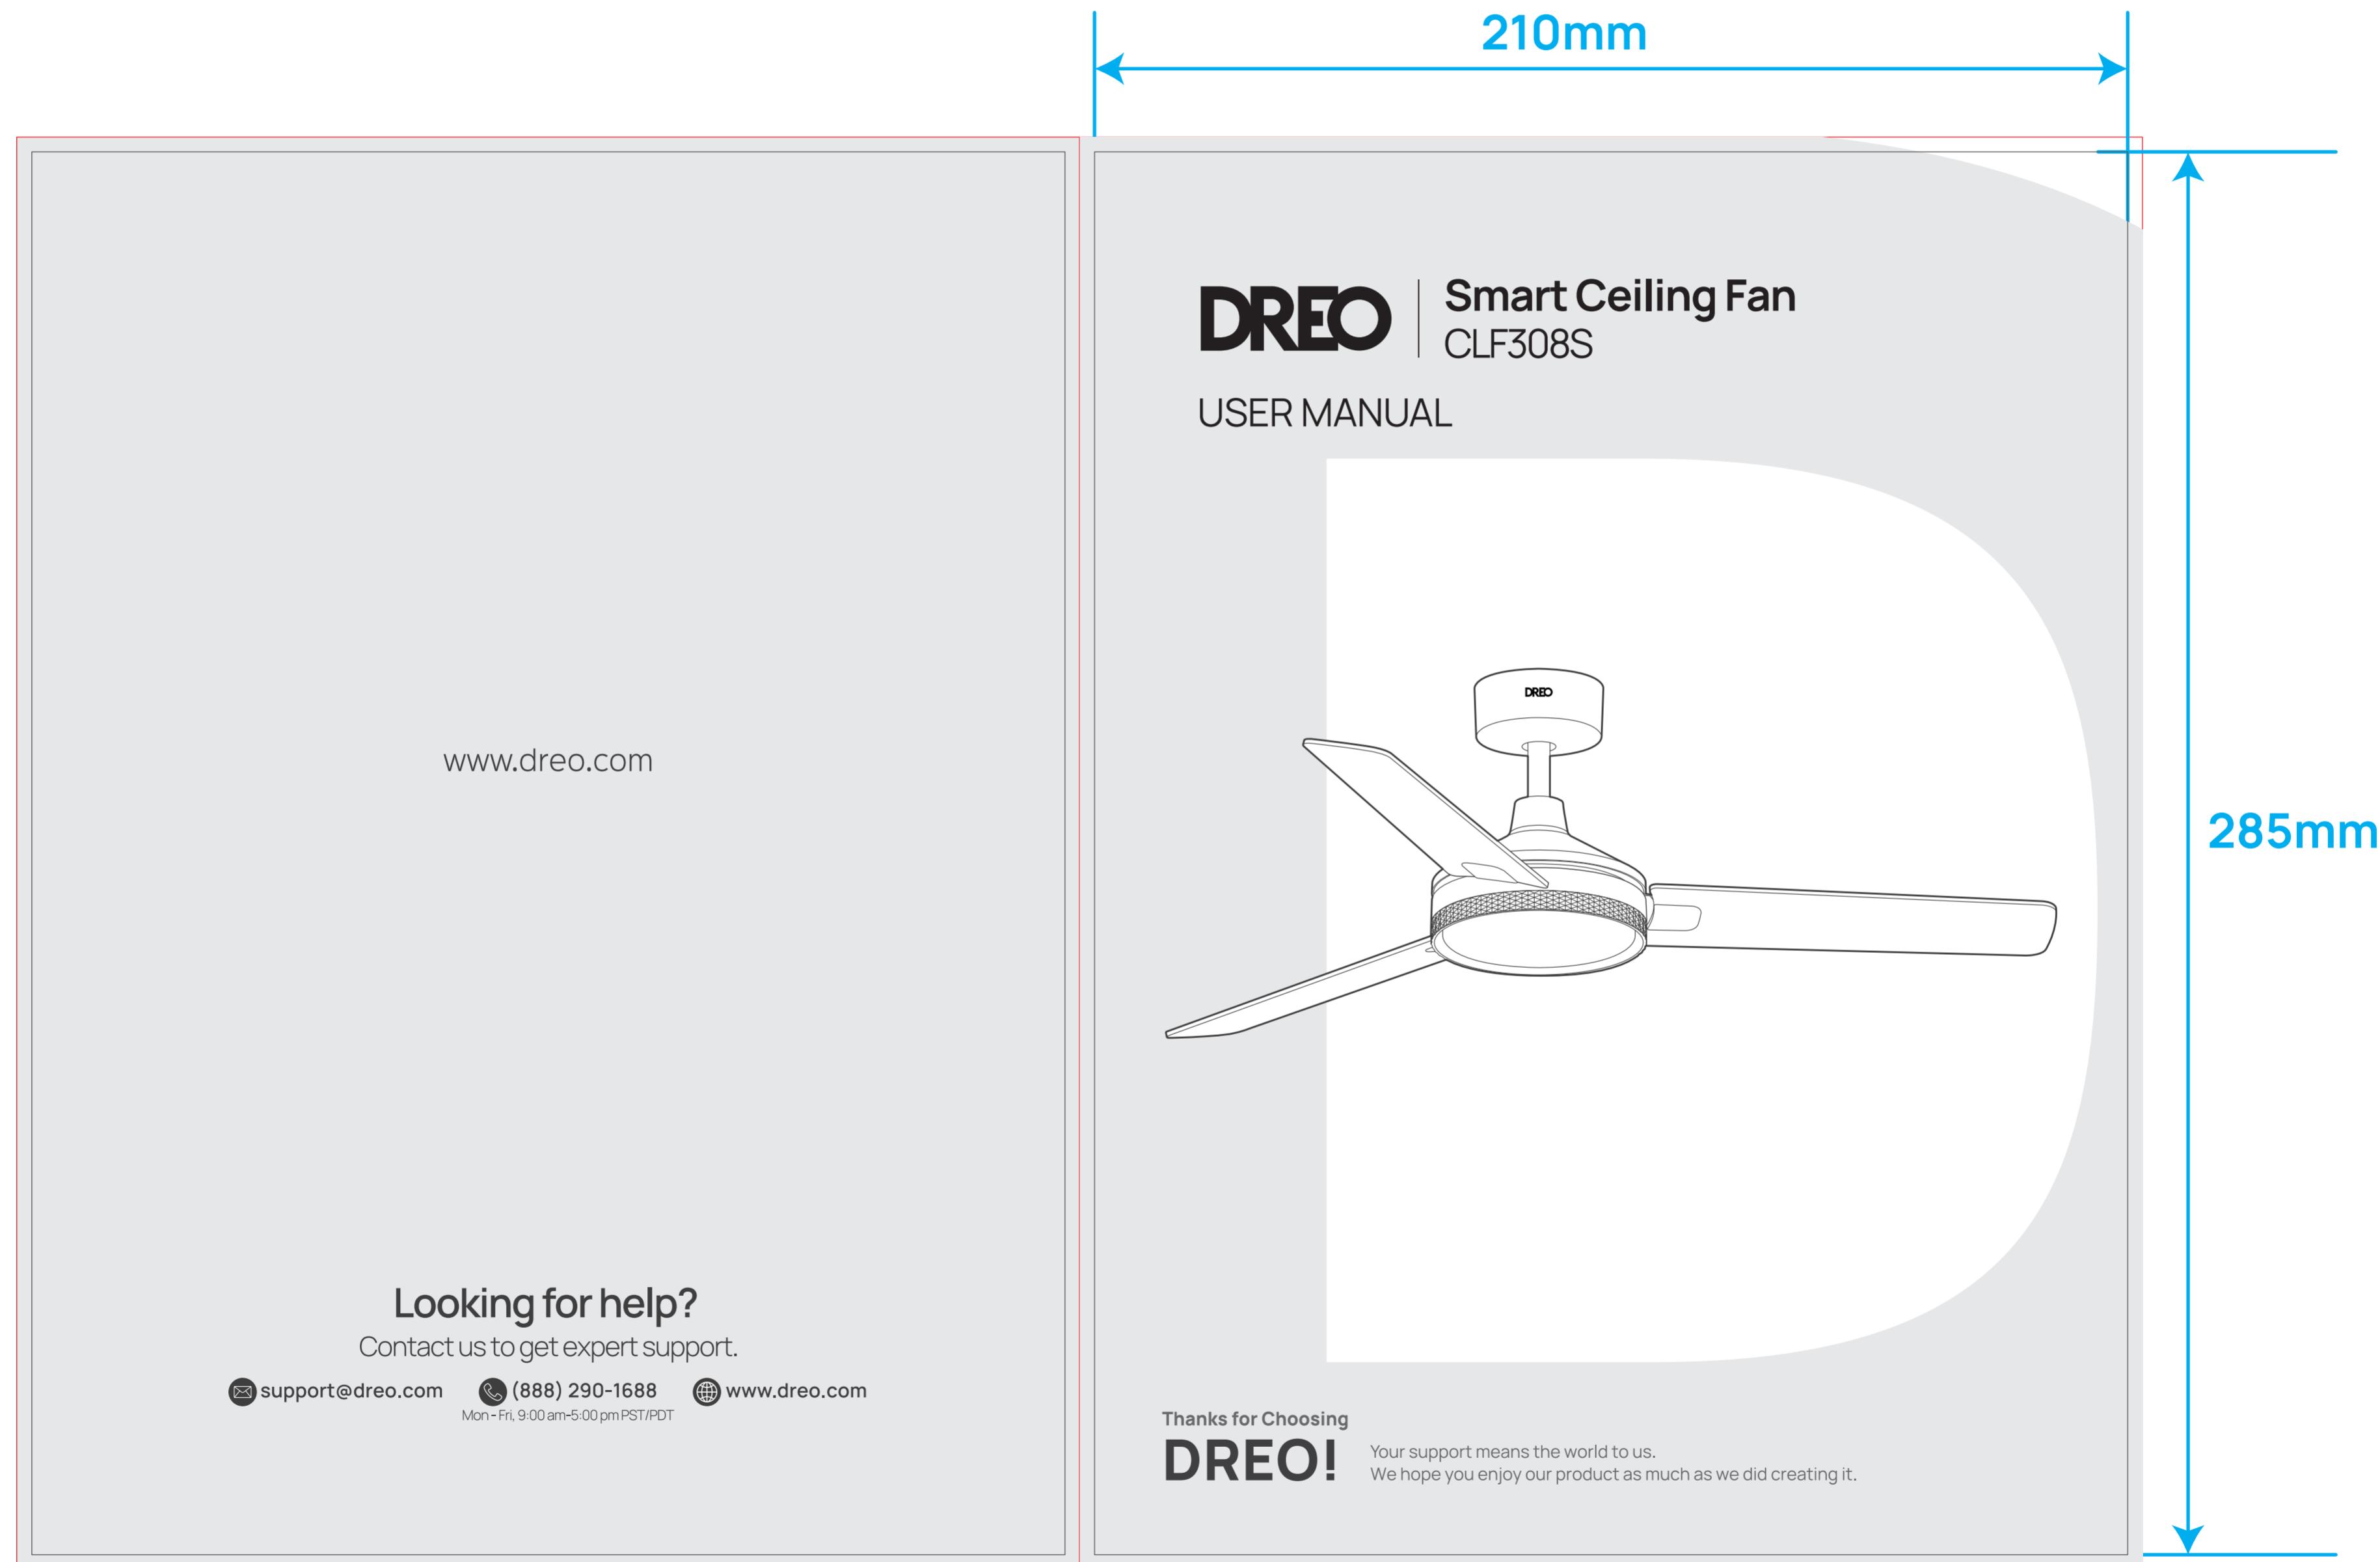

裁切线
正折线
反折线
出血位
粘胶区域

图层使用规范:

1、备注信息图层为非印刷区域, 展示印刷物料基础信息。
2、刀板线、备注工艺、尺寸层展示印刷工艺部分。
3、画面信息层展示印刷展示图片与文字。

*电子文档为Adobe Illustrator制作

文件格式: model规格类目日期.AI (为可编辑原始文档)
文件格式: model规格类目日期.pdf (为文件转曲不可编辑文档)


审稿
检查事项
会签以“√”形式确认
(负责部/项目确认)
审稿检查事项
商标规范
字符高度
工艺材质
颜色标识
产品文案
条码检查
厂址
全成分
警告标语
执行标准
产品尺寸
外/内箱尺寸
OEM信息*
产品包装信息
请相关部门确认产品
包装等信息!
*OEM信息:
委托方及被委托方
信息(名称、地址、
邮编、电话、生产
许可证、卫生许可
证)

设计师 审核 产品负责人 法规 采购

DREO

Smart Ceiling Fan
CLF308S

USER MANUAL

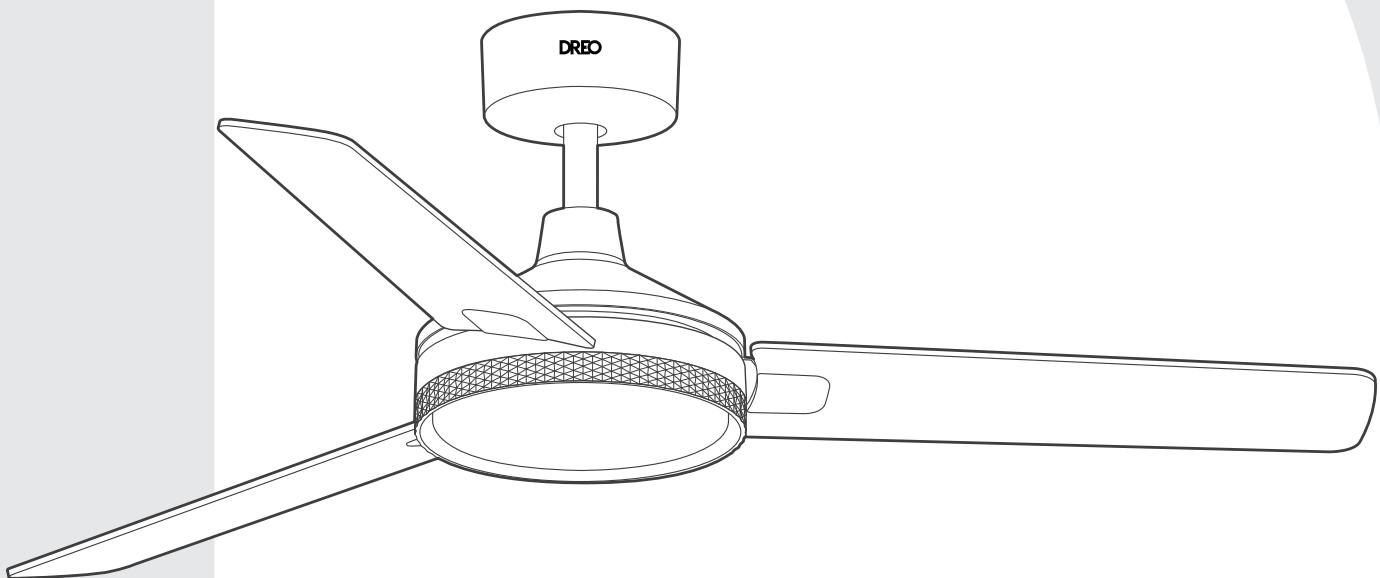

Thanks for Choosing

DREO!

Your support means the world to us.
We hope you enjoy our product as much as we did creating it.

EXTEND YOUR WARRANTY FOR FREE

Scan or visit dreo.com/warranty

To extend your warranty for free by registering your product. If you have any product issues, we always stand ready to help.



support@dreo.com



www.dreo.com



(888) 290-1688

Mon - Fri, 9:00 am-5:00 pm PST/PDT

CONTENTS

01 IMPORTANT SAFETY INSTRUCTIONS	1
02 PACKAGE CONTENTS	2
03 BEFORE INSTALLATION	3
04 ASSEMBLING THE CEILING BRACKET	4
05 ASSEMBLING THE BLADES	5
06 ASSEMBLING THE DOWNROD	6-7
07 HANGING YOUR CEILING FAN	8-9
08 ASSEMBLING THE LIGHT KIT	10
09 USING YOUR CEILING FAN	11-14
10 CONNECTING YOUR CEILING FAN	15
11 CLEANING AND MAINTENANCE	16
12 TROUBLESHOOTING	17
13 DREO CUSTOMER CARE	18

IMPORTANT SAFETY INSTRUCTIONS

01

READ AND SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

- 1. WARNING:** To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount Directly To A Structural Framing Member Or To An Outlet Box Marked Acceptable for Fan Support of 15.9 kg (35 lbs). For Outlet Box Mounting, Use Mounting Screws Provided With The Outlet Box.
- To avoid possible electrical shock, before installing or servicing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- To reduce the risk of electric shock, this fan must be installed with an isolating wall control/switch.
- WARNING:** To reduce the risk of personal injury, do not bend the blade brackets when installing the blade brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
- Chemical burn hazard. Keep batteries away from children. This remote contains a lithium button cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
- Non-rechargeable batteries are not to be recharged. Exhausted batteries are to be removed from the product.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. It is recommended that children be supervised to ensure that they are not using the appliance improperly.
- WARNING:** To reduce the risk of fire or electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
- Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.
- Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
- Make sure all electrical connections comply with local law and the national electrical code. Please hire a qualified electrician or consult a do-it -yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- Make sure the installation site is roomy enough to allow fan blades to rotate. There is at least seven feet from the floor to fan blades' tips.
- If you are mounting the fan on a ceiling outlet box, please use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the rotating fan (at least 35 lbs). Do not use a plastic outlet box. Attach the mounting bracket using the ceiling outlet box's hardware.
- After installing the fan, make sure all the connections are secured so that the fan won't fall.
- Do not insert anything between fan blades while the fan is operating.
- Turn the fan off and wait for it to stop before reversing fan's rotating direction.
- WARNING:** To reduce the risk of electrical shock and personal injury, do not install the fan on a sloped ceiling and do not use this fan with any solid-state fan speed control device, or rheostat. You must install the outlet box using the two steel screws and lock washers coming with the fan.
- All wiring must be in accordance with national and local electrical codes ANSI/NFPA 70. If you are unfamiliar with wiring, use a qualified electrician.
- After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
- The splices after being made should be turned upward and pushed carefully up into the outlet box.
- Instructions for supply connections: the white conductor of a fan identified as grounded conductor to be connected to a grounded conductor of power supply, the black conductor of fan identified as ungrounded conductor to be connected to an ungrounded conductor of power supply, the green conductor of fan identified for equipment grounding to be connected to an equipment-grounding conductor.
- The total weight of the fan install to outlet box is 6.9 kg, check that the outlet box is securely installed in place such that it is able to support at least the fan weight.
- When mounted directly to the building structure, appliance installation shall not expose combustible material and do not install the appliance to a ceiling with combustible finish. The installation of the appliance cannot leave the wood of the rafters or any thermal insulation exposed to the interior of the room.
- To Reduce The Risk Of Electric Shock, Disconnect The Electrical Supply Circuit To The Fan Before Installing Light Kit.

Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Components or parts are damaged.
- Loud noise or unusual smell.

Specifications


Model No.	DR-HCF004S DR-HCF005S
Power Supply	120V 60HZ
Rated Power	
Remote Control Battery	CR2025 3V



PACKAGE CONTENTS

02

To ensure a successful installation, first SCAN the QR code to watch the installation video

  If you need help, we also provide support at 1.888.290.1688 or visit us at www.dreo.com.

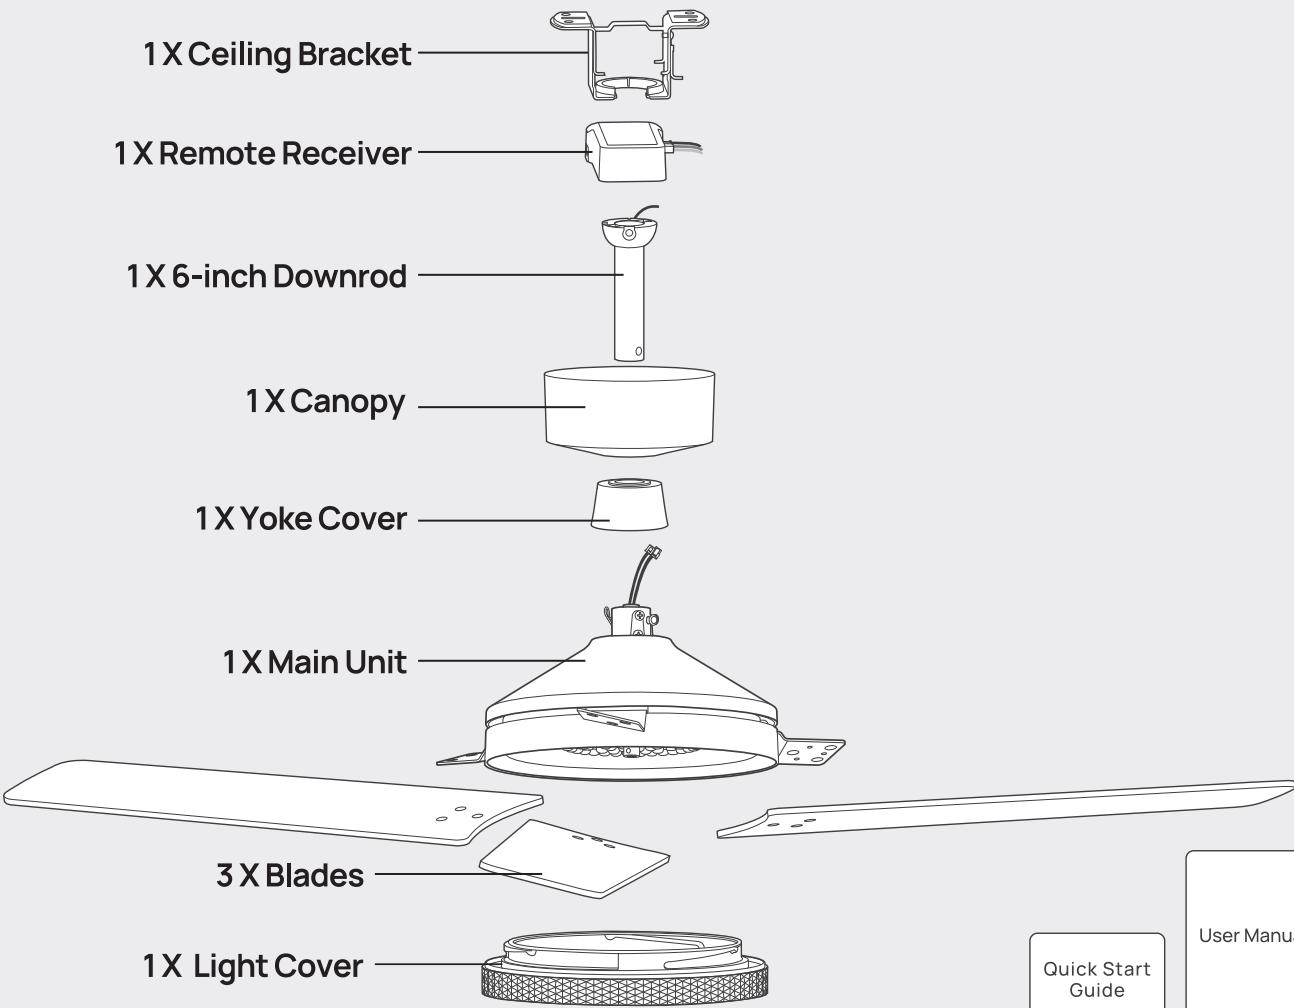


① Parts for Ceiling Bracket	② Parts for Blades	③ Parts for Remote Control Holder
 Wood Screws X2  Washer X2  Wire Connector Cap X 4+1(extra)	 Screw X 11  Blade arm covers X 3  Balancing Weight X2  Balancing Clip X1	 3M 3M Glue X 1  Wall-mounted Screw X 2  Remote Control (Battery Included)  Remote Control Holder  Remote Receiver X 1

BEFORE INSTALLATION

03

TOOLS NEEDED (NOT INCLUDED)

Essential Tools for a Successful Installation:

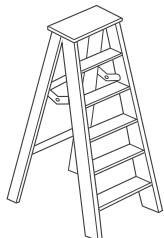

Ladder




Phillips Screwdriver



Wire Stripper

Optional Tools:

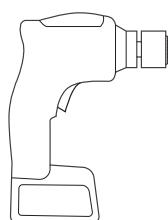


Drill




9/64" Drill Bit

⚠️ WARNING: Check the wall switch control

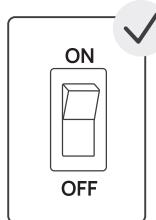

Ensure your wall switch is a conventional one that can control the fan and light on/off.

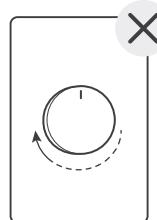


Do not connect it to a dimmer or the fan's gear switch.



⚠️ WARNING: Check the room dimensions


30 inches
from blade tip to nearest wall or obstruction

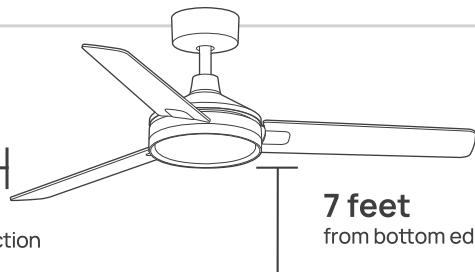

7 feet
from bottom edge of blade to the floor

⚠️ WARNING: Check the room ceiling angle:

15°

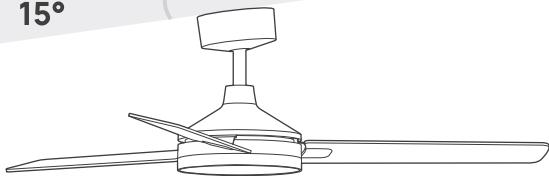

Make sure your room ceiling angle is less than 15°



It is recommended to have a partner when installing the ceiling fan.



ASSEMBLING THE CEILING BRACKET

04



⚠️ WARNING:

To avoid possible electrical shock, before installing your ceiling fan, disconnect the power by turning off the circuit breakers to the outlet box associated with the wall switch location.

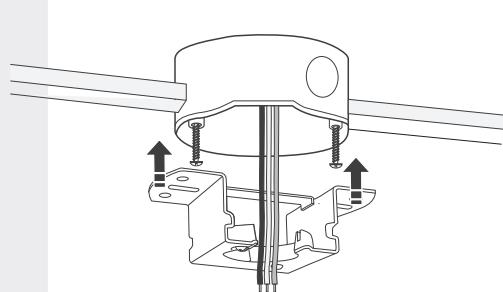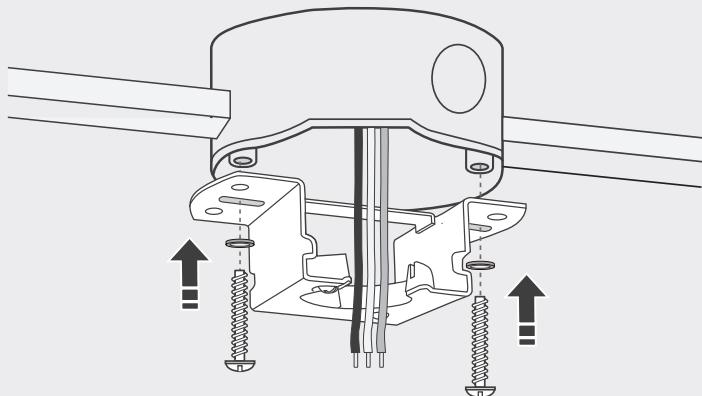


Note: Machine screws are **not** included in the shipped package, they are typically provided with your outlet box.

Option 1:

Use machine screws (provided with outlet box) when:

Securing to existing ceiling fan-rated outlet box.

Make sure it is securely installed and is acceptable for fan support of 15.9 kg (35 lbs) or less.

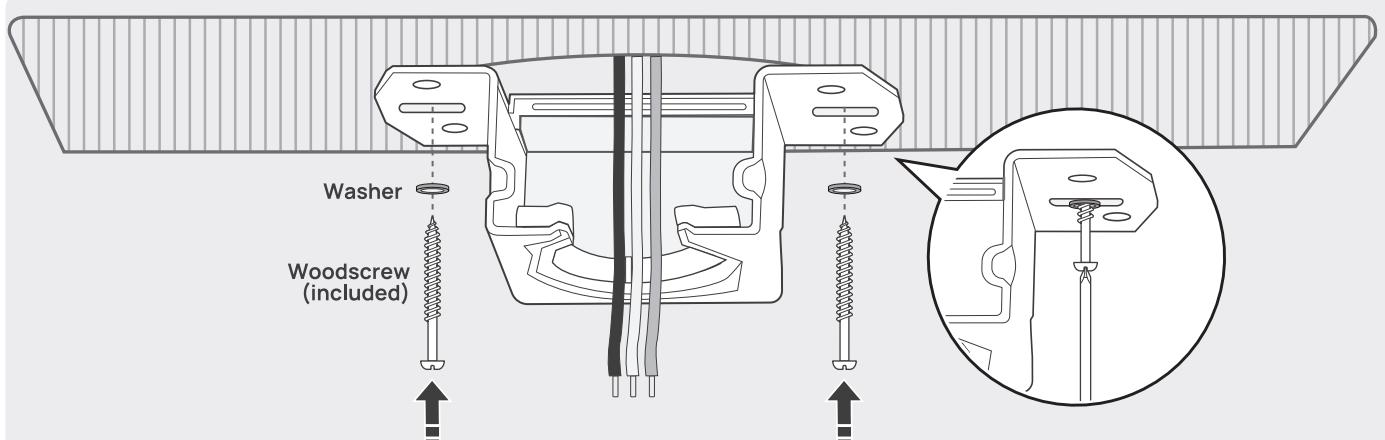

Option 2 :

Use wood screws and washers when:

Securing to support structure with apporved electrical outlet box.

Drill 9/64" pilot holes in Support Structure to aid in securing ceiling bracket.

Ceiling Bracket

Blades

Downrod

Hanging the Ceiling Fan

Light Kit

 
ASSEMBLING THE BLADES

05

1




Or



You have the freedom to select either the front or back side according to your preference.


Note: For better performance, utilize the fan blades consistently, whether using the front or reverse side.

2

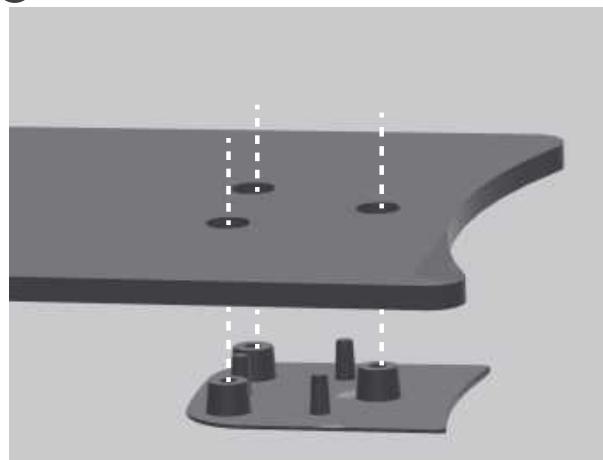


Attach the blade arm cover to the blade.

3

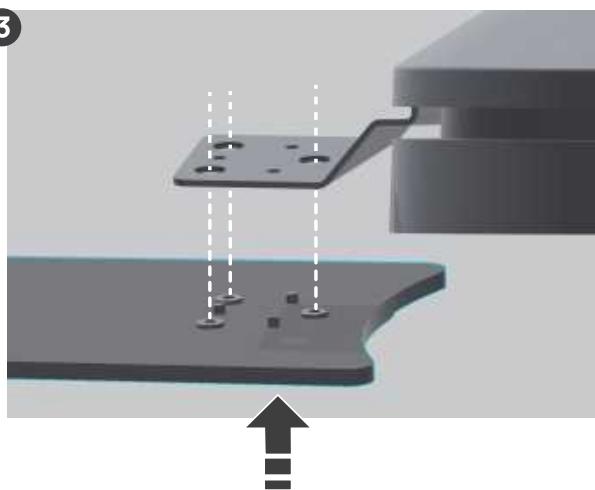

Bring the blade with the attached cover to the blade arm leaving the screw holes facing the blade arm.

4

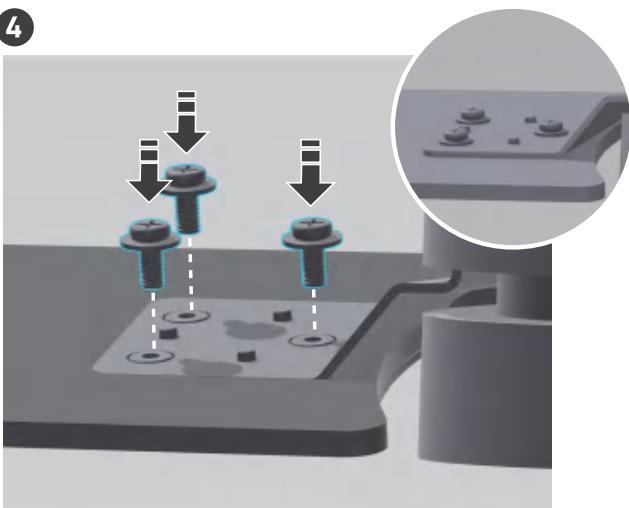

Insert the screws into the blade holes. Use a screwdriver to securely tighten them.

5



Follow the above three steps to complete the assembly of the remaining two blades.

NOTE: Follow the instructions on the blade carefully. Incorrect installation could result in the fan not functioning properly.

Ceiling Bracket

Blades

Downrod

Hanging the Ceiling Fan

Light Kit

ASSEMBLING THE DOWNROD

06




! WARNING: FAN FALL HAZARD

To prevent SERIOUS INJURY or DEATH:


- ALWAYS tighten setscrew with screwdrivers.
- DO NOT hand tighten setscrew.
- CHECK the setscrew is tight using screwdrivers each time you change fan direction.

1

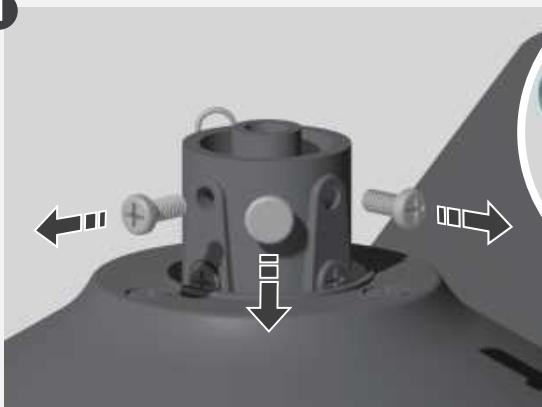

Remove the pre-installed setscrews and downrod pin.



2

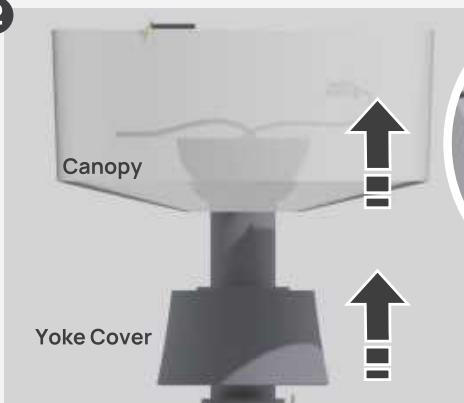

Insert the canopy and then the yoke cover to the downrod.

Pass all the wires to one side of the horizontal bar in the downrod to prevent excessive wire tangling.

3

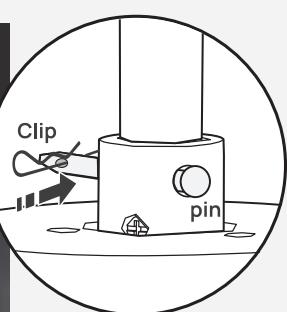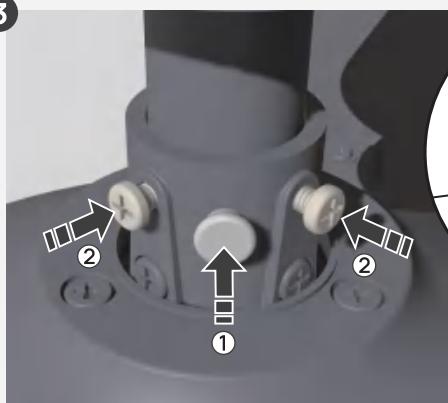

Carefully slide the downrod into the yoke of the motor assembly.

Align the holes in the downrod.

Carefully re-install the downrod pin and clip.

Ceiling Bracket


Blades

Downrod

Hanging the Ceiling Fan

Light Kit

4

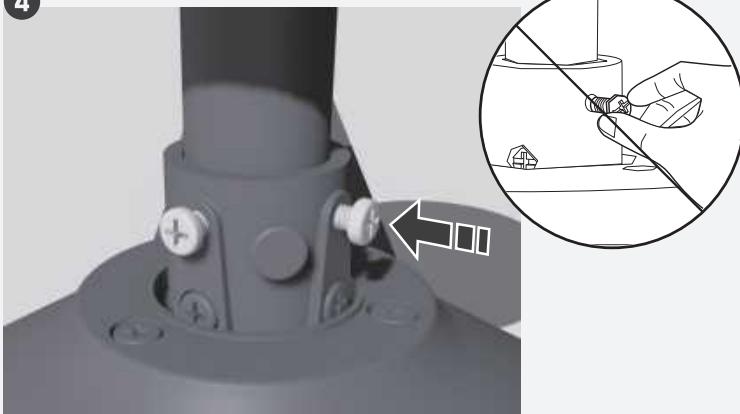

Tighten the setscrew with a screwdriver.

5



Put down the yoke cover.

Note: Please lift the canopy and yoke cover to avoid interference with your installation when you are tightening setscrew.

Ceiling Bracket

Blades

Downrod


Hanging the Ceiling Fan

Light Kit

HANGING YOUR CEILING FAN

07

1

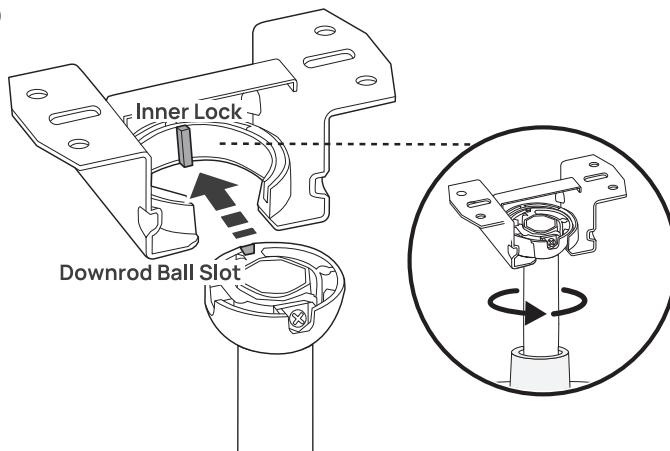


Place the downrod ball into the ceiling bracket.

Make sure the downrod ball slot matches the inner lock.

Rotate the downrod until it's secured.

2

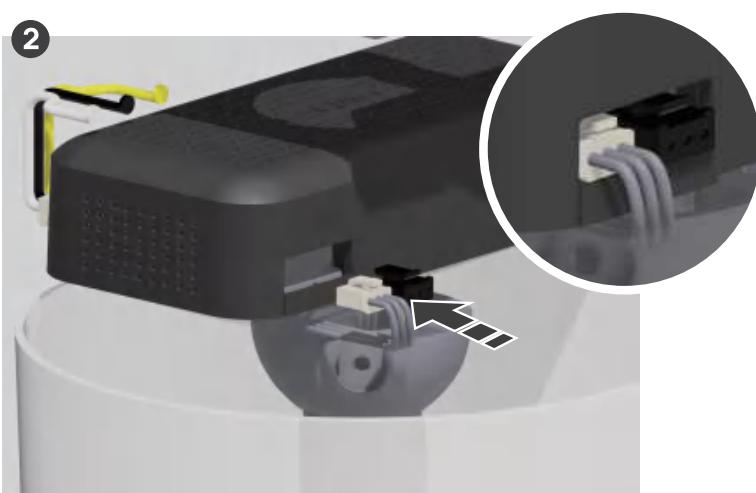

Connect the remote receiver to the main unit by matching corresponding plug colors.



Install the remote receiver on the space in between the ceiling bracket anchors.

Ceiling Bracket


Blades

Downrod

Hanging the Ceiling Fan


Light Kit

4

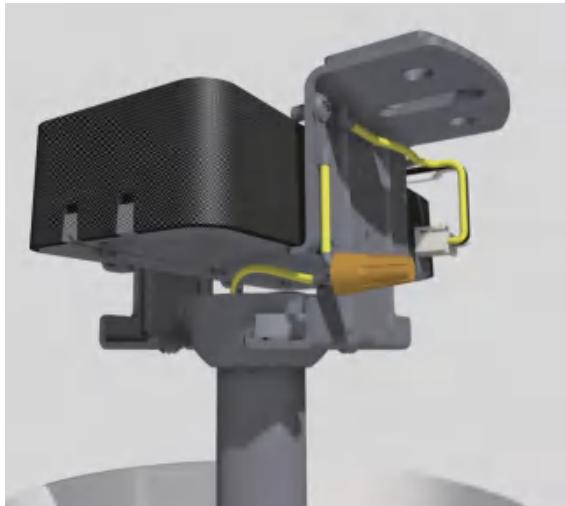


Connect the grounding wire from the downrod (green/yellow stripe, or bare copper) with the grounding wire coming from the ceiling bracket.

5

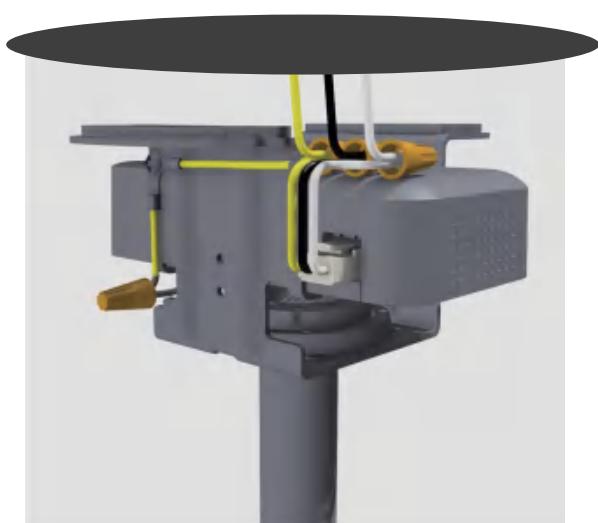

1. Connect the white (grounded) wire from the ceiling to the white wire from the remote receiver.
2. Connect the black (ungrounded) wire from the ceiling to the black wire from the remote receiver.
3. Connect the grounding wire (green/yellow/strip, or bare copper) coming from the ceiling with the one from the downrod, and the one from hanging bracket.

6

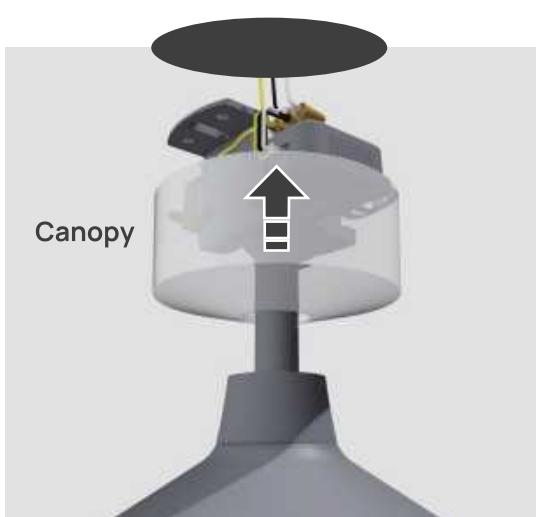

Rotate the canopy clockwise (from your bottom view) to securely fasten it to the ceiling bracket (You will hear a “click”).

Note: Please check if the ceiling fan has been properly installed before use.

Ceiling Bracket

Blades

Downrod

Hanging the Ceiling Fan

Light Kit

ASSEMBLING THE LIGHT KIT

08



Rotate the light kit clockwise to securely fasten it into place.

Ceiling Bracket

Blades

Downrod

Hanging the Ceiling Fan


Light Kit



Congratulations!
You are ready to use your ceiling fan

USING YOUR CEILING FAN

09

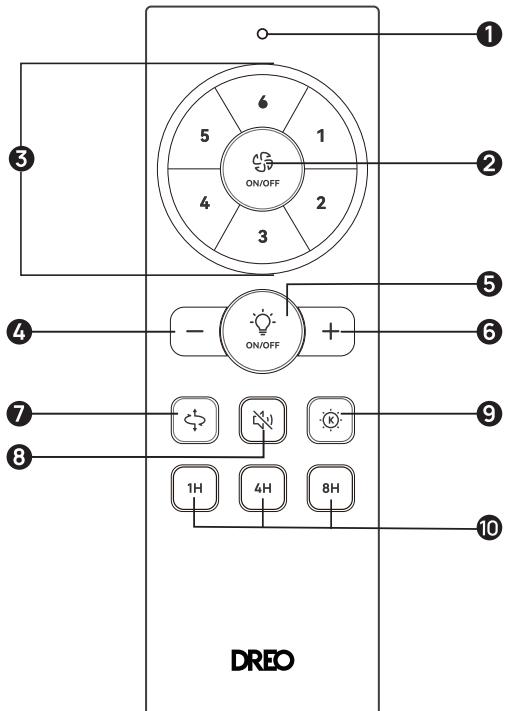

- ① Command Indicator
- ② Fan Power Button (On/Off)
- ③ Fan Speed Settings (1 to 6)
- ④ Decrease Brightness Button
- ⑤ Light Power Button (On/Off)
- ⑥ Increase Brightness Button
- ⑦ Airflow Direction Button
- ⑧ Mute Button
- ⑨ Light Temperature Button
- ⑩ Quick Timer Settings(1H - 4H - 8H)
- ⑤ + ⑨
WiFi Connection/Disconnection
(Long press 3 Seconds)
Touch 8H repeatedly 5 times to restore factory settings.


Note:
When the remote control battery is low, the command indicator light will flash for a few seconds.

Remote Control Pairing

The remote control that shipped with your fan is already paired.

Note: When pairing a new remote control, you MUST disconnect power (at the wall switch, breaker, or fan from other ceiling fans within range) to prevent faulty operation.


Pairing a new remote control to an existing fan

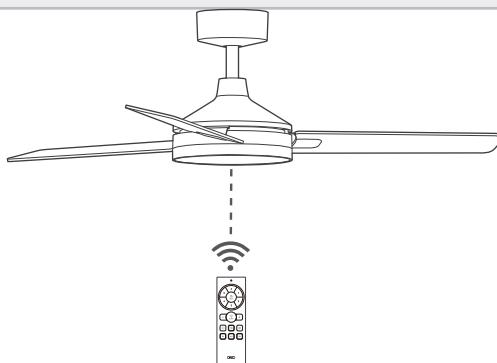

If you lose your remote control or purchase a new one, please follow the steps below to pair the control to your ceiling fan.

- Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within three minutes, long press the Light Power Button and the Fan Power Button on your remote for 3 seconds to pair it.
- If applicable, the fan will turn on and the lights will flash and stay on for three seconds, along with a continuous beep to indicate successful pairing.


Installing one fan operating on multiple remote controls

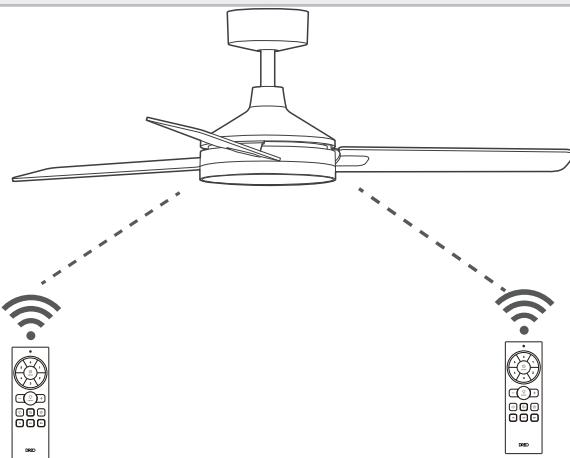

To have multiple remote controls operate one fan, you must pair each additional control to the receiver in the fan. The remote control that shipped with your fan is already paired.

- For each additional control, power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within three minutes, long press the Light Power Button  and the Fan Power Button  on your remote for 3 seconds to pair it.
- If applicable, the fan will turn on and the lights will flash and stay on for three seconds, along with a continuous beep to indicate successful pairing.


Installing multiple fans operating on a single remote control

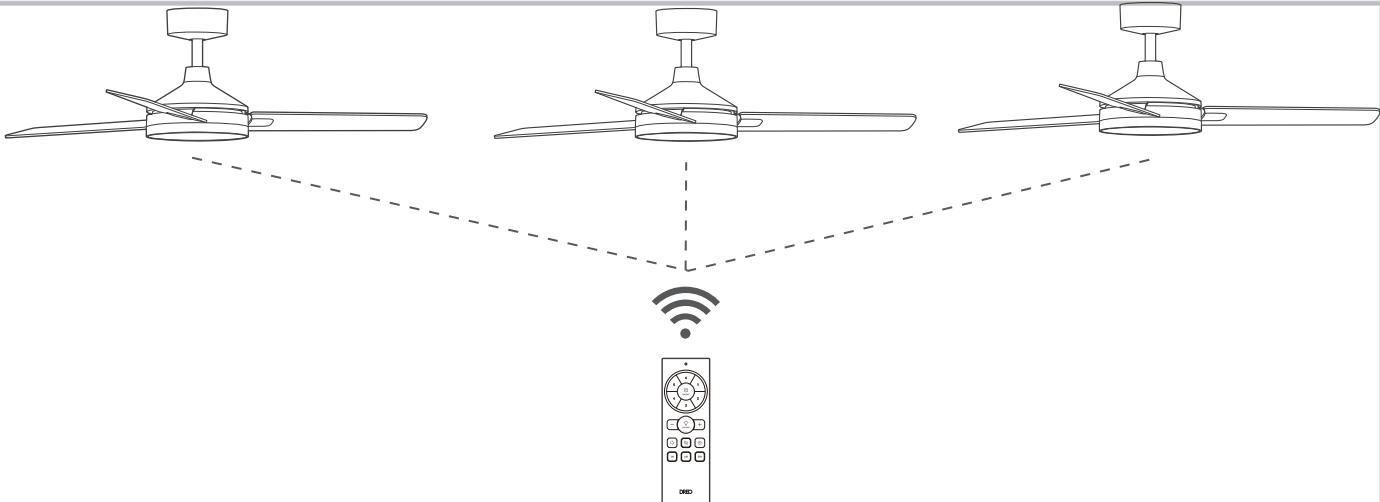

To have multiple fans operated by a single remote control, you must pair the remote control to each additional receiver. The receiver that shipped with your fan is already paired to the remote control.

- For each additional fan, ensure that a compatible receiver is installed. Disconnect power from all other fans while pairing.
- Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within three minutes, long press the Light Power Button  and the Fan Power Button  on your remote for 3 seconds to pair it.
- If applicable, the fan will turn on and the lights will flash and stay on for three seconds, along with a continuous beep to indicate successful pairing.

Battery Replacement

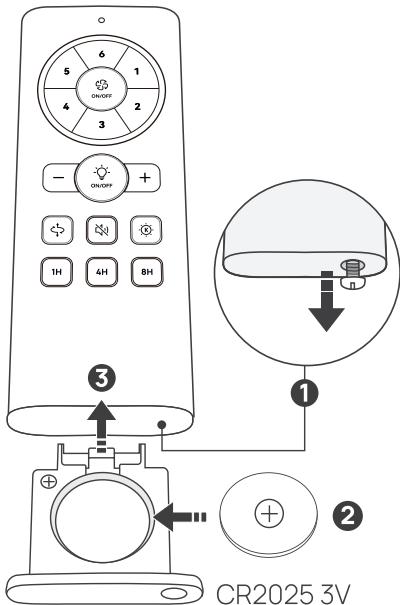

- 1.Unscrew the locking button with a Phillips screwdriver to remove the battery holder.
- 2.Replace with the same battery type with the (+) side facing up.
- 3.Push the holder in and tighten the screw until it is securely locked into place.

Note: If the indicator on the remote control doesn't turn on anymore, please consider replacing the battery.

⚠️ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.





- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Compatible battery type: CR2025.
- e) Battery nominal voltage: 3.0 Vdc
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (rated temperature: 140 °F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
- i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Install the Remote Control Holder

Option 1:





1 Peel off the 3M glue on the back of the holder to adhere it to the desired location.

2 Store your remote control.

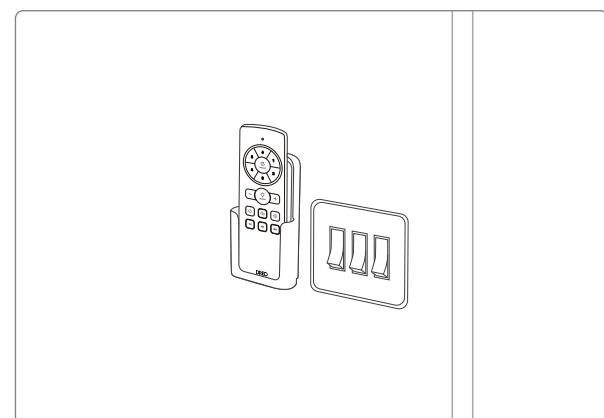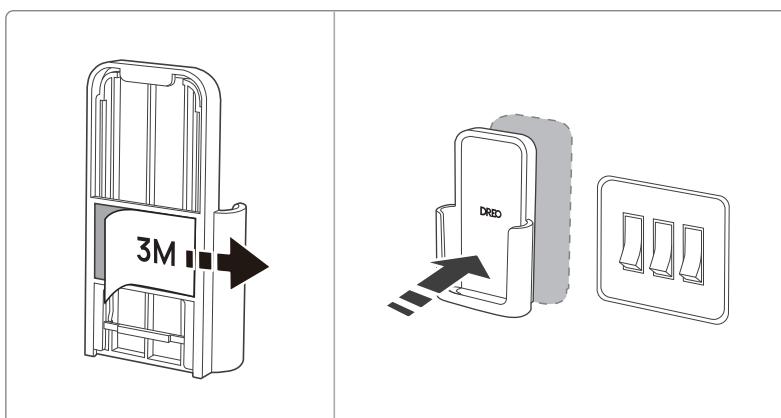

Option 2:

- 1 Slide the backboard downward to remove it.
- 2 Use the two holes on the holder as a guide to drill two corresponding holes in the flat wall.
- 3 Align the two holes on the holder with the two holes on the wall.

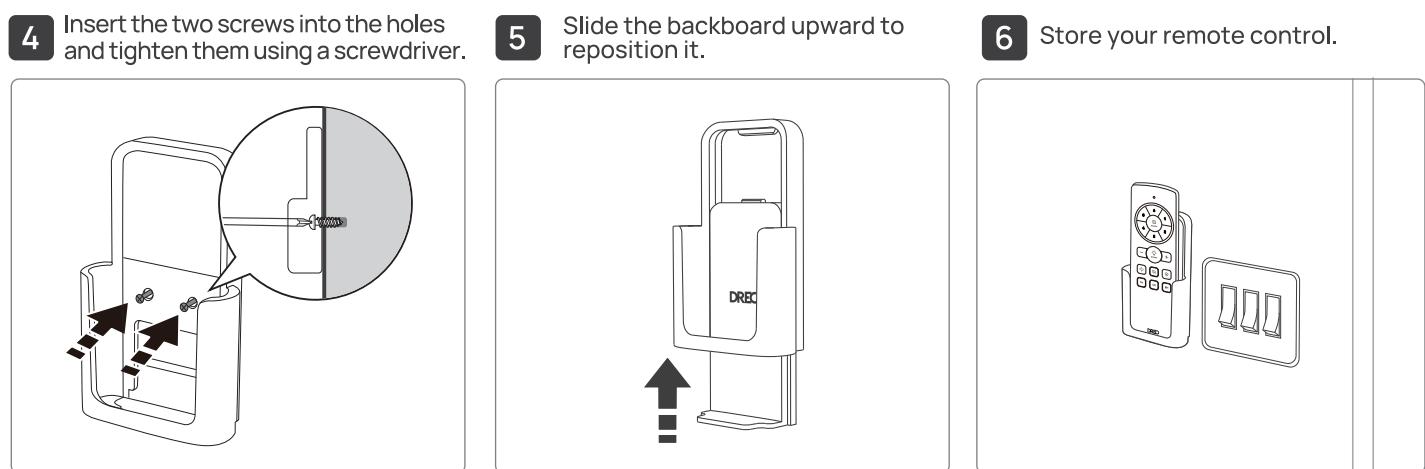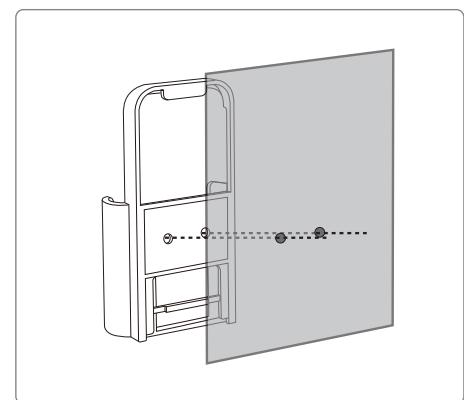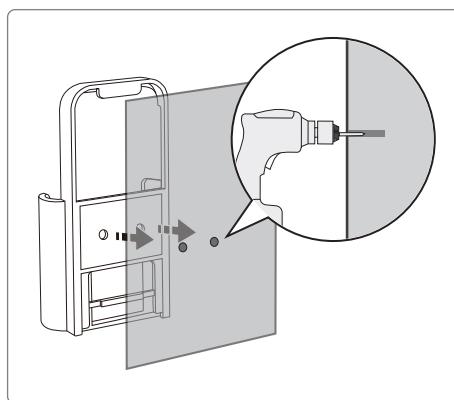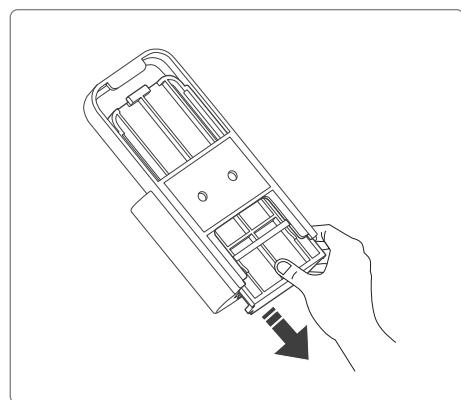

Additional Features



Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the timer setting) when it is turned ON again.



Timer

When the ceiling fan is ON/OFF, touch the timer button    on the remote control to set a timer (1H, 4H, 8H).

When the timer ends, the ceiling fan will stop/start running automatically.



Mute

Press the mute button  on the remote control to turn on/off button sounds.



Soft Light Mode

Long press the color temperature button  for 3s seconds.

CONNECTING YOUR CEILING FAN

10

This device includes the radio transmitting module whose CMIT ID is FCC ID: 2A3SYCF004S.



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search “DREO”, then select and download the app.



Look for "CLF308S" when connecting your new ceiling fan.



You can use the DREO app to connect your ceiling fan to **Amazon Alexa** or **Google Home**. Please follow the in-app instructions to set up your voice assistant.

NOTE: You must create a DREO account to access voice assistants.



Launch DREO and sign in or create an account by following in-app instructions.

1

2

Enable Bluetooth on your mobile device and plug in your air conditioner.

3




Hold the light power button  and color temperature button 

(The ceiling fan light will dim intermittently during the pairing process.)

3

4

Tap + Add Device and select CLF308S.

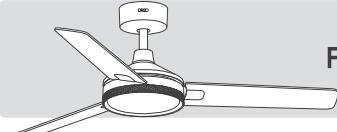

Follow in-app instructions to complete WiFi connection.

5

6


You're now ready to control the appliance on your app.




To restart network setup, hold the light power button  and color temperature button  again for 3 seconds.

CLEANING AND MAINTENANCE

11

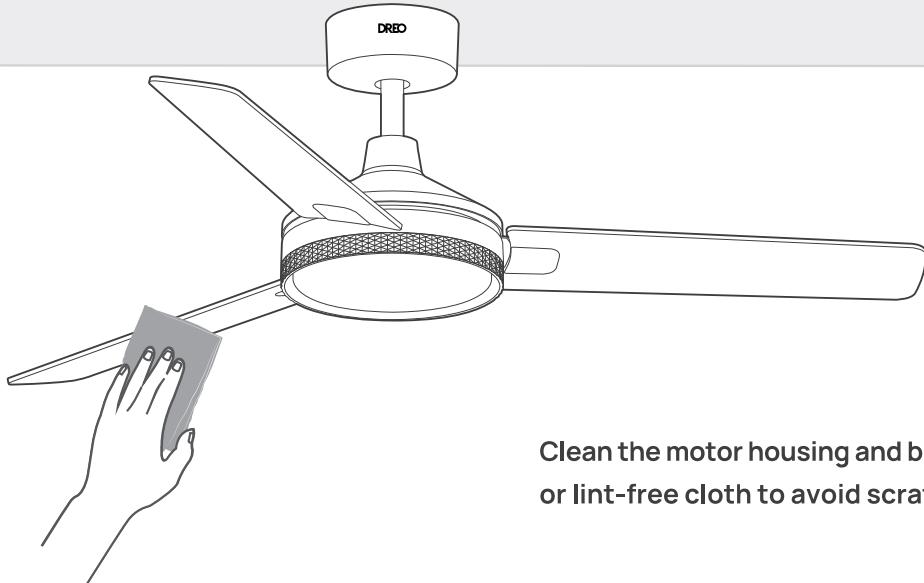

Clean the motor housing and blades with a soft brush or lint-free cloth to avoid scratching the finish.

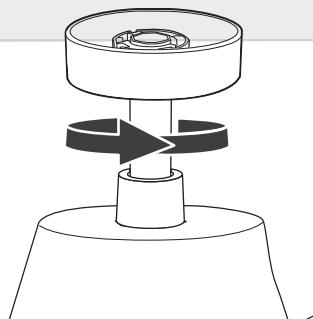

At least twice each year, lower the canopy to check the downrod assembly and tighten all screws on the fan.



- Shut off the main power supply before you begin any maintenance task.
- **DO NOT** use water or a damp cloth to clean the fan.
- Cleaning products may damage the finishes.

TROUBLESHOOTING

12

Problem	Solution
Fan Doesn't Work	<ul style="list-style-type: none">• Make sure the power switch is on.• Check the circuit breaker to ensure the power is turned on.• Make sure the blades spin freely.• Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.
Excessive Wobbling	<ul style="list-style-type: none">• Make sure the blades are properly installed on the blade iron posts.• Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.
Remote Control of Fan is Erratic	<ul style="list-style-type: none">• Make sure the battery is installed correctly. If the command indicator light keeps flashing, indicating low battery, install a fresh battery.
Remote Only Works Close to Fan	<ul style="list-style-type: none">• Change battery
Noisy Operation	<ul style="list-style-type: none">• Make sure the blades are properly installed.• Check to see if any of the blades are cracked. If so, replace all of the blades.

If you find any damaged or missing parts upon receiving the package or during installation, or if your issue is not listed above or continues to persist, please contact our Customer Support immediately. (see page 18)

Default 12-Month Warranty

This appliance is covered by Dreo warranty for 12 months from the date of its original purchase.

Extend Your Warranty

Extend your warranty by registering your new appliance on our website <https://dreo.com/warranty>

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by DREO.

We can only provide after-sales service for products that are sold by DREO or DREO authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

FCC STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

We're Here to Help!

 (888) 290-1688 Mon - Fri, 9:00 am-5:00 pm PST/PDT

 support@dreo.com

 www.dreo.com

 Shenzhen Hesung Innovation Technology Co., LTD

 26F, Bldg A7, Creative City, Shenzhen, China



MADE IN CHINA



Intertek

www.dreo.com

Looking for help?

Contact us to get expert support.

 support@dreo.com  [\(888\) 290-1688](tel:(888) 290-1688)  www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT