

背面

Q1

Q1 Quick Operation Manual

Wi-Fi camera

Download APP
Use the mobile phone's "Scan" function to scan the QR code, download and install "V380Pro"

Connect power
Connect the device to the power supply for about 1 minute until the following beep sounds: System startup, system startup is complete, hotspot is being established, hotspot is established

A Connect the device

The APP will be updated continuously, and the interface is subject to the APP

B Wi-Fi connection operation steps

The APP will be updated continuously, and the interface is subject to the APP

C AP hotspot without internet operation steps

The APP will be updated continuously, and the interface is subject to the APP

Function Description

Light control instructions:

Alarm description:

Cloud video description:

Cloud storage description:

common problem

problem **Cause/solution**

Memory card no storage
If the memory card has been used in other equipment, you need to format the memory card before using it. The camera does not support the insertion and removal of the memory card when the camera is powered on, and the camera needs to be powered off to insert or remove the memory card. Please format the memory card before inserting or removing the memory card. If the memory card is still not recorded after restarting the camera, please format the memory card again.

What should I do if I can receive the warning message?
First confirm whether the power supply and network are normal. If there is no mobile power or the camera cannot connect to the network, for example, the camera cannot connect to the network normally. Restart the router, restart the camera, and try to connect to the Internet again.

What should I do if the device is unsuccessfully added?
For the first connection between the camera and the router, please connect to the distribution network at close range. Check whether the WiFi password is correct and connect to the network normally. Restart the router, restart the camera, and try to connect to the Internet again.

What if the display device is offline?
If the display device can be used, it can be used. If the display device is not connected, which means the camera cannot connect to the WiFi. Check if the camera is far away from the router, the signal is not good, and the camera cannot be connected to the network.

Watch screen display password
Enter the password that is prompted to set up the screen when the camera is connected for the first time. The password is a combination of 6 digits in English, 0-9, and a factory default user name of the device administrator. If there is no change, it is the default password. If you forget the password, you need to restore the factory settings. Press and hold for about 10 seconds, and the camera will prompt you to restore the factory settings, you can reconnect to the network.

CC Starter

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This equipment generates, uses and radiates radio frequency energy and, if installed in the equipment, may cause interference to radio communications, which can be determined by turning the equipment off and on. The user is responsible for any required changes or modifications to this equipment to correct interference, if necessary. Consult the dealer or an experienced technician for assistance.

Explosive Information
This equipment contains no explosive materials.