 


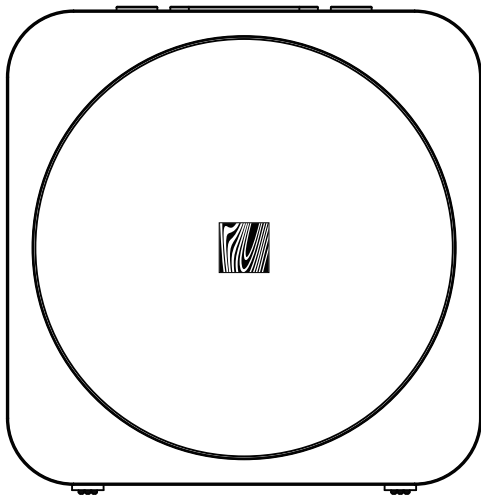

SOUNDFREAK®

Sound Spot II

 
User Guide



Please download the
user guide here:




Contents

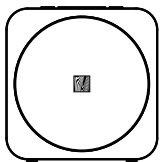

Sound Spot II




 USB Cable


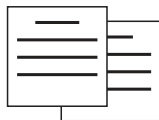


Quick Start Guide and Safety Leaflet

 Getting to know Sound Spot II

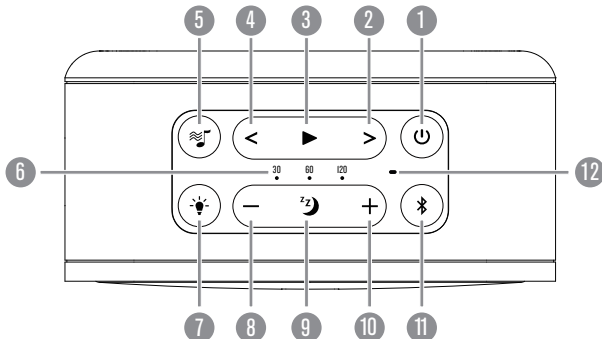

- 1 Power ON | OFF
- 2 Next
- 3 Play | Pause
- 4 Previous
- 5 Nature Sound | Music Source
- 6 Sleep Timer Indicators
- 7 Ambient Light
- 8 Volume -
- 9 Sleep Timer
- 10 Volume +
- 11 Bluetooth | Pairing
- 12 Microphone

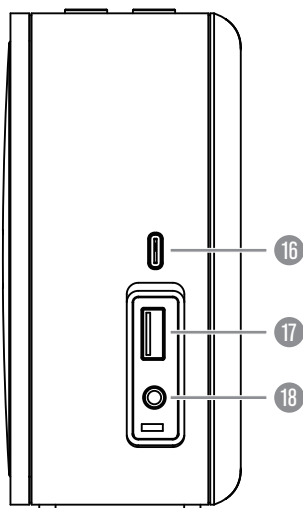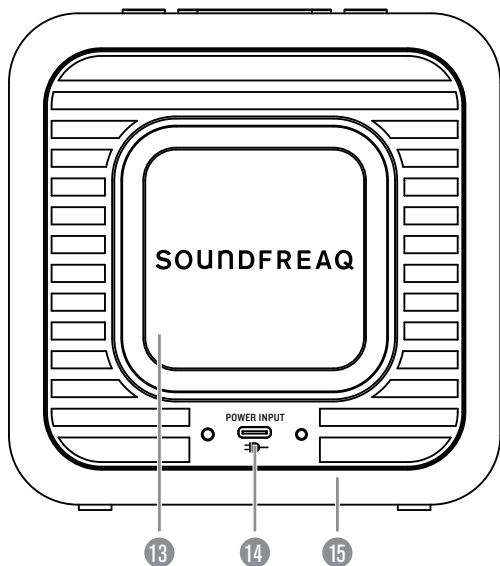  

13 Bass Radiator

14 Power Input Port

15 Ambient Light

16 USB-C Charging Output Port


17 Flash Drive USB Port

18 AUX IN Port

Charging your Sound Spot II

Important: Choose the right USB-PD adaptor (not supplied)

- The Sound Spot II is designed to work with a **20W USB-PD** (Power Delivery) power adaptor for its functionality and performance. Please make sure the right PD adaptor is chosen before plugging in for charging. The PD adaptor output rating should support **9V / 2.22A** (or above) for proper operation.
 - The Sound Spot II would not charge or power up if a “non-PD” type USB-C power adaptor is connected.
- 1) Connect your Sound Spot II with the supplied USB cable to your PD adaptor for charging at the back of the unit.

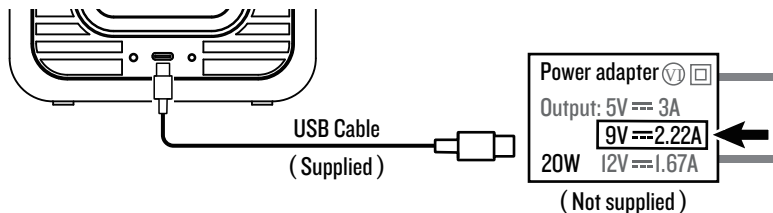

NOTE: The supplied USB cable is **ONLY** for connection to the PD power adaptor. Do not use the supplied USB cable for charging iPhone 15. For charging iPhone 15, please make sure to use the original iPhone15 USB cable to avoid damage or malfunction.

- 2) The power indicator will flash slowly to indicate charging is in progress when the unit is powered off in standby mode.

| Indicator | Charging status |
|-----------------------|-----------------|
| Slow Flash (White) | Charging |
| Stop Flash (No Light) | Fully Charged |




NOTE: Some PD power adaptor with multiple output ports may have insufficient shared output power while charging multiple devices at the same time. In case of having charging problem, please try to disconnect some devices on your multiple-port power adaptor.

Checking Battery Level

You can simply check the battery level of your Sound Spot II by observing the color of the power indicator when the unit is switched on.

| Mode | Indicator Color | Battery level |
|-------------------------|-----------------|------------------------|
| Power adaptor connected | White | AC Powered |
| Battery-powered | Green | 50 – 100% |
| | Orange | 20 – 49% |
| | Red | < 20% (need to charge) |

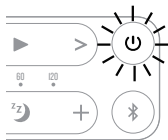


Using Sound Spot II - Quick Start

| | |
|--|---|
| | Press the POWER button to turn the speaker on or off. |
| | Press the BLUETOOTH button to pair your mobile device. |
| | Press the playback control buttons (PLAY PAUSE PREVIOUS NEXT) to control music playback and volume up/down (+ / -) buttons to control playback volume. |
| | Press the NATURE SOUND MUSIC MODE button to select nature sound, music playback from your USB flash drive or the AUX-IN port. |
| | Press the LIGHT button to control the ambient mood light. |
| | Press the SLEEP button to activate the sleep timer. |
| | Plug your mobile device to the side USB-C port for charging. |

Listening with Bluetooth

Bluetooth Pairing

- 1) Press the **POWER** button to turn on the unit first or Press the **BLUETOOTH** button directly to start pairing. The Bluetooth indicator will flash rapidly.
- 2) On your device, open your Bluetooth setting menu to detect available Bluetooth devices for connection. Once the Sound Spot II is detected, select it from the list to connect.
- 3) To break the Bluetooth connection or to pair another new device, press and hold **BLUETOOTH** button for 2 seconds to disconnect the currently paired device. The Bluetooth indicator will flash rapidly again ready for pairing a new device.

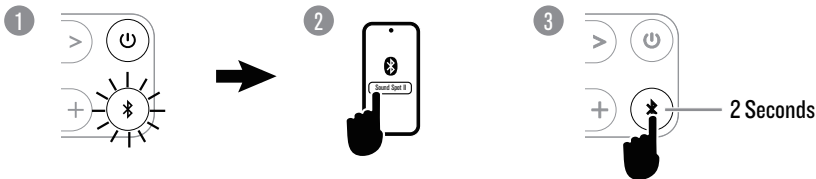

Playing Music via Bluetooth

- 1) After pairing, either use the playback controls buttons (**PLAY | PAUSE / PREVIOUS / NEXT**) to control the music playback.
- 2) You can adjust the volume level by using the volume up/down (+ / -) buttons or adjusting volume on your paired device.



Using Speakerphone

The personal speakerphone feature allows you to receive and control phone call on your paired mobile phone.

- 1) **PICKUP CALL:** After pairing your mobile phone, simply pick up the incoming call by short pressing the **PLAY / PAUSE** button.
- 2) **END CALL:** Short press the **PLAY | PAUSE** button again to end call.
- 3) **REJECT CALL:** Long press the **PLAY | PAUSE** button to reject incoming call.



NOTE: The effective pickup range for the personal speakerphone feature is within 1 m (3 ft) from the top of the unit for the best voice quality.

Using DSS (Dual Streaming System) for stereo playback

You can pair up two units of Sound Spot II in True Wireless Stereo (TWS) mode for music enjoyment.

- 1) Power on and switch to the Bluetooth mode on both Sound Spot II, but **DO NOT** pair with your mobile device.
- 2) Long press the **PLAY** button for on the first Sound Spot II for 3 seconds to active the **DSS** mode. You will hear the **DSS** connection tone after **DSS** connection. The first Sound Spot II will be the **LEFT** channel.
- 3) You can **NOW** pair your Bluetooth mobile device as usual for music playback.
- 4) To cancel the **DSS** mode, long press the **PLAY** button for 3 seconds on either speaker. You will hear the **DSS** disconnection tone. The first Sound Spot II will continue playback after the **DSS** disconnection.

NOTE: The **DSS** mode supports bluetooth music playback in stereo mode after connection. Other music sources (Nature Sound, AUX In and Flash Drive) are not supported in **DSS** mode. Please disconnect **DSS** mode first for playback of other music sources.


Listening to Nature Sound

- 1) Press the **NATURE SOUND | MUSIC MODE** button to toggle to nature sound mode.
- 2) Press the **PREV < or NEXT >** button to select your desired nature sound effects.
- 3) Press the **PLAY | PAUSE** button to stop / resume playback.



Listening with AUX IN

- 1) Connect your device with a standard headphone jack using a line-in cable (not included) to the **AUX IN** port on the side of the unit.
- 2) Press the **NATURE SOUND | MUSIC MODE** button to toggle to **AUX IN** mode.

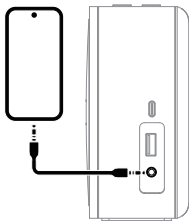


Listening with USB Flash Drive

- 1) Plug your USB flash drive on the side USB music port.
- 2) Press the **NATURE SOUND | MUSIC MODE** button to toggle to USB playback mode.
- 3) Press the **PREV < or NEXT >** button to select your desired tracks on your USB flash drive.
- 4) Press the **PLAY | PAUSE** button to stop / resume playback.
- 5) After playback, it is recommended to unplug your USB flash drive when the speaker is power off to avoid damage to your USB flash drive.

Note:

- 1) Sound Spot II supports USB flash drive size up to 64GB. The supported file formats are MP3 (44.1kHz, up to 320kbps) & WAV (8/16/24bit, LPCM 44.1kHz).
- 2) Do not plug in any power adaptor or power source to this USB flash drive port to avoid damage.

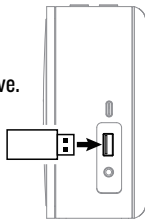

Using Ambient Mood Light

- 1) Press the **LIGHT** button to turn the ambient light on / off and control the brightness level. There are 3 levels of brightness can be selected.
- 2) Press the **LIGHT** button again to switch to the breathing mode, the slow breathing effect creates rhythm and an atmosphere that boosts your mood.




Charging Mobile Phone

Simply connect your device to the side USB-C port for charging.

Note:

- 1) The max. rating of the USB-C port is 5V / 1.5A (7.5W).
The charging current would vary depending on the connected device and charging condition.
- 2) Do not plug in any power adaptor or power source to this charging output port to avoid damage.
- 3) The USB-C port provides regular charging and does not support fast charging; some devices such as tablet or powerbank may not charge.
- 4) The supplied USB cable is **ONLY** for connection to the PD power adaptor. Do not use the supplied USB cable for charging your device, it is recommended to use the original USB cable bundled with your device to avoid damage or malfunction.

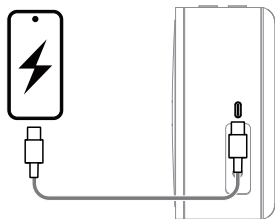

Using Sleep Timer

- 1) Press the **SLEEP Timer** button repeatedly to select your desired timer duration (30->60->120->OFF).
- 2) After selecting the duration, the indicator will light up and the sleep timer will start automatically. The unit will be turn off when the countdown is completed.
- 3) When the timer is running, press the **SLEEP Timer** button again will cancel the current countdown and select other timer duration.
- 4) To cancel the sleep timer, press the **SLEEP Timer** button till all indicators are off.



Auto Power Saving (APS) function

The Sound Spot II has automatic power saving function (by default). The unit will shut off automatically for power saving after 30 minutes of user's inactivity or idled music playback.

To change the **APS** setting, you can

- 1) Long press the Volume up (+) and Volume down (−) buttons together for 5 seconds.
- 2) The **POWER** indicator will flash to confirm the setting.




Disable APS:

APS active => press + and − (5 sec) => APS inactive (power indicator flashes 1x to confirm)

Enable APS:

APS inactive => press + and − (5 sec) => APS active (power indicator flashes 2x to confirm)

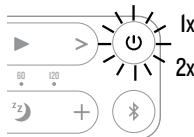

Trouble Shooting

If you experience problem with your Sound Spot II, Please try the steps below first.

- 1) Turn off and then turn on the unit. (page 4)
- 2) Check the charging indicator and battery level to make sure the unit is properly charged or powered by a PD compatible power adaptor. (page 4)
- 3) Make sure your mobile device has turned on Bluetooth function.
- 4) Move your mobile device closer to the Sound Spot II and remove any possible source of interference or obstruction.
- 5) Check the volume level on your mobile device, music app and your Sound Spot II.
- 6) Try connecting another mobile device with Bluetooth enabled.
- 7) Try another USB PD power adaptor with correct output rating. (page 3)

If the above steps cannot resolve your problem, see below to identify the solution to common issues.
If you still cannot resolve the problem, please contact our customer service at:

support@soundfreaq.com

Common Problem and Solution

| SYMPTOM | SOLUTION |
|---|--|
| Does not Charge | <ul style="list-style-type: none">- Make sure the cable is correctly connected.- Make sure PD power adaptor is used with correct output rating.- Try another USB cable or another PD power adaptor. |
| Cannot pair Bluetooth | <ul style="list-style-type: none">- Disable and then enable the Bluetooth function on your mobile device.- Remove Sound Spot II on the Bluetooth list on your device and try pairing again.- Try connecting a different mobile device. |
| No Sound | <ul style="list-style-type: none">- Make sure your mobile device is connecting to the Sound Spot II, not other speaker/device. |
| Sound quality | <ul style="list-style-type: none">- Try disconnecting other paired speaker/device on your mobile device.- Try a different music source, music app or song on your mobile device.- Try a different mobile device.- Check and disable any audio effect or audio enhancement on your mobile device or music app. |
| Speakphone does not function / pick up the voice | <ul style="list-style-type: none">- End the current call and try call again.- Try another mobile device. |

FCC Information:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Portable RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY

Betrue Technology Co Ltd. hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU at the time of its being placed on the market.

The full text of the EU declaration of conformity is available at the following internet address:
soundfreaq.com/user-guides/

Bluetooth (Version: V 5.3)

Range: max 10m (in open spaces)

Frequency band: 2.402 GHz to 2.480 GHz