


The collars that appear on the list are all collars with Bluetooth contact. However, you will not be able to add collars that already have an owner. If you attempt to add a collar assigned to another user, an error message will appear. If so, please contact Nofence support.

Removing collars from your user


To remove a collar from your user, click on Collars in the main menu. You are only able to remove collars without an active pasture, so make sure the collar you want to remove is found in the Not

assigned list.

Select the collar you want to remove and scroll down to press the Advanced button at the bottom of the screen. Select Remove collar and submit the reason for the removal. Confirm to remove the collar from your user.

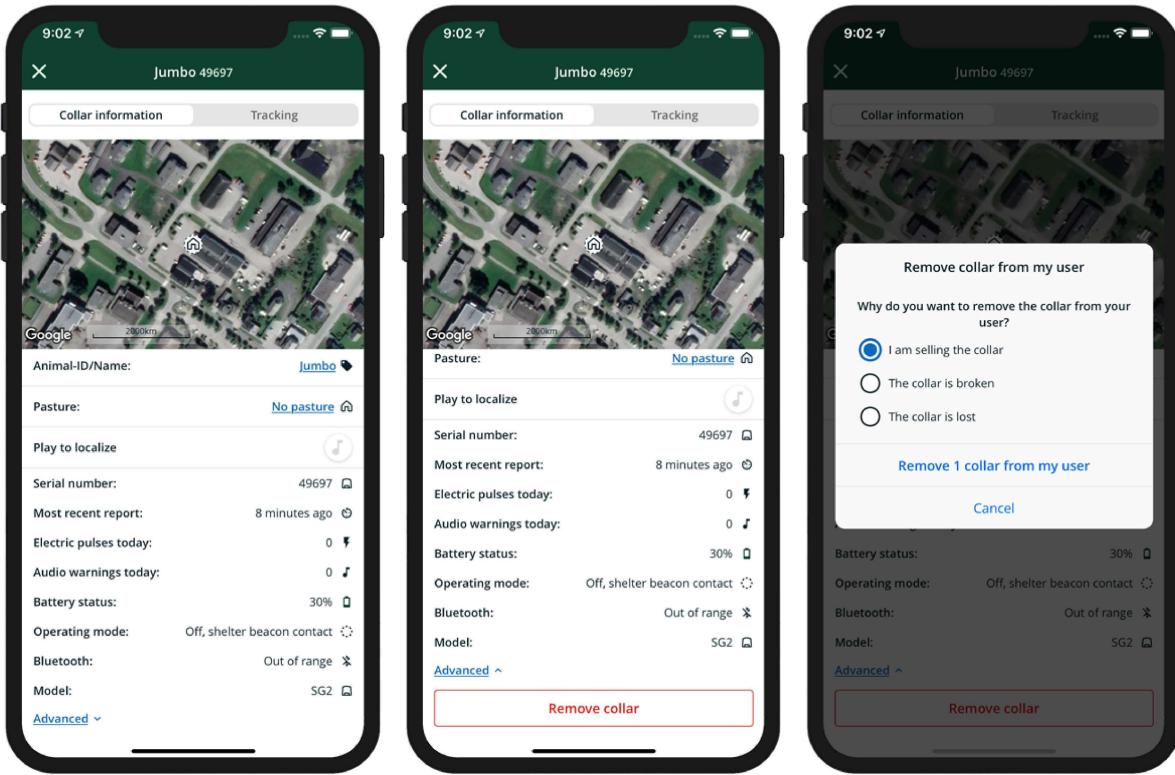

To remove several collars at the same time, select More from the main menu, press My user, then Collar administration. Select the collars you want to remove. Click Remove collars and submit the reason for the removal. Press Confirm to remove the collars from your user. It is only possible to remove your own collars from your own user. Please note that anyone with access to your app also can perform this operation.

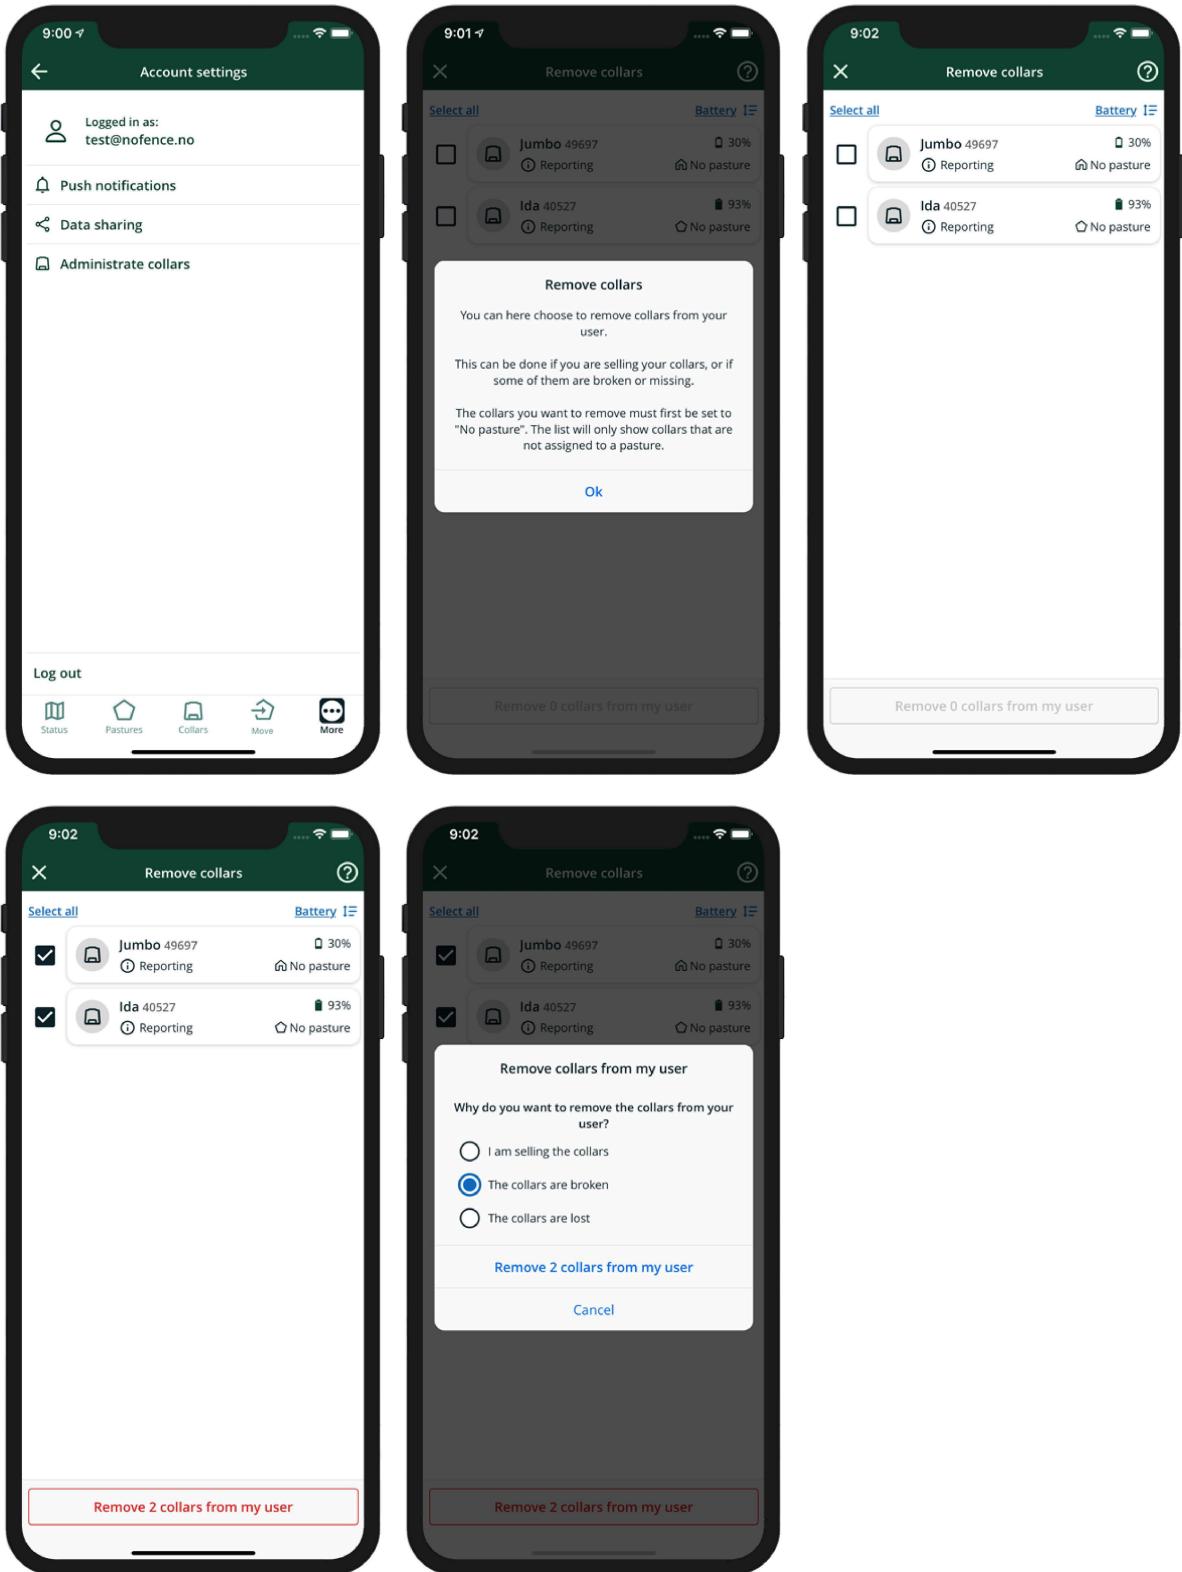


Note that changes in the total number of collars may affect your price plan.


4.5. Move

Move collars from pasture to pasture


If you wish to move the animals from one pasture to another, click on Move and then Move from pasture to pasture. Select the pasture you want to move the animals from.

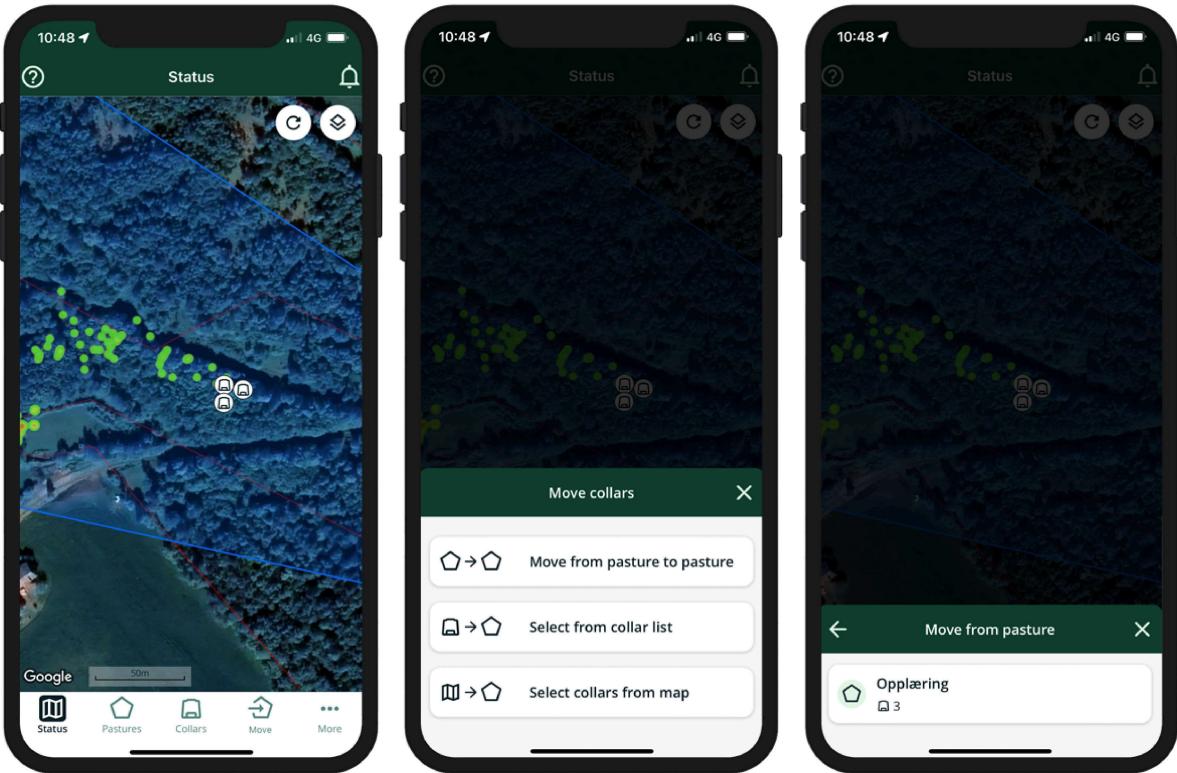

Then, select the pasture you want to move the animals to. Click on Confirm, set pasture.

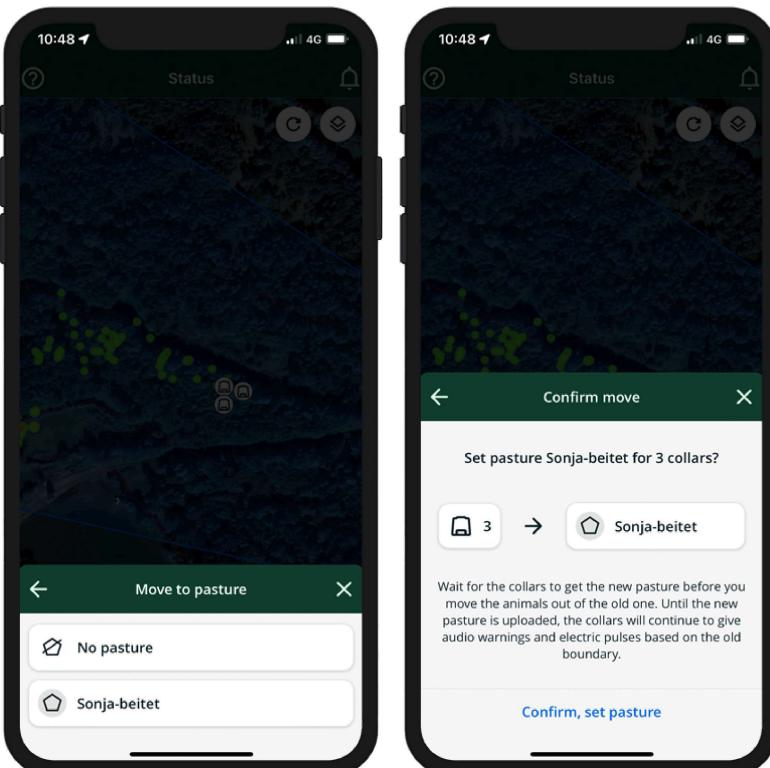


Now, the collars will upload the new pasture they have been assigned to. You can track the process by clicking on the status line on the top of the screen. The info box will appear and let you know if the collars are loading, if they succeed or fail to load, and if the collars have been registered inside their new pasture. The virtual fence will be activated as soon as a collar has registered a position inside the new pasture.

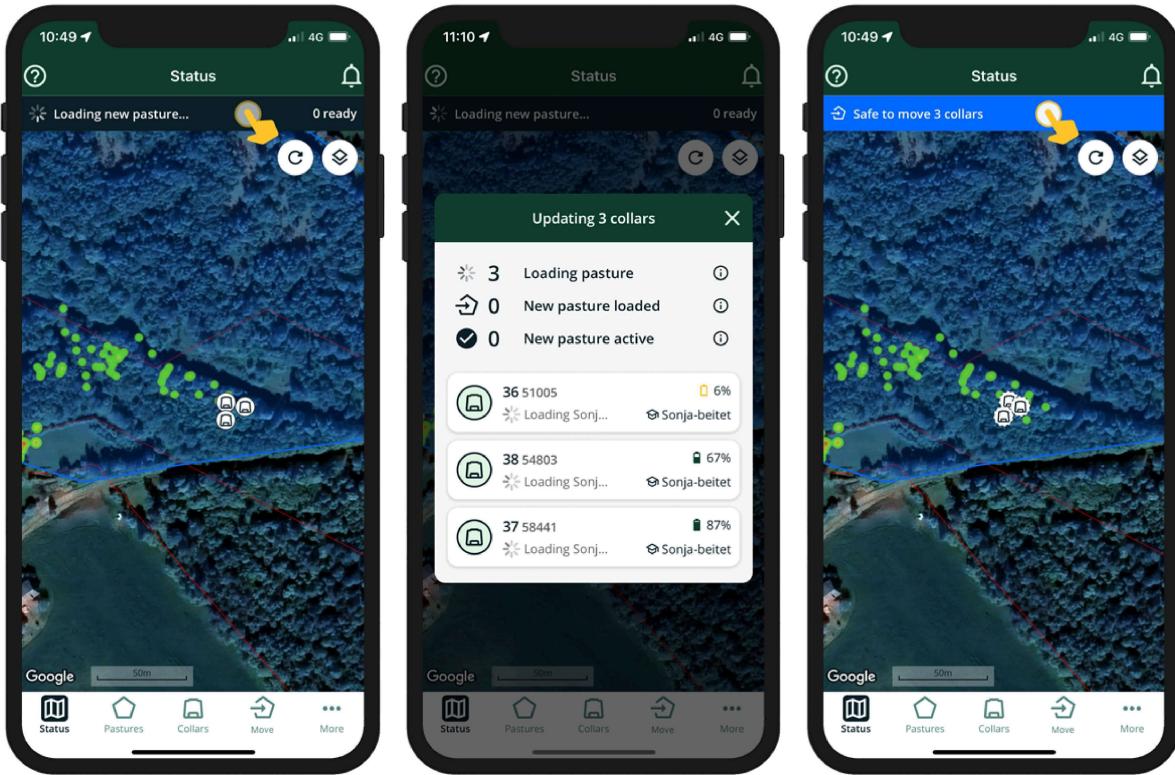


Please note that small changes to the current pasture boundaries will also trigger the status line at the top of the screen. Use this to ensure that all your animals have the same pasture boundary.

Select one, multiple or all collars from the collar list

If you wish to move one collar at a time, or multiple collars, choose the option Select from collar list. The collar list will appear, and you can select collars both with and without an existing pasture.

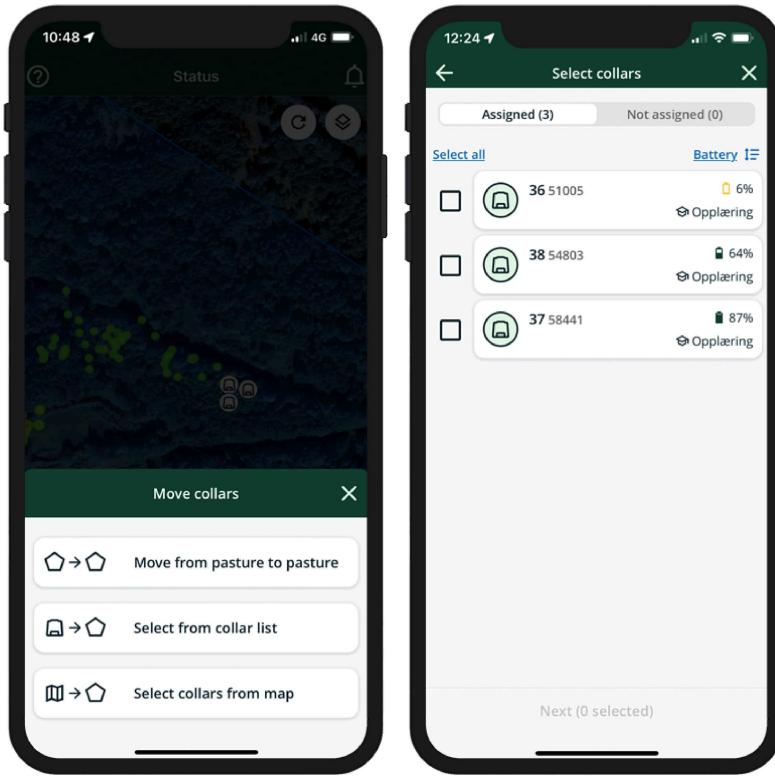


Select the collars you want to move, and click Next on the bottom of the screen. The list of your different pastures will then appear. Select the pasture you want to move the collars to. Then click Confirm. Once you do this, the status banner appears where you can track the process.

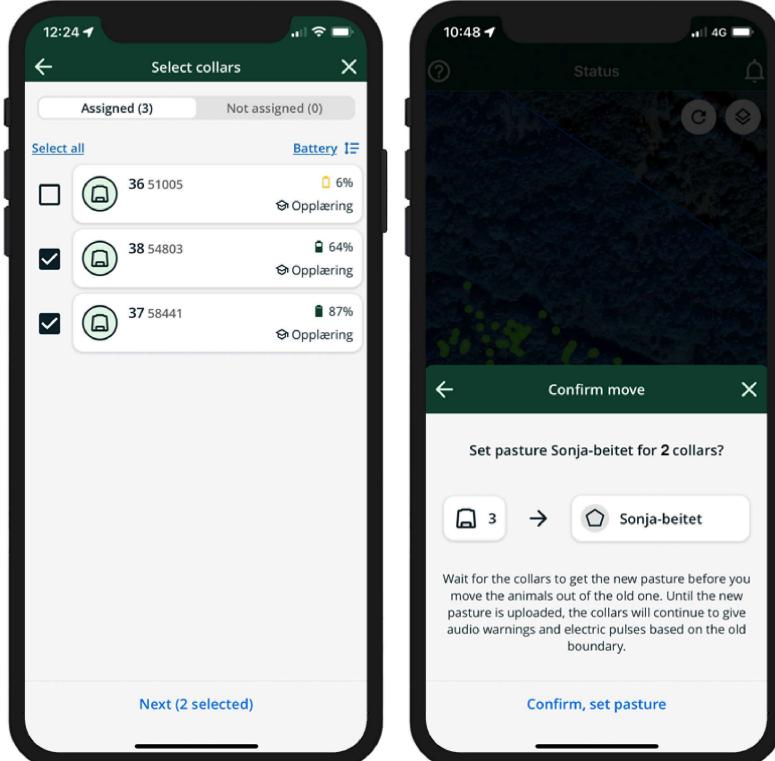


Select collars from map

If you wish to move collars from the map, select the option Select collars from map. The map will then appear, and you can click on the collars in the map that you would like to move to a new pasture.

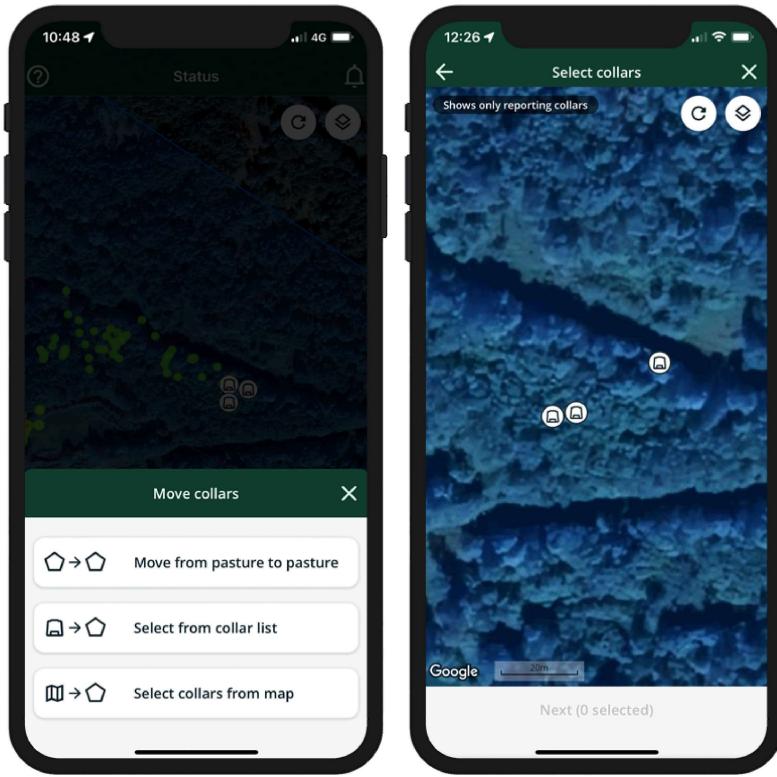

Once you have selected the collars you want to move, click Next. Select the new pasture, and click Confirm. The collars will now load their new pasture.

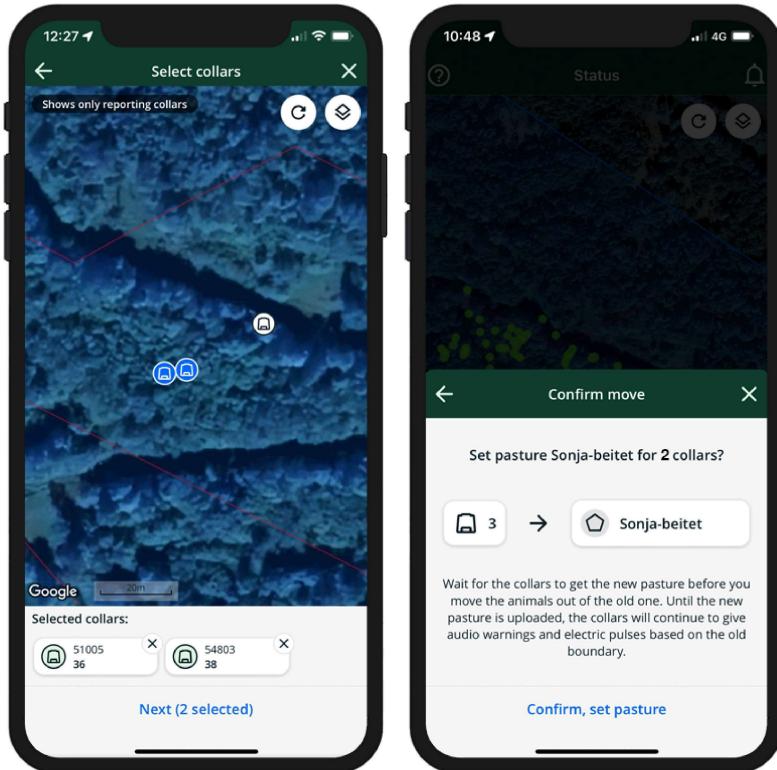

The status banner will tell you if the collars upload their new pasture successfully or not. Click on this for more information. See what a successful move looks like below: