


# greenworks

PA734K

Rev B

EN	SPEAKER	OPERATOR MANUAL
FR	xxxxxxxxxx	MANUEL D'OPÉRATEUR
ES	xxxxxxxxxx	MANUAL DEL OPERADOR

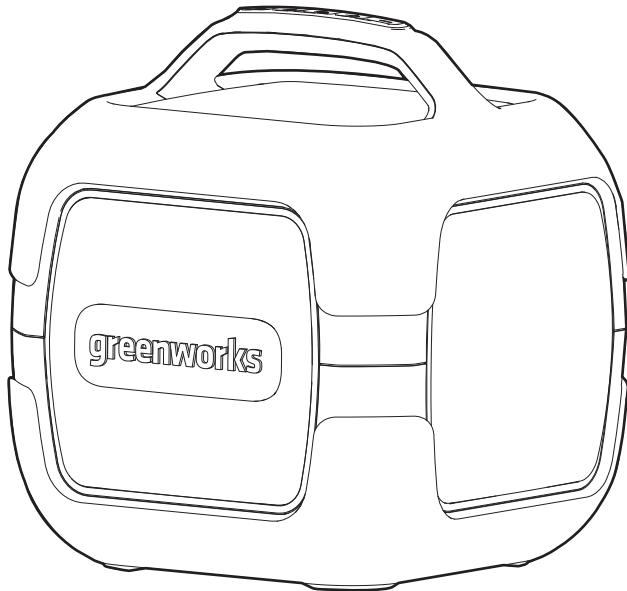

**BTG901**

[www.greenworkstools.com](http://www.greenworkstools.com)


<b>1</b>	<b>Description.....</b>	<b>2</b>	<b>8</b>	<b>Risk levels.....</b>	<b>4</b>
1.1	Purpose.....	2	9	<b>Installation.....</b>	<b>4</b>
1.2	Overview.....	2	9.1	Unpack the machine.....	4
1.3	Packing list.....	2	9.2	Install the battery pack.....	4
<b>2</b>	<b>General speaker safety warnings.....</b>	<b>2</b>	<b>10</b>	<b>Operation.....</b>	<b>5</b>
2.1	FCC Caution.....	2	10.1	Use your speaker.....	5
2.2	IMPORTANT NOTE.....	2	10.2	AUX connection.....	5
<b>3</b>	<b>Symbols on the machine.....</b>	<b>3</b>	10.3	Broadcast Mode.....	5
<b>4</b>	<b>The recommended ambient temperature range:.....</b>	<b>3</b>	<b>11</b>	<b>Maintenance.....</b>	<b>5</b>
<b>5</b>	<b>Proposition 65.....</b>	<b>3</b>	11.1	General maintenance.....	5
<b>6</b>	<b>Environmentally safe battery disposal.....</b>	<b>3</b>	<b>12</b>	<b>Troubleshooting.....</b>	<b>5</b>
<b>7</b>	<b>Child safety.....</b>	<b>4</b>	<b>13</b>	<b>Technical data.....</b>	<b>6</b>
			<b>14</b>	<b>Limited warranty.....</b>	<b>6</b>

## 1 DESCRIPTION

### 1.1 PURPOSE

This speaker is intended for playing audio. It connects mobile phone, tablet or other devices through bluetooth. Please read and follow the manuals before use.

### 1.2 OVERVIEW

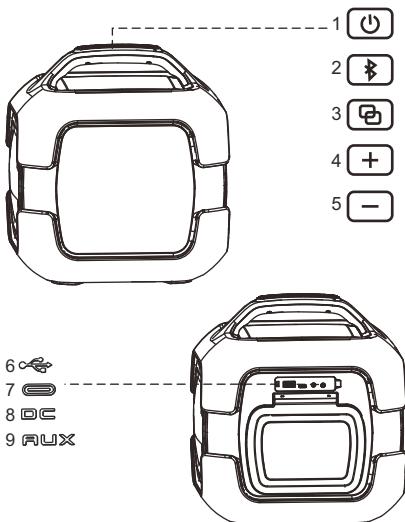

#### 1 On/off Button

Long Press the button to turn on/off the speaker.

#### 2 Bluetooth Search

Press and hold for 2 seconds to enter Bluetooth pairing mode.

Press and hold for 3 seconds to disconnect the device.

#### 3 Function Button

Press to play/pause the audio.

Press and hold for 3 seconds to enter or exit broadcast mode.

Three-click to play the previous track.

Double-click to play the next track.

#### 4 Volume +

Press to increase volume.

Press and hold for 3 seconds to maximize volume.

#### 5 Volume -

Press to decrease volume.

Press and hold for 3 seconds to mute the speaker.

#### 6 USB-A Output Port

Charge e.g. smartphone or tablet while playing audio.

#### 7 Type-C Output Port

Charge e.g. smartphone or tablet while playing audio.

#### 8 Adapter Port

Plug the adapter to power the speaker.

#### 9 AUX Port

Connect an external audio device to the speaker via 3.5 mm audio cable.

## 1.3 PACKING LIST

- 1 Speaker
- 2 Adapter Port
- 3 Instruction manual

## 2 GENERAL SPEAKER SAFETY WARNINGS

### 2.1 FCC CAUTION

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### 2.2 IMPORTANT NOTE

#### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

### 3 SYMBOLS ON THE MACHINE

You can use below symbols on the machine. Please study them and learn their definitions. Correct interpretation of these symbols let you operate the tool better and safer.

Symbol	Explanation
	<b>Safety Alert</b> Indicates a potential personal injury hazard.
	<b>Read Operator's Manual</b> To reduce the risk of injury, user must read and understand operator's manual before using this product.
	<b>Wet Conditions Alert</b> Do not expose to rain or use in damp locations.
	<b>Recycle Symbols</b> This product uses nickel-cadmium (Ni-Cd) and lithium-ion (Li-ion) batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
V	<b>Volts</b> Voltage
A	<b>Ampere</b> Current
---	<b>Direct Current</b> Type or a characteristic of current

### 4 THE RECOMMENDED AMBIENT TEMPERATURE RANGE:

Item	Temperature
Appliance storage temperature range	32 °F (0 °C) ~ 113 °F (45 °C)
Appliance operation temperature range	32 °F (0 °C) ~ 113 °F (45 °C)
Battery charging temperature range	39 °F (4 °C) ~ 104 °F (40 °C)

Item	Temperature
Charger operation temperature range	39 °F (4 °C) ~ 104 °F (40 °C)
Battery storage temperature range	32 °F (0 °C) ~ 113 °F (45 °C)
Battery discharging temperature range	32 °F (0 °C) ~ 113 °F (45 °C)

### 5 PROPOSITION 65

#### ⚠ WARNING

This product contains a chemical known to the state of California to cause cancer, birth defects or other reproductive harm. Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints;
- Crystalline silica from bricks and cement and other masonry products;
- Arsenic and chromium from chemically treated lumber.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

Save these instructions.

### 6 ENVIRONMENTALLY SAFE BATTERY DISPOSAL



The toxic and corrosive materials below are in the batteries used in this machine: **Lithium-ion, a toxic material.**

#### ⚠ WARNING

Discard all toxic materials in a specified manner to prevent contamination of the environment. Before discarding damaged or worn out Lithium-ion battery, contact your local waste disposal agency, or the local Environmental Protection Agency for information and specific instructions. Take the batteries to a local recycling and/or disposal center, certified for Lithium-ion disposal.

**▲ WARNING**

If the battery pack cracks or breaks, with or without leaks, do not recharge it and do not use. Discard it and replace with a new battery pack. DO NOT TRY TO REPAIR IT! To prevent injury and risk of fire, explosion, or electric shock, and to avoid damage to the environment:

- Cover the terminals of the battery with heavy-duty adhesive tape.
- DO NOT try to remove or destroy any of the battery pack components.
- DO NOT try to open the battery pack.
- If a leak develops, the released electrolytes are corrosive and toxic. DO NOT get the solution in the eyes or on skin, and do not swallow it.
- DO NOT put these batteries in your regular household trash.
- DO NOT incinerate.
- DO NOT put them where they will become part of any waste landfill or municipal solid waste stream.
- Take them to a certified recycling or disposal center.

**7 CHILD SAFETY**

Tragic accidents can occur if the operator is not aware of the presence of children.

- Keep children out of the working area and under the watchful care of a responsible adult.
- Stay alert, and turn the machine off if a child or any other person enters the working area.
- Use extreme care when approaching blind corners, doorways, shrubs, trees, or other objects that may obscure your view of a child who may run into the path of the machine.

**8 RISK LEVELS**

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYM-BOL	SIGNAL	MEANING
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.

SYM-BOL	SIGNAL	MEANING
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

**9 INSTALLATION****9.1 UNPACK THE MACHINE****▲ WARNING**

Make sure that you correctly assemble the machine before use.


**▲ WARNING**

- If parts of the machine are damaged, do not use the machine.
- If parts are missing, do not operate the machine.
- If parts are damaged or missing, contact the service center.

1. Open the package.
2. Read the documentation provided in the box.
3. Remove all the unassembled parts from the box.
4. Remove the machine from the box.
5. Discard the box and packing material in compliance with local regulations.

**▲ WARNING**

For your personal safety, do not insert battery before the tool is assembled completely.

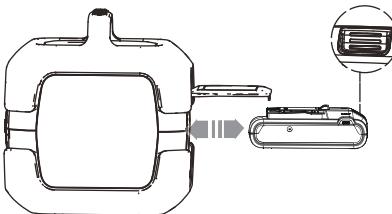**9.2 INSTALL THE BATTERY PACK****▲ WARNING**

- If the battery pack or charger is damaged, replace them directly.
- Stop the machine and wait until the motor stops before you install or remove the battery pack.
- Read, understand, and follow the instructions in the battery and charger manual.

1. Press the lower part of battery compartment flap to open.

2. Align the lift ribs on the battery pack with the grooves in the battery compartment.
3. Push the battery pack into the battery compartment until the battery pack locks into place.
4. When you hear a click, the battery pack is installed.
5. To remove the battery, open the battery compartment flap then press the battery release button on the top of the battery pack and pull the battery pack out of speaker.

**TIP:** This speaker can also connect to the power outlet directly. Insert the included adapter to supply the power. This will automatically provide continuous current to your speaker.

### ■ NOTE

The adapter can not charge the battery pack. Please use Greenworks charger to charge the battery pack.

### ▲ CAUTION

Avoid placing the speaker on wet or dirty surfaces.

## 10 OPERATION

### ■ IMPORTANT

Before you operate the machine, read and understand the safety regulations and the operation instructions.

### ▲ WARNING

Be careful when you operate the machine and always observe your surroundings before operating tool.

## 10.1 USE YOUR SPEAKER

1. Install the battery pack or connect the power source.
2. Press the ON/OFF button to turn the machine on.
3. Turn on Bluetooth on your Bluetooth enabled device to choose Greenworks 24V in the list
4. The Bluetooth search button will be steady white if the pairing succeeds.
5. Press function button to play/pause the audio.

### ■ NOTE

If your smart device cannot discover the speaker, please press and hold Bluetooth search button and try to pair again.

If your paired phone device receives a call, any playback will be paused and the rings come through the speaker.

This speaker can charge your phone when using adapter to power the speaker. Use a qualified USB cable to connect your phone and speaker. The speaker will automatically provide power to your phone.

## 10.2 AUX CONNECTION

1. Turn on the speaker.

2. Connect an external audio device to the speaker via 3.5 mm audio cable.
3. Press function button to play the audio.

## 10.3 BROADCAST MODE

This speaker can wirelessly connect to other Greenworks Bluetooth speakers and play the same audio at the same times.

1. Turn on the speakers. Make sure that your speakers are within 1 meter.
2. Press and hold the function button for 3 seconds to enter broadcast mode. The Bluetooth button turns to green and blinks.
3. The Bluetooth button is solid on when the connection is succeeded.

### ■ NOTE

After the broadcast pairing is successful, the "+", "-" and "Play/Pause" function on the second speaker will not work.

## 11 MAINTENANCE

### ▲ WARNING

When servicing, use only identical replacement parts. Use of any other parts could create a hazard or cause product damage.

## 11.1 GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

## 12 TROUBLESHOOTING

Problem	Possible cause	Solution
The speaker does not start.	The battery capacity is low.	Charge the battery pack.
	The on /off button is defective.	Contact the service center.
	The speaker is not connected to power source.	Connect the power source.

Problem	Possible cause	Solution
Intermittent or no audio	Make sure you are using a compatible Bluetooth mobile device.	Examine or change the Bluetooth device.
	The speaker is muted.	Increase the volume.
	Speaker doesn't connect to a bluetooth device.	On your mobile device, turn the Bluetooth feature off and then on again. Remove the speaker from the Bluetooth menu. Connect again.
	The distance between speaker and device is too far.	Keep device and speaker closer.
Cannot connect or pair with a Bluetooth device	Bluetooth is not enabled on your device (smartphone, tablet, computer).	Activate Bluetooth on your device.
	The speaker is not in pairing mode.	Push and hold the Bluetooth search button for 3 seconds to make the speaker discoverable by the device.

\* If you cannot find the solution to these problems, go to the service center.

## 13 TECHNICAL DATA

Voltage	24 V
USB output	USB-A QC: 5V/3A, 9V/2.5A, 12V/2A
	USB Type-C PD: 5V/3A, 9V/3A, 12V/2.25A, 3.3V-5.9V/3A, 3.3V-11V/3A
	USB Type-C QC: 5V/3A, 9V/2.5A, 12V/2A
Operation distance	10 m
Weight without battery	10.14 lbs/4.6 kg
Battery model	LB24A020/BAG708 and other BAG series
Charger model	2978602/2903102 and other CAG series

The recommended ambient temperature range:

Item	Temperature
Appliance storage temperature range	32°F (0°C) - 158°F (70°C)
Appliance operation temperature range	32°F (0°C) - 104°F (40°C)
Battery charging temperature range	39°F (4°C) - 104°F (40°C)
Charger operation temperature range	39°F (4°C) - 104°F (40°C)
Battery storage temperature range	32°F (0°C) - 73°F (23°C)
Battery discharging temperature range	32°F (0°C) - 113°F (45°C)

## 14 LIMITED WARRANTY



Greenworks hereby warranties this product, to the original purchaser with proof of purchase, for a period of three (3) years against defects in materials, parts or workmanship. Greenworks, at its own discretion, will repair or replace any and all parts found to be defective, through normal use, free of charge to the customer. This warranty is valid only for units which have been used for personal use that have not been purchased or rented for industrial/commercial use, and that have been maintained in accordance with the instructions in the owners' manual supplied with the product when new.

### ITEMS NOT COVERED BY WARRANTY:

1. Any part that has become inoperative due to misuse, commercial use, abuse, neglect, accident, improper maintenance, or alteration; or
2. The unit, if it has not been operated and/or maintained in accordance with the owner's manual; or
3. Normal wear;
4. Routine maintenance items such as lubricants, blade sharpening;
5. Normal deterioration of the exterior finish due to use or exposure.

### HELPLINE:

Warranty service is available by calling our toll-free helpline at 1-888-909-6757.

## TRANSPORTATION CHARGES:

Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. It is the purchaser's responsibility to pay transportation charges for any part submitted for replacement under this warranty unless such return is requested in writing by Greenworks.

### USA address:

Greenworks Tools

P.O. Box 1238

Mooresville, NC 28115

### Canadian address:

Greenworks Tools Canada, Inc.

P.O. Box 93095, Newmarket,  
Ontario

L3Y 8K3

www.greenworkstools.com



**greenworks**

Rev B