

Nomadix AP 6WB Access Point

Hardware Installation and Reference Guide

Document Version: V1.0
Date: October 28, 2022

Preface

Intended Audience

This document is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

Conventions

1. Signs

The signs used in this document are described as follows:

Warning

An alert that calls attention to important rules and information that if not understood or followed can result in data loss or equipment damage.

Caution

An alert that calls attention to essential information that if not understood or followed can result in function failure or performance degradation.

Note

An alert that contains additional or supplementary information that if not understood or followed will not lead to serious consequences.

Specification

An alert that contains a description of product or version support.

2. Note

The manual offers configuration information (including model, port type and command line interface) for indicative purpose only. In case of any discrepancy or inconsistency between the manual and the actual version, the actual version prevails.

Contents

Preface	1
1 Product Introduction	4
1.1 Overview	4
1.2 Product Pictures.....	5
1.3 Package Contents.....	8
1.4 Technical Specifications	8
1.4.1 Dimensions and Weight.....	8
1.4.2 RF Specifications	8
1.4.3 Port Specifications	10
1.4.4 Power Supply and Consumption	10
1.4.5 Environment and Reliability	11
1.5 LED and Button.....	11
2 Preparing for Installation	12
2.1 Safety Precautions.....	12
2.1.1 General Safety Precautions.....	13
2.1.2 Handling Safety.....	13
2.1.3 Electric Safety	13
2.1.4 Storage Security	13
2.2 Installation Environment Requirements.....	14
2.2.1 Bearing Requirements	14
2.2.2 Ventilation Requirements.....	14
2.2.3 Space Requirements	14
2.2.4 Temperature/Humidity Requirements	14
2.2.5 Cleanliness Requirements.....	14
2.2.6 Anti-Interference Requirements	15
2.2.7 Lightning Protection Requirements	16
2.2.8 Other Requirements.....	16
2.3 Tools	16

3 Installation	16
3.1 Installation Procedure	16
3.2 Checking Before Installation	17
3.3 Precautions	18
3.4 Installing the Device.....	19
3.4.1 Embedding in an 86-type Panel.....	19
3.4.2 Removing the AP	23
3.5 Connecting Cables.....	23
3.6 Bundling Cables.....	23
3.6.1 Precautions	23
3.6.2 Bundling Steps.....	24
3.7 Installation Verification.....	24
3.7.1 Checking the AP	24
3.7.2 Checking Cable Connections	24
3.7.3 Checking the Power Supply.....	24
4 Debugging	24
4.1 Establishing the Configuration Environment	24
4.2 Powering on the AP	24
4.2.1 Checklist Before Power-on	24
4.2.2 Checking the Environment After Power-on.....	24
5 Monitoring and Maintenance.....	25
5.1 Monitoring	25
5.1.1 LED	25
5.1.2 CLI Commands	25
5.2 Remote Maintenance.....	25
5.3 Hardware Maintenance.....	25
6 Troubleshooting.....	26
6.1 General Troubleshooting Procedure	26
6.2 Common Troubleshooting Procedures.....	26
6.2.1 Ethernet Port Is Not Working After the Ethernet Cable Is Plugged In.....	26
6.2.2 LED Is Off for a Long Time	26

6.2.3 LED Is Steady Red	26
6.2.4 LED Is Steady Green	26
6.2.5 LED Blinks Green at an Interval of 0.2s for a Long Time	27
6.2.6 LED Blinks Red at an Interval of 1s for a Long Time.....	27
6.2.7 No Wireless Signal Searched	27
7 Appendix.....	27
7.1 Connectors and Media.....	27
7.2 Cabling Recommendations.....	30
7.3 Power Adapter Specifications.....	33

1 Product Introduction

1.1 Overview

AP 6WB is a common 802.11ax-compliant panel-type wireless access point (AP) for indoor scenarios of small- and medium-sized networks, such as delicately decorated apartments/houses, stores, KTVs, hotels, enterprises' VIP offices, and real estates.

AP 6WB supports the 802.11ax, 802.11ac Wave2, 802.11ac Wave1, and 802.11n protocols. With hardware-independent dual-radio design, the AP can provide up to 2.975 Gbps access rate. The ultra-fast wireless negotiation rate makes wireless performance no longer a bottleneck.

The AP can be installed in an 86-type panel and has the following two features:

- The personalized appearance and structural design makes the product simple and beautiful.
- The product is cost-effective and can carry IP phones when working, helping save network deployment costs.

AP 6WB integrates Ethernet ports and gives sufficient consideration to wireless network security, radio control, mobile access, Quality of Service (QoS), seamless roaming, and other important factors. Working with Nomadix access controllers (ACs), this product implements user data forwarding, security, and access control. It is an optimal choice for wireless network construction in dormitories, VIP offices, hotels, stores, KTVs, and real estates.

1.2 Product Appearance

Figure 1-1 Front View



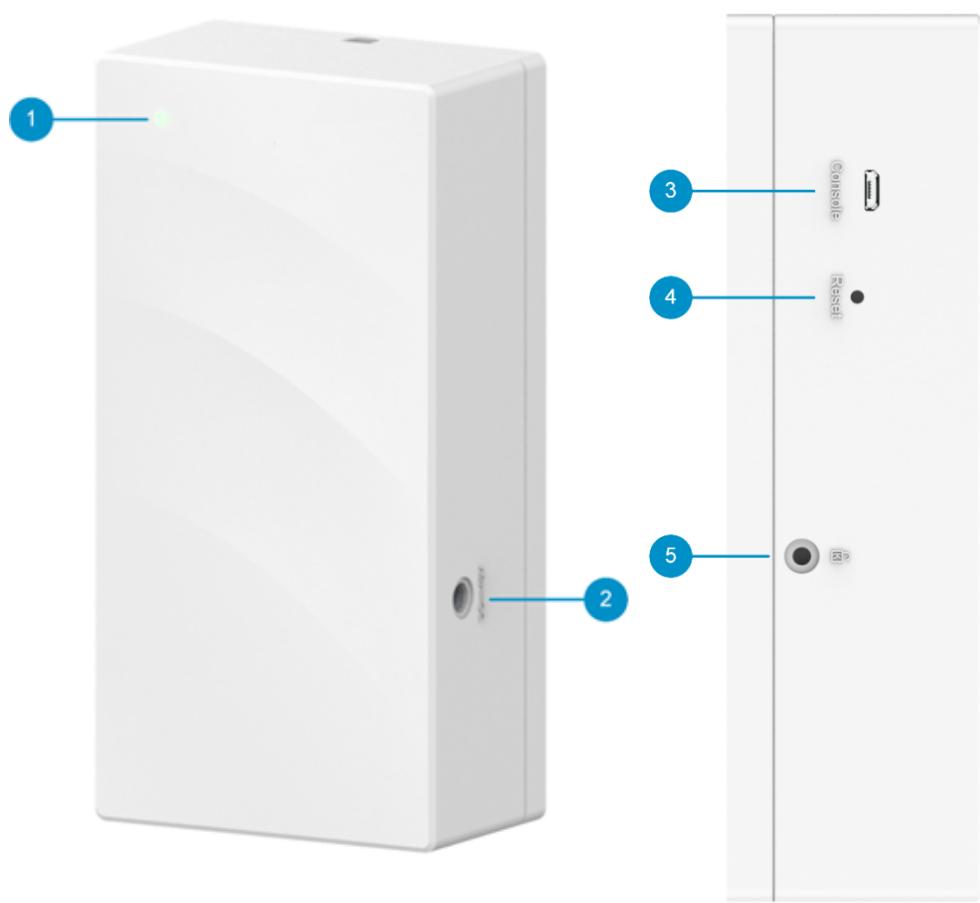
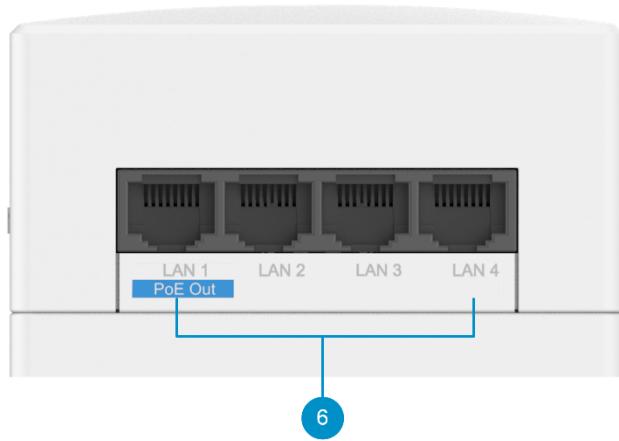
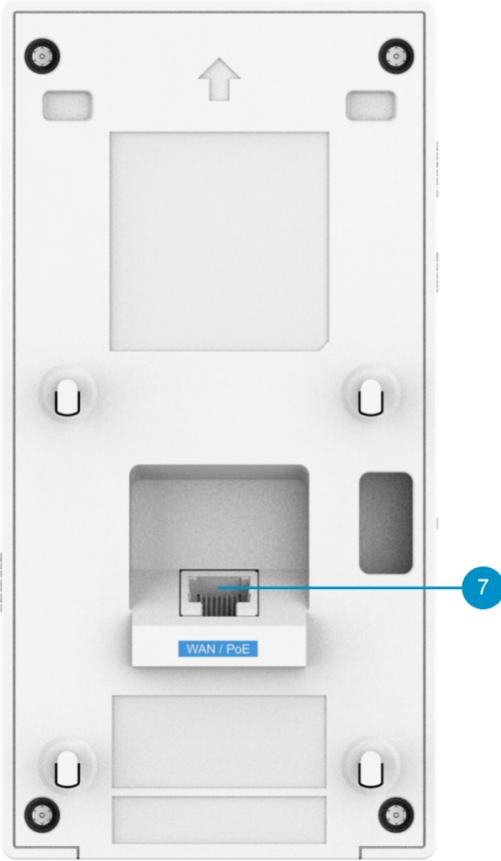
Figure 1-2 Side View**Figure 1-3 Bottom View**

Figure 1-4 Rear View**Table 1-1 Right View**

No.	Item	Description
1	LED	Used to show the running status of the system
2	DC power port	Connected to a 48 V DC power adapter to supply power to an AP
3	Console port	Micro USB-type management port, used to connect to a USB cable to manage the AP
4	Reset button	Used to reboot the device or restore the device to factory settings
5	Anti-theft lock	Used to install the anti-theft screw
6	LAN port	Connected to the downlink service ports for data transmission. The LAN1 port can provide 48 V/10 W PoE power to external devices.
7	WAN port	Connected to the uplink service ports for wired Ethernet connection and service data transmission, supporting IEEE 802.3af/at-compliant PoE

1.3 Package Contents

Table 1-2 Package Contents

No.	Item	Quantity
1	AP	1
2	Mounting bracket	1
3	Torx screw	1
4	Phillips pan head screws M4 × 20	2
5	Quick Installation Guide for Wireless AP	1
6	WLAN product management software	1

1.4 Technical Specifications

1.4.1 Dimensions and Weight

Table 1-3 Dimensions and Weight

Dimensions and Weight	AP 6WB
Dimensions (W × D × H)	170 mm × 86 mm × 43 mm
Weight	AP: 0.3 kg Mounting bracket: 0.1 kg
Installation Mode	Installed in 86-type and concealed boxes of the American and European standards or on a wall
Color	White
Anti-Theft Lock	Kensington lock
Mounting Bracket Dimensions (W × D × H)	170 mm × 86 mm × 9 mm
Mounting Hole Pattern	60-mm (86-type panel) and 83.5-mm (118-type panel)
Mounting Hole Diameter	4.3 mm × 6.6 mm (oval)

1.4.2 RF Specifications

Table 1-4 RF Specifications

RF Specifications	AP 6WB

RF Specifications	AP 6WB
Radio Design	<p>Dual-radio</p> <p>Up to a total of four spatial streams</p> <p>Radio 1: 2.4 GHz, 2 spatial streams: 2 × 2, MU-MIMO</p> <p>Radio 2: 5 GHz, 2 spatial streams: 2 × 2, MU-MIMO</p>
Operating Band	<p>Radio 1: 802.11b/g/n/ax, 2.400 GHz–2.483 GHz</p> <p>Radio 2: 802.11a/n/ac/ax, 5.150 GHz–5.350 GHz, 5.470 GHz–5.725 GHz, 5.725 GHz–5.850 GHz</p> <p>Note: The operating bands vary in different countries.</p>
Transmission Rate	<p>Radio 1: 2.4 GHz, 575 Mbps</p> <p>Radio 2: 5 GHz, 2.4 Gbps</p> <p>Maximum access rate of the AP:</p> <p>2.4 GHz+5 GHz, 2.975 Gbps</p>
Antenna Type	Built-in smart antenna
Antenna Gain	<p>BT: 2.5 dBi</p> <p>2.4 GHz: ANT1:3.6 dBi; ANT2:5.6 dBi</p> <p>5GHz: ANT1:4.6 dBi; ANT2:5.5 dBi</p>
Max. Transmit Power	<p>20 dBm</p> <p>Note: The transmit power varies based on the regulations in different countries and regions.</p>
Transmit Power Adjustment	Configurable in increments of 1 dBm
Modulation Modes	<p>OFDM: BPSK@6/9 Mbps, QPSK@12/18 Mbps, 16-QAM@24 Mbps, 64-QAM@48/54 Mbps</p> <p>DSSS: DBPSK@1 Mbps, DQPSK@2Mbps, and CCK@5.5/11 Mbps</p> <p>MIMO-OFDM: BPSK, QPSK, 16QAM, 64QAM, 256QAM, and 1024QAM</p> <p>OFDMA</p>
Receiving Sensitivity	<p>802.11b: -91 dBm (1 Mbps), -90 dBm (5 Mbps), -87 dBm (11 Mbps)</p> <p>802.11a/g: -89 dBm (6 Mbps), -82 dBm (24 Mbps), -78 dBm (36 Mbps), -72 dBm (54 Mbps)</p> <p>802.11n: -85 dBm@MCS0, -67 dBm@MCS7</p> <p>802.11ac: VHT20: -85 dBm (MCS0), -62 dBm (MCS8)</p> <p>802.11ac: VHT40: -82 dBm (MCS0), -57 dBm (MCS9)</p> <p>802.11ac: VHT80: -79 dBm (MCS0), -53 dBm (MCS9)</p> <p>802.11ax: HE80: -79 dBm (MCS0), 53 dBm (MCS9), -52 dBm (MCS11)</p> <p>802.11ax: HE160: -79 dBm (MCS0), -53 dBm (MCS9), -50 dBm (MCS11)</p>

1.4.3 Port Specifications

Table 1-5 Port Specifications

Port Specifications	AP 6WB
Fixed Service Ports	<p>Uplink: One 100/1000/2500Base-T adaptive Ethernet port, supporting IEEE 802.3af/at-compliant PoE</p> <p>Downlink: Four 10/100/1000Base-T adaptive Ethernet ports. The LAN1 port can provide 48 V/10 W PoE power to external devices.</p>
Fixed Management Ports	1 × Micro USB console port
Status Indicator	One system LED
Button	One reset button

1.4.4 Power Supply and Consumption

Table 1-6 Power Supply and Consumption

Power Supply and Consumption	AP 6WB
Power Type	<p>(1) Power supply using the power adapter (DC input voltage and current: 48 V/0.6 A)</p> <p>(2) PoE/PoE+ power supply, meeting the 802.3af/at Ethernet power supply standard</p>
Power Supply to External Devices	Not supported
Maximum Power Consumption	25 W
Power Redundancy	Not supported

 **Caution**

- To power the AP by using PoE, ensure that the device at the other end of the Ethernet cable supports IEEE 802.3af/at power supply.
- Under 802.3af power supply, external power supply of the LAN1 port is disabled.
- The AP adopts a fanless design. Therefore, maintain sufficient clearance around the AP for air circulation.

1.4.5 Environment and Reliability

Table 1-7 Standard Compliance

Environment and Reliability	AP 6WB
Temperature	Operating temperature: 0 °C to 40 °C Storage temperature: -40°C to +70°C At a height between 3000 m and 5000 m above the sea level, every time the altitude increases by 220 m, the maximum temperature decreases by 1°C.
Humidity	Operating humidity: 5% to 95% RH (non-condensing) Storage humidity: 5% to 95% RH (non-condensing)
IP Rating	IP41
Safety Regulations	GB 4943.1
EMC Regulations	GB/T 9254.1

1.5 LED and Button

 **Note**

The LED description applies to both fit and fat modes unless otherwise specified.

Table 1-8 LED Status

LED Color	Frequency	Description
Off	N/A	The AP is not powered on. The AP is powered on, but the LED is manually turned off.
Steady green	N/A	The software system of the AP is being initialized.
Steady red	N/A	The system is running properly, but the uplink service port is linked down.
Blinking red at an interval of 1s	On for 3s Off for 1s	In fit mode, the setup of a CAPWAP tunnel between the AP and AC timed out.
Blinking green at an interval of 0.2s	On for 0.2s Off for 0.2s	In fit or MACC mode, the software system of the AP is being updated and the AP cannot be powered off.
Blinking green at an interval of 1s	On for 3s Off for 1s	The software system runs properly, and the CAPWAP tunnel status is normal.
Blinking red at an interval of 0.2s	On for 0.2s Off for 0.2s	In fit mode, the AP is being located.

Table 1-9 Reset Button

Button	Operation	Result
Reset button	Press the button for less than 2s	Reboot the device.
	Press and hold the button for longer than 5s	Restore to factory settings.

2 Preparing for Installation

2.1 Safety Precautions

Note

- To avoid personal injury and device damage, carefully read the safety precautions before you install the device.
- The following safety precautions may not cover all possible dangers.

2.1.1 General Safety Precautions

- Do not expose the AP to high temperature, dusts, or harmful gases. Do not install the AP in an inflammable or explosive environment. Keep the AP away from EMI sources such as large radar stations, radio stations, and substations. Do not subject the AP to unstable voltage, vibration, and noises.
- The installation site should be free from water flooding, seepage, dripping, or condensation. The installation site should be selected according to network planning, communications equipment features, and considerations such as climate, hydrology, geology, earthquake, electrical power, and transportation.
- The installation site should be dry. It is not recommended that the AP be installed in a place near the sea. Keep the device at least 500 meters away from the ocean and do not face it towards the sea breeze.
- Do not place the device in walking areas.
- During the installation and maintenance, do not wear loose clothes, ornaments, or any other things that may be hooked by the chassis.
- Keep tools and components away from walking areas.

2.1.2 Handling Safety

- Prevent the AP from being frequently handled.
- Cut off all the power supplies and unplug all power cords before moving or handling the device.

2.1.3 Electric Safety

 **Warning**

- Improper or incorrect electric operations may cause a fire, electric shock, and other accidents, and lead to severe and fatal personal injury and device damage.
- Direct or indirect contact with high voltage or mains power supply via wet objects may cause fatal dangers.

- Observe local regulations and specifications during electric operations. Only personnel with relevant qualifications can perform such operations.
- Check whether there are potential risks in the work area. For example, check whether the ground is wet.
- Find the position of the indoor emergency power switch before installation. Cut off the power switch in case of accidents.
- Check the AP carefully for confirmation before shutting down the power supply.
- Do not place the device in a damp/wet location. Do not let any liquid enter the chassis.
- Keep the AP far away from grounding or lightning protection devices for power equipment.
- Keep the AP away from radio stations, radar stations, high-frequency high-current devices, and microwave ovens.

2.1.4 Storage Security

For proper working of the AP, the AP must be stored in an environment based on the storage temperature/humidity requirements in Specifications.

⚠ Caution

If the AP is stored for more than 18 months, power on the AP and run it for consecutive 24 hours to activate the AP.

2.2 Installation Environment Requirements

Install the device indoors to ensure its normal operation and prolonged service life.

The installation site must meet the following requirements.

2.2.1 Bearing Requirements

Evaluate the weight of the device and its accessories (such as the bracket), and ensure that the ground of the installation site meets the requirements.

2.2.2 Ventilation Requirements

Reserve sufficient space in front of the air vents to ensure normal heat dissipation. After various cables are connected, bundle the cables or place them in the cable management bracket to avoid blocking air inlets.

2.2.3 Space Requirements

Do not install the AP against walls for ease of heat dissipation and maintenance. Reserve certain space (no less than 0.1 m) when installing the upper, lower, left, and right panels, to facilitate heat dissipation.

2.2.4 Temperature/Humidity Requirements

To ensure the normal operation and a prolonged service life of the AP, maintain an appropriate temperature and humidity in the equipment room.

The equipment room with too high or too low temperature and humidity for a long period may damage the device.

- In an environment with high relative humidity, the insulating material may have bad insulation or even leak electricity.
- In an environment with low relative humidity, the insulating strip may dry and shrink, loosening screws.
- In a dry environment, static electricity is prone to occur and damage the internal circuits of the AP.
- Too high temperatures can accelerate the aging of insulation materials, greatly reducing the reliability of the AP and severely affecting its service life.

ℹ Note

The ambient temperature and humidity of the device are measured at the point that is 1.5 m above the floor and 0.4 m before the device when there is no protective plate in front or at the back of the device.

2.2.5 Cleanliness Requirements

Dust poses the top threat to the running of the device. The indoor dust falling on the AP may be adhered by static electricity, causing poor contact of the metallic joint. Such electrostatic adherence may occur more easily when the relative humidity is low, not only affecting the service life of the AP, but also causing communication

faults. The following table describes the requirements for the dust content and granularity in the equipment room.

Table 2-1 Requirements for Dust

Dust	Unit	Content
Dust particles (diameter $\leq 0.5 \mu\text{m}$)	Particles/m ³	$\leq 1.4 \times 10^7$
Dust particles ($0.5 \mu\text{m} < \text{diameter} \leq 1 \mu\text{m}$)	Particles/m ³	$\leq 7 \times 10^5$
Dust particles ($1 \mu\text{m} < \text{diameter} \leq 3 \mu\text{m}$)	Particles/m ³	$\leq 2.4 \times 10^5$
Dust particles ($3 \mu\text{m} < \text{diameter} \leq 5 \mu\text{m}$)	Particles/m ³	$\leq 1.3 \times 10^5$

Apart from dust, the salt, acid, and sulfide in the air in the equipment room must also meet strict requirements. These harmful substances will accelerate metal corrosion and component aging. Therefore, the equipment room should be properly protected against the intrusion of harmful gases, such as sulfur dioxide, hydrogen sulfide, nitrogen dioxide, and chlorine gas. The following table lists limit values for harmful gases.

Table 2-2 Requirements for Gases

Gas	Average (mg/m ³)	Maximum (mg/m ³)
Sulfur dioxide (SO ₂)	0.2	1.5
Hydrogen sulfide (H ₂ S)	0.006	0.03
Nitrogen dioxide (NO ₂)	0.04	0.15
Ammonia gas (NH ₃)	0.05	0.15
Chlorine gas (Cl ₂)	0.01	0.3

 **Note**

Average refers to the average value of harmful gases measured in one week. Maximum refers to the upper limit of harmful gases measured in one week, and the maximum value cannot last for more than 30 minutes every day.

2.2.6 Anti-Interference Requirements

- Take interference prevention measures for the power supply system.
- Keep the AP away from the grounding equipment or lightning and grounding equipment of the power device as much as possible.
- Keep the AP far away from high-frequency current devices such as the high-power radio transmitting station and radar launcher.
- Take electromagnetic shielding measures when necessary.

2.2.7 Lightning Protection Requirements

The AP 6WB can guard against lightning strikes. As an electric device, too strong lightning strikes may still damage the device. Take the following lightning protection measures:

- Ensure that the neutral point of the AC power socket is in good contact with the ground.
- It is recommended that you install a power lightning arrester in front of the power input end to enhance the lightning prevention for the power supply.

2.2.8 Other Requirements

When the device is installed on the wall, the following conditions must be met:

- The installation site allows for proper cooling and ventilation. Install air conditioners in hot areas.
- The mounting location must be sturdy enough to support the weight of the device and its accessories.

2.3 Tools

Table 2-3 Tools

Common Tools	Phillips screwdriver, wires, Ethernet cables, fastening bolts, diagonal pliers, and binding straps
Special Tools	ESD gloves, wire stripper, crimping pliers, RJ45 crimping pliers, and wire cutter
Meter	Multimeter and bit error rate tester (BERT)
Relevant Devices	PC, display, and keyboard

 **Note**

AP 6WB is not shipped with a tool kit. You need to prepare a tool kit by yourself.

3 Installation


It is required that AP 6WB be fixed indoors.

 **Caution**

Before installing the device, make sure that you have carefully read the requirements described in Chapter 2.

3.1 Installation Procedure

The installation steps are shown in the following figure.

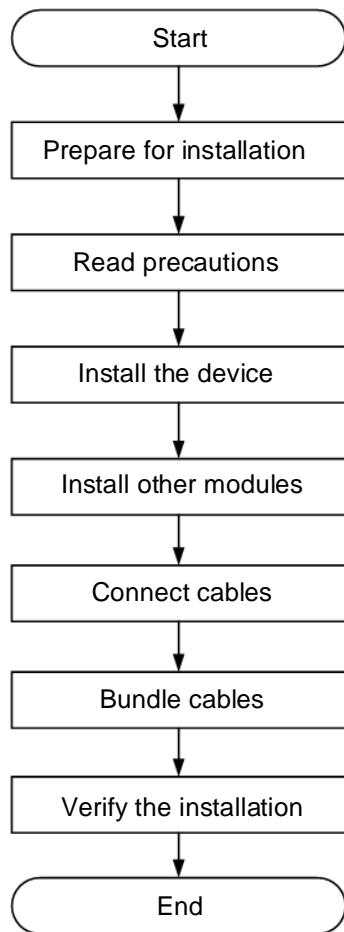
Figure 3-1 Installation Procedure

3.2 Checking Before Installation

Carefully plan and arrange the installation location, networking mode, power supply, and cabling before installing the device.

Confirm the following requirements before installation:

- The installation location provides sufficient space for heat dissipation.
- The installation location meets the temperature and humidity requirements of the device.
- The power supply and required current are available in the installation location.
- The Ethernet cables have been deployed in the installation location.
- The selected power supply meets the system power requirements.
- The position of the indoor emergency power switch is found before installation, so that the power switch can be cut off in case of accidents.
- The mounting bracket dimensions and mounting hole pattern should meet the dimensions requirements in the technical specifications. The following figure shows the mounting bracket dimensions.

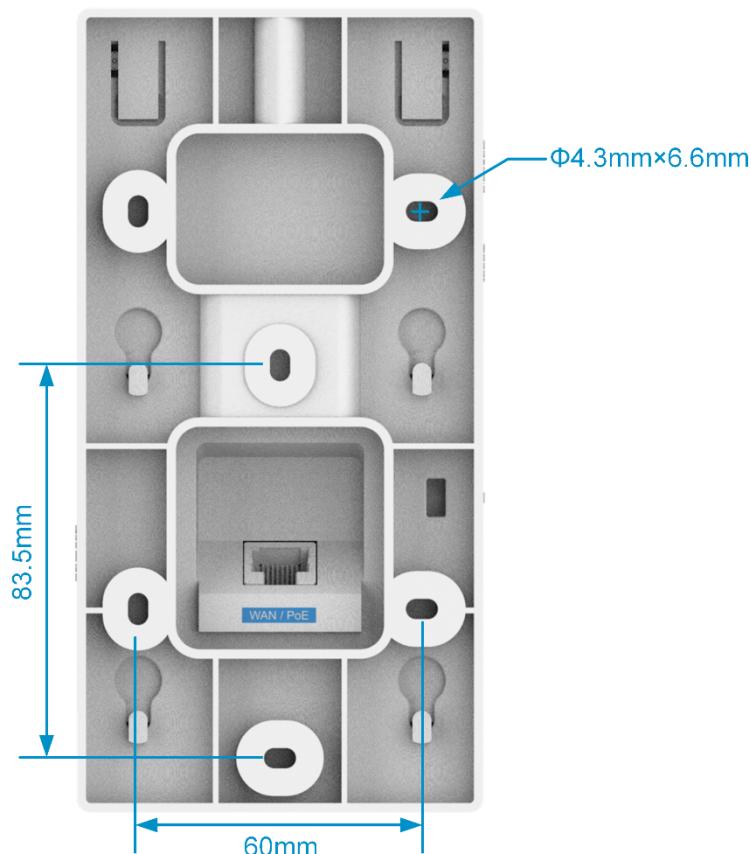Figure 3-2 Bracket Dimensions

3.3 Precautions

To ensure the normal operation and prolonged service life of the AP, observe the following safety precautions:

- Do not power on the device during installation.
- Place the device in a well-ventilated environment.
- Do not subject the device to high temperatures.
- Keep the device away from high-voltage power cables.
- Install the device indoors.
- Do not expose the device in a thunderstorm or strong electric field.
- Keep the device clean and dust-free.
- Cut off the power switch before cleaning the device.
- Do not wipe the device with a damp cloth.
- Do not wash the device with liquid.
- Do not open the enclosure when the device is working.
- Fasten the device tightly.

3.4 Installing the Device


3.4.1 Embedding in an 86-type Panel

 **Note**


The method for installing the AP in a 118-type panel is similar to that in an 86-type panel. For details, see the installation process in an 86-type panel.

- (1) Use a screwdriver to disassemble the 86-type panel on the wall. (If there is no 86-type panel, ignore this step.)


Figure 3-3 Removing the 86-type Panel

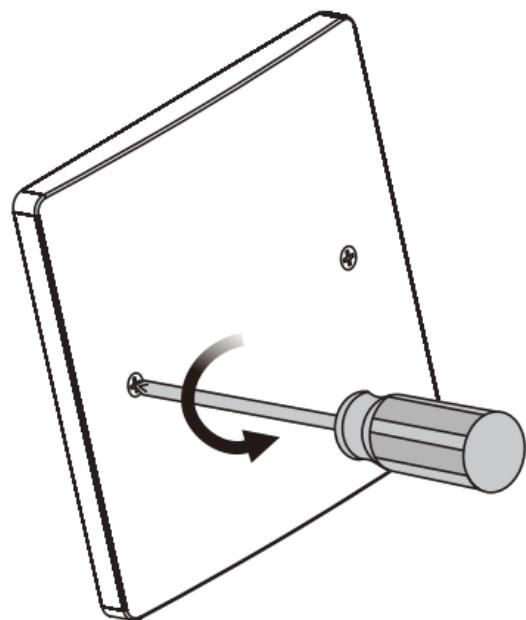

- (2) Align the round groove holes on the mounting bracket with the screw holes on the 86-type panel and use the two cross recessed pan head screws delivered with the device to secure the mounting bracket on the 86-type panel.

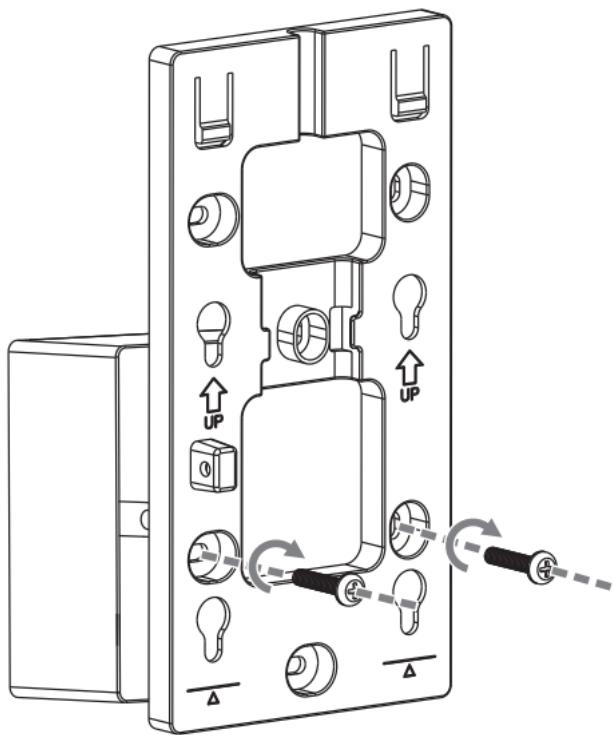Figure 3-4 Installing the Mounting Bracket

- (3) Lead the uplink data cable out of the opening reserved on the mounting bracket and connect it with the WAN/PoE port on the back of the AP.

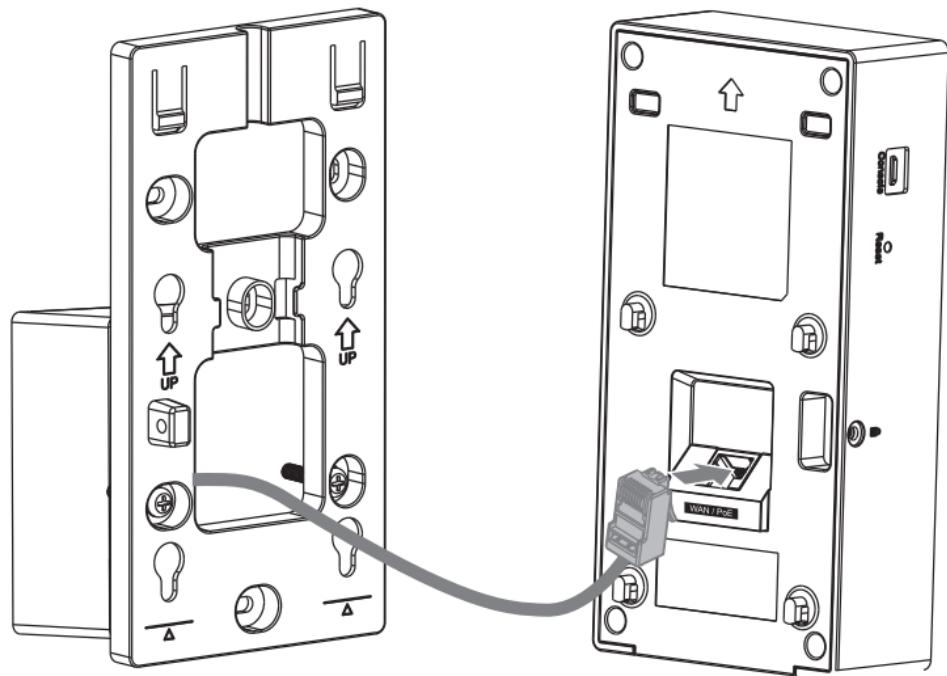Figure 3-5 Connecting the Data Cable

(4) Secure the device with the optical fiber connected to the mounting bracket by using the hooks delivered with the device. During installation, align the hooks with round holes on the mounting bracket and buckle them from up to down.

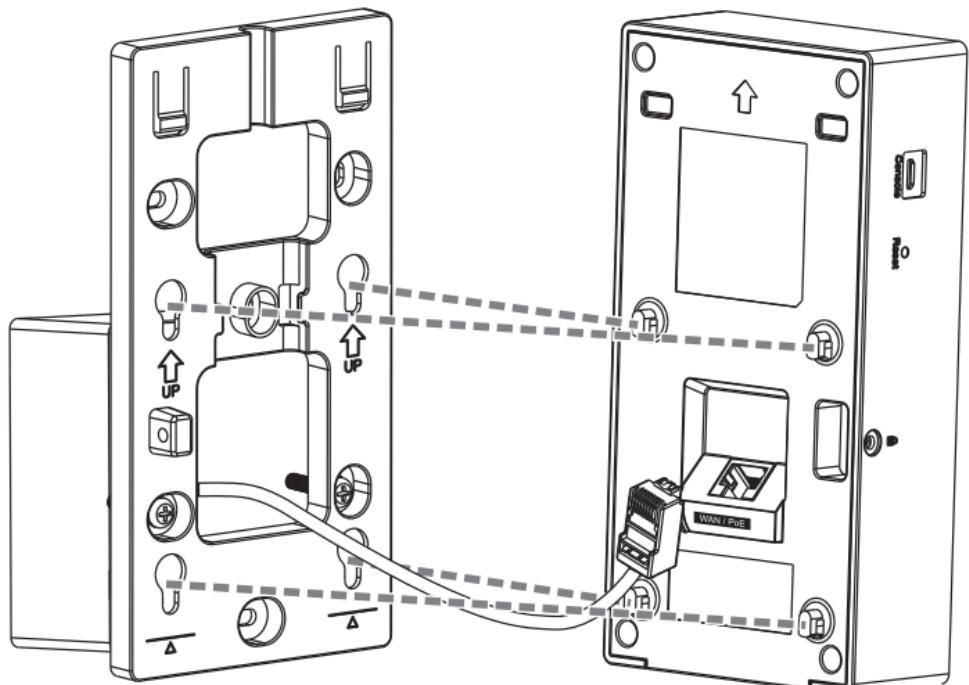
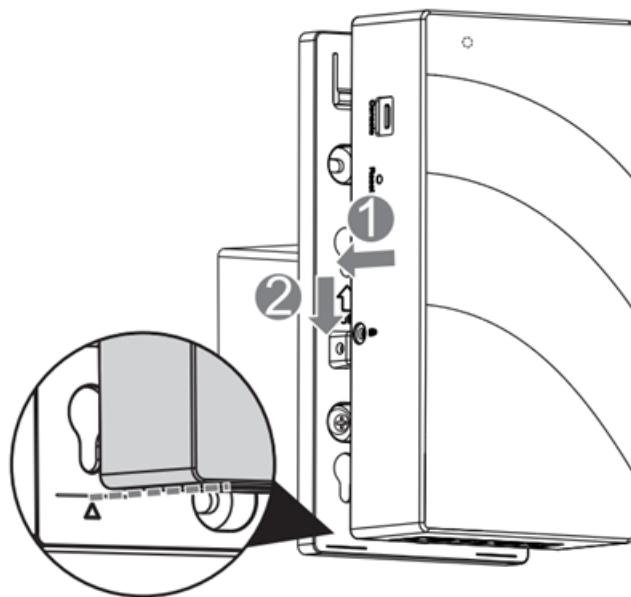
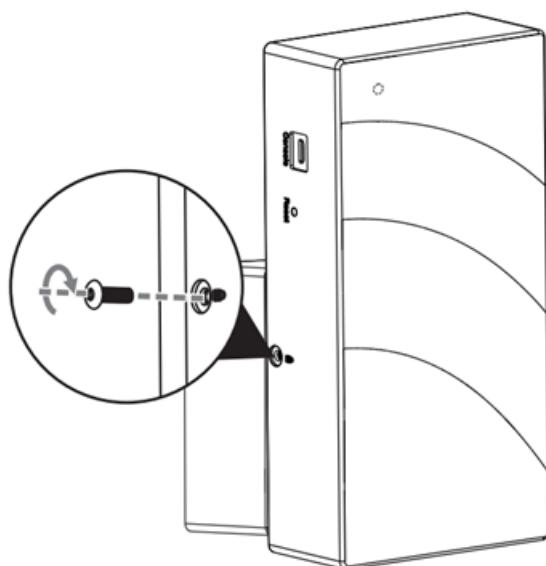
Figure 3-6 Fixing the AP

Figure 3-7 **Installing the AP**

(5) Use a torx screwdriver to lock the torx screw to the anti-theft lock on the side of the AP.

Figure 3-8 **Installing the Anti-Theft Screw****⚠ Caution**


- When installing or moving the wireless AP, ensure that the power supply is cut off.
- Ensure that the screws are tightened.
- Ensure that the wireless AP installation position facilitates indicator status observation.

- Ensure that the device is at least 10 cm away from other objects in the upper, lower, left, and right directions, and no obstacle is under the device that blocks cables out from the network port.

3.4.2 Removing the AP

Use a torx screwdriver to remove the anti-theft screw on the side of the AP and push the AP upwards to remove it.

Figure 3-9 Removing the Anti-Theft Screw

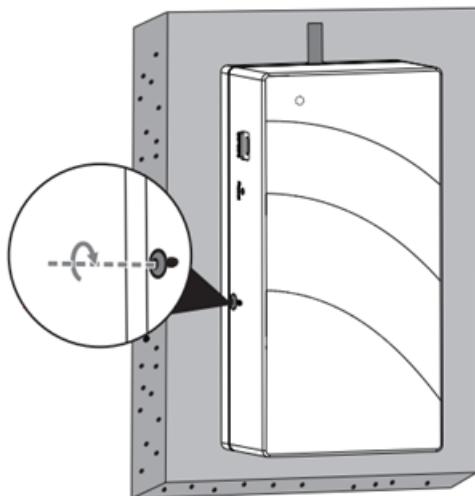

3.5 Connecting Cables

Connect twisted pairs with the WAN/PoE port on the AP. See [7.1 Connectors and Media](#) for supported wiring of twisted pairs.

⚠ Caution

By default, the baud rate is set to **9600**, data bit to **8**, stop bit to **1**, with no parity check and no flow control on the console port of the AP. The console port is used only when you want to configure the AP manually.

3.6 Bundling Cables

3.6.1 Precautions

- Bundle cables neatly to ensure aesthetics.
- Bend twisted pairs naturally or to a large radius close to the connector.
- Do not over tighten twisted pair bundle as it may reduce the cable life and performance.

3.6.2 Bundling Steps

- 1) Bundle the hanging part of the twisted pairs using cable ties and lead them to the WAN/PoE port end of the AP by convenience.
- 2) Fasten the twisted pair cables to the cable trough of the mounting bracket.
- 3) When bundling the twisted pair cables, extend them under the AP and maintain a straight line.

3.7 Installation Verification

3.7.1 Checking the AP

- Verify that the external power supply matches with the AP.
- Verify that the cabinet is securely fastened and will not move or fall.

3.7.2 Checking Cable Connections

- Verify that the twisted pair cable matches the port.
- Verify that cables are properly bundled.

3.7.3 Checking the Power Supply

- Verify that the power cord is properly connected and compliant with safety requirements.
- Turn on the power supply to supply power to the AP. Verify that the AP works properly.

4 Debugging

4.1 Establishing the Configuration Environment

Use a power adapter or PoE to power the AP.

When setting up the environment, pay attention to the following:

- Verify that the AP is properly connected to the power source.
- Connect the AP to an AC through a twisted pair cable.
- When the AP is connected with a PC, verify that the PC and PoE switch are properly grounded.

4.2 Powering on the AP

4.2.1 Checklist Before Power-on

- Check whether the power cord is properly connected.
- Check whether the power supply voltage is the same as that required by the AP.

4.2.2 Checking the Environment After Power-on

After power-on, you are advised to check the following to ensure the normal operation of the AP:

- Check if any message is printed on the configuration interface of the device.

- Check whether the LEDs are normal.

5 Monitoring and Maintenance

5.1 Monitoring

5.1.1 LED

You can observe the LEDs to monitor the device in operation.

5.1.2 CLI Commands

You can run related commands on the CLI of the device to remotely monitor the device, including:

- Port configuration and status
- System logs

 **Note**

- For details about the commands, see the corresponding configuration guide.
- The AP supports remote maintenance.

5.2 Remote Maintenance


- If the AP works in fat mode, you can log in to the AP remotely for maintenance.
- If the AP works in fit mode, you can use an AC to centrally manage and maintain the AP.

5.3 Hardware Maintenance

If the hardware is faulty, please contact Nomadix technical support.

6 Troubleshooting

6.1 General Troubleshooting Procedure

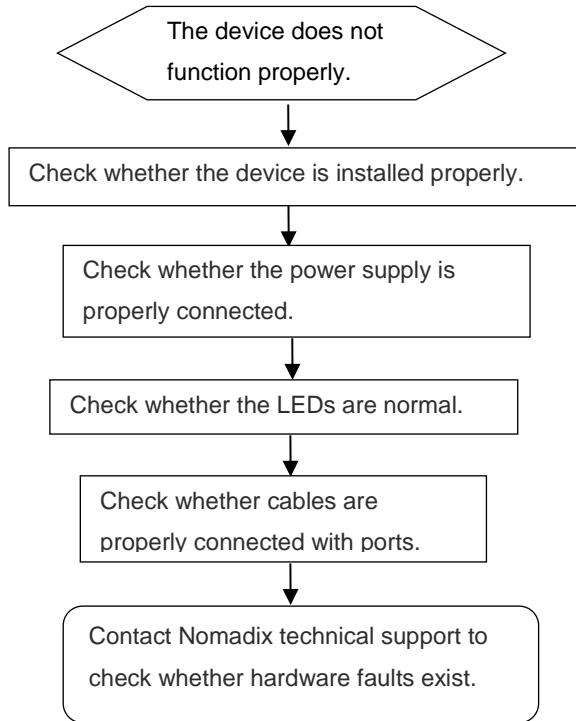

6.2 Common Troubleshooting Procedures

6.2.1 Ethernet Port Is Not Working After the Ethernet Cable Is Plugged In

Verify that the device at the other end of the Ethernet cable is working properly. And then verify that the Ethernet cable is capable of providing the required data rate and is properly connected.

6.2.2 LED Is Off for a Long Time

Check whether the other end of the PoE cable supports 802.11af power supply, and check whether the Ethernet cable is connected properly.

6.2.3 LED Is Steady Red

The LED keeps steady red for a long time, indicating that the Ethernet port is not connected. Verify the Ethernet connection.

6.2.4 LED Is Steady Green

The device performs initialization after power-on. During this period, the LED keeps steady green and does not turn normal blue until the initialization is completed. Note: If the steady green persists for an hour, the device initialization fails and the device is faulty.

6.2.5 LED Blinks Green at an Interval of 0.2s for a Long Time

Sometimes the AP performs software upgrade after power-on. During this period, the LED keeps blinking green at an interval of 0.2s and enters the normal state of quick off after blinking green until the upgrade is completed. Note: Do not plug or unplug the power cord when the LED is blinking as software upgrade takes time. If the blinking persists for 10 minutes, the device fails to complete software upgrade and is faulty.

6.2.6 LED Blinks Red at an Interval of 1s for a Long Time

If the LED blinks red at an interval of 1s after the system starts, the AP probably has not established a proper CAPWAP connection with the AC. Verify that the AC is operational and configured properly.

6.2.7 No Wireless Signal Searched

- (1) Verify that the device is properly powered.
- (2) Verify that the Ethernet port is correctly connected.
- (3) Verify that the AP is correctly configured.
- (4) Move the client device to adjust the distance between the client and the AP.

7 Appendix

7.1 Connectors and Media


- 2500BASE-T/1000BASE-T/100BASE-TX/10BASE-T port

The 2500BASE-T/1000BASE-T/100BASE-TX/10BASE-T port is a 10/100/1000 Mbps auto-sensing port that supports auto MDI/MDIX Crossover.

Compliant with IEEE 802.3bz, the 2500BASE-T port requires at least Category 6 STP with a maximum distance of 100 meters.

Compliant with IEEE 802.3ab, the 1000BASE-T port requires 100-ohm Category 5/5e UTP or STP with a maximum distance of 100 meters.

The 1000BASE-T port requires all four pairs of wires be connected for data transmission. The following figure shows the four pairs of wires for the 1000BASE-T port.

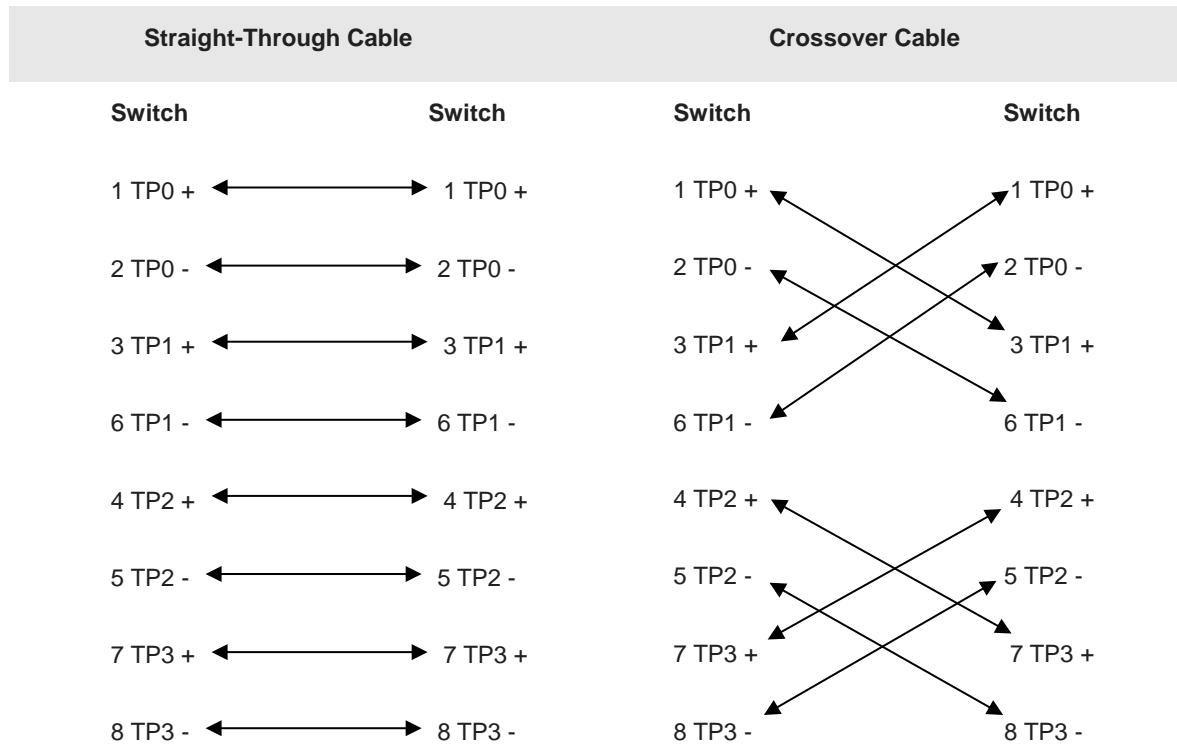
Figure 7-1 1000BASE-T Twisted Pair Connections

In addition to cables with the above-mentioned specifications, the 100BASE-TX/10BASE-T port can be connected using 100-ohm CAT-3, CAT-4, and CAT-5 cables for at 10 Mbps data speed or using to 100-ohm CAT-5 cables for at 100 Mbps data speed with a maximum connection distance of 100 meters. The following table shows 100BASE-TX/10BASE-T pin assignments.

Figure 7-2 100BASE-TX/10BASE-T Pin Assignments

Pin	Socket	Plug
1	Input Receive Data+	Output Transmit Data+
2	Input Receive Data-	Output Transmit Data-
3	Output Transmit Data+	Input Receive Data+
6	Output Transmit Data-	Input Receive Data-
4, 5, 7, 8	Not Used	Not Used

The following figure shows wiring of straight-through and crossover cables for 100BASE-TX/10BASE-T.

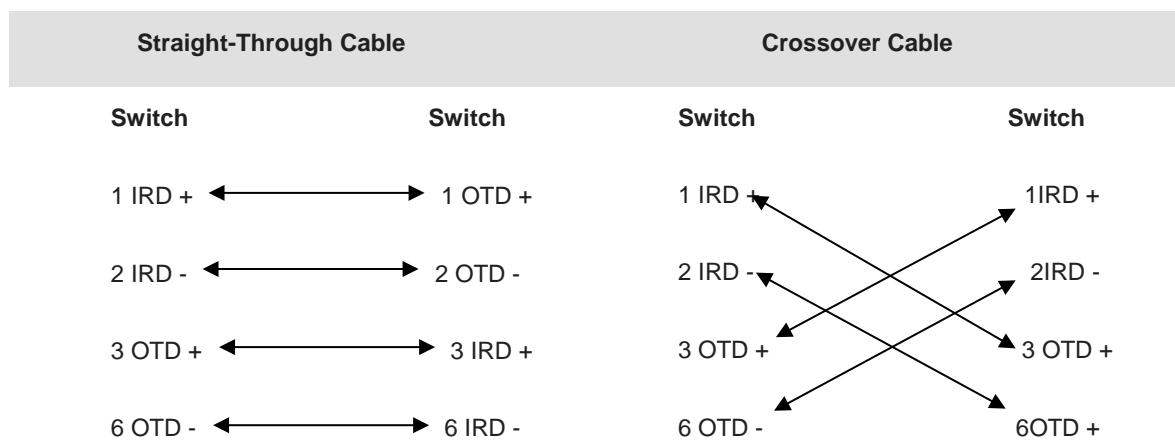
Figure 7-3 100BASE-TX/10BASE-T Twisted Pair Connections

7.2 Cabling Recommendations

During installation, route cable bundles upward or downward along the sides of the rack depending on the actual situation in the equipment room. All cable connectors should be placed at the bottom of the cabinet rather than be exposed outside of the cabinet. Power cords are routed beside the cabinet, and top cabling or bottom cabling is adopted according to the actual situation in the equipment room, such as the positions of the DC power distribution box, AC socket, or lightning protection box.

- Requirement for the Minimum Cable Bend Radius
 - The bend radius of a power cable, communication cable, or flat cable should be over five times greater than their respective diameters. The bend radius of these cables that is often bent or plugged or unplugged should be over seven times greater than their respective diameters.
 - The bend radius of a fixed common coaxial cable should be over seven times greater than its diameter. The bend radius of the common coaxial cable that is often bent or plugged should be over 10 times greater than its diameter.
 - The minimum bend radius of a high-speed cable, such as an SFP+ cable should be over five times the overall diameter of the cable. If the cable is frequently bent, plugged or unplugged, the bend radius should be over 10 times the overall diameter.
- Precautions for Cable Bundling
 - Before cables are bundled, mark labels and stick the labels to cables wherever appropriate.
 - Cables should be neatly and properly bundled in the cabinet without twisting or bending, as shown in [Figure 7-4](#).


Figure 7-4 Bundling Cables

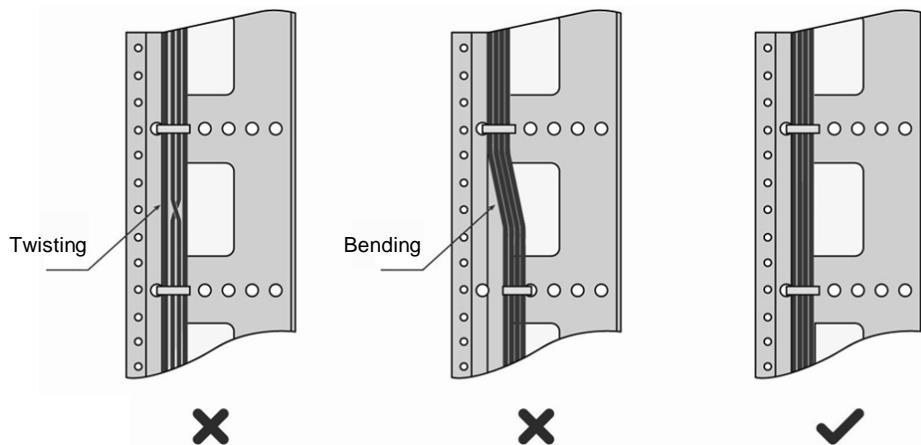

- Cables of different types (such as power cables, signal cables, and ground cables) should be separated in cabling and bundling. Mixed bundling is not allowed. When they are close to each other, it is recommended that crossover cabling be adopted. In the case of parallel cabling, maintain a minimum distance of 30 mm between power cords and signal cables.
- The cable management brackets and cabling troughs inside and outside the cabinet should be smooth without sharp corners.
- The metal hole traversed by cables should have a smooth and fully rounding surface or an insulated lining.


- Proper cable ties should be selected to bundle up cables. It is forbidden to connect two or more cable ties to bundle up cables.
- After bundling up cables with cable ties, cut off the remaining part. The cut should be smooth and trim, without sharp corners, as shown in [Figure 7-5](#).

Figure 7-5 Cutting off Excess Cable Tie

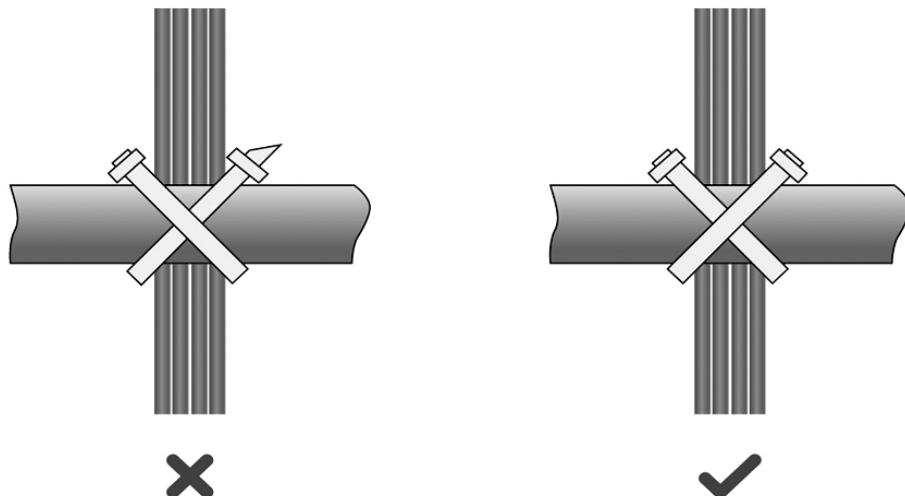

- When cables need to be bent, bind them first but do not tie cable ties within the bend. Otherwise, considerable stress may be generated in cables, breaking cable cores, as shown in [Figure 7-6](#).


Figure 7-6 Binding Cables

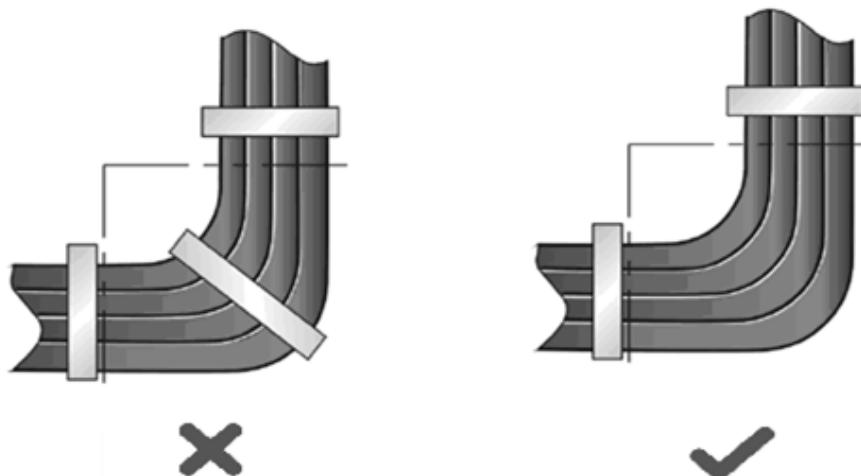

- Cables not to be assembled or remaining parts of cables should be folded and placed in a proper position of the cabinet or cable trough. The proper position indicates a position that will not affect device running or cause device damage or cable damage during debugging.
- 220 V and -48 V power cables must not be bundled on the guide rails of moving parts.
- The power cables connecting moving parts such as door grounding wires should be reserved with some access after being assembled to avoid suffering tension or stress. When a moving part reaches the installation position, the remaining cable part should not touch heat sources, sharp corners, or sharp edges. If heat sources cannot be avoided, high-temperature cables should be used.

- When screw threads are used to fasten cable terminals, the bolt or screw must be tightly fastened, and anti-loosening measures should be taken, as shown in [Figure 7-7](#).

Figure 7-7 Fastening Cable Lugs

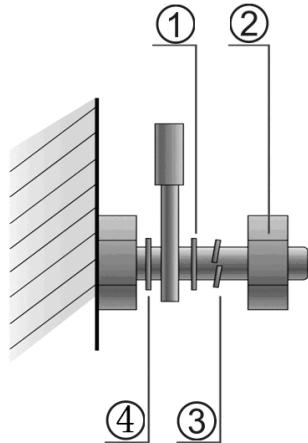

Description	<ul style="list-style-type: none"> ① Flat washer ② Nut 	<ul style="list-style-type: none"> ③ Spring washer ④ Flat washer
--------------------	--	--

- Hard power cords should be fastened in the terminal connection area to prevent stress on terminal connection and cable.
- Do not use self-tapping screws to fasten terminals.
- Power cables of the same type and in the same cabling direction should be bundled up into cable bunches, with cables in cable bunches clean and straight.
- Bundle up cables using cable ties based on the following table.

Cable Bunch Diameter (mm)	Distance Between Every Binding Point (mm)
10	80–150
10–30	150–200
30	200–300

- No knot is allowed in cabling or bundling.
- For wiring terminal blocks (such as circuit breakers) with cord end terminals, the metal part of the cord end terminal should not be exposed outside the terminal block when assembled.


7.3 Power Adapter Specifications

- Input voltage: 48 V DC; rated current: 0.6 A

Table 7-1 Technical Specifications of the DC Power Connector

Inner Diameter	Outer Diameter	Depth	Polarity
2.1 mm	5.5 mm	10 mm	Center positive

Figure 7-8 Power Adapter Dimensions

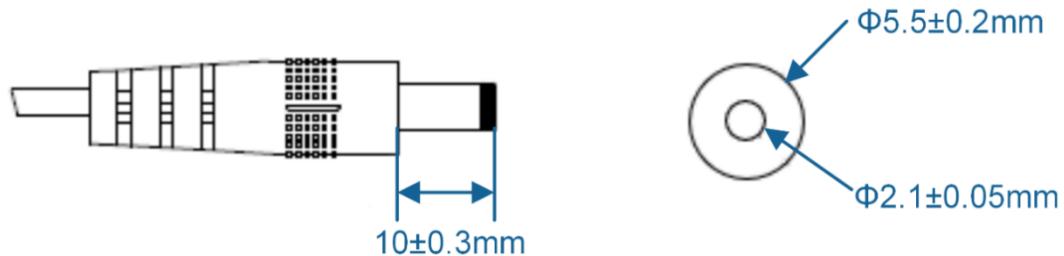

Warning

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

1.the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

2.for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;

3.for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate.

1.les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

2.le gain maximal d'antenne permis pour les dispositifs utilisant les bandes 5250-5350 MHz et 5470-5725 MHz doit se conformer à la limite de p.i.r.e.;

3.le gain maximal d'antenne permis (pour les dispositifs utilisant la bande 5725-5850 MHz) doit se conformer à la limite de p.i.r.e. spécifiée pour l'exploitation point à point et non point à point, selon le cas.