

WD-300英文折页说明书：单页尺寸 71x99mm(双面印刷)

20210831

正面



WD-300
Wireless Charge Clock Speaker

USER GUIDE

Hello! Let's get started!

封面 p1


p2

p3

p4

p5

背面

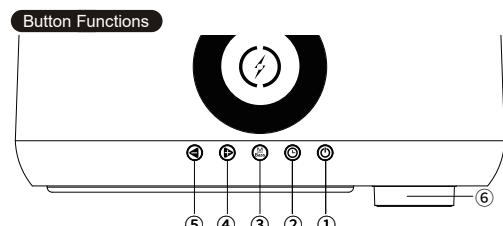

Button Functions

- ① Power Button: Press & Hold: On/Off
Short Press after power on: Clock Mode/ On
- ② Clock Button: Short Press: Set Time
Press & Hold: Alarm On/Off
Press Twice: Set Alarm
- ③ Bass Mode/Bass Button: Short press: Switch modes
Press & Hold: Bass Adjust
- ④ Next Button: Short press: Next Track/BT/TF Card mode/
Next Channel (FM Radio)/
Add Hours/Minutes (Clock Mode)/
Alarm Dismiss (When alarm buzzes)
- ⑤ Previous Button: Short press: Previous Track/BT/TF Card mode/
Previous Channel (FM Radio)/
Minus Hours/Minutes (Clock Mode)/
Alarm Dismiss (When alarm buzzes)
- ⑥ Multi-Functional Knob: Turn Knob:
Adjust volume/
Adjust bass level (Bass adjust mode)/
Adjust Hours/Minutes (Clock Mode)

Operation

• Charging the device

This device has a built-in rechargeable battery. To charge the device, use the provided USB Type-C Cable, connect the Type-C connector to the Type-C Input on the device, and the Standard USB-A Connector to a fast charging plug/Adaptor (Not Included)*. The red charging led indicator illuminates when charging and turns off when charging is complete.

Note: Wireless charge function requires power connection to the charging plug.

• Wireless Charge your mobile device

Connection to a fast charging plug is required to power the wireless charging function. The connection procedures are the same as how the device is connected for charging (Please see the steps above). After the power is connected, place your mobile device on the circular silicon pad of the powered WD-300. Make sure your mobile device is centered according to the silicone pad for best wireless charge efficiency. You may try to adjust the position of your mobile device if charging is not stable. The wireless charge led indicator turns on when charging.

Note 1: Some phone cases may affect or block the wireless charging transmission, remove the case if necessary.

Note 2: The wireless charge led indicator blinks if metals are detected indicating there is an abnormal situation. Remove any metals on the device to prevent overheating.

Note 3: 10W/7.5W wireless charge output require the device to be connected to a 9V-2A QC 3.0/PD fast charging plug. Connecting the device to a 5V-3A charging plug can only provide 5W wireless charging output.

Using a non qualified power plug may result in malfunctioning of the device.

Note 4: The charging plug may not provide sufficient power if the wireless charging function, speaker function and USB charge out function are all used at the same time. In such situation, remove the USB connection is recommended.

• Power On/Off & Switch modes

Press and hold the **[O]** button to turn on the speaker. Short press the **[Bass]** button to switch modes. Short press the **[O]** button to enter clock mode. Short press the **[O]** button in clock mode to switch on the device for other modes.

• Bluetooth Pairing

Press the **[M]** button repeatedly to enter Pairing mode. The word "BLUE" will start blinking on the speaker indicating that it is waiting for device to pair. On your Bluetooth device, find and select "WD-300 / WD-300A" under your bluetooth device listing to pair. A successful connection via bluetooth will be followed by an audible notification. For help with Bluetooth Settings, please consult your device's user manual.

• Handsfree Speakerphone

The handsfree speakerphone function is enabled when the device is paired with your mobile device. Press the **[Pil]** knob to answer an incoming call. To decline a call without answering, press and hold the **[Pil]** knob during an incoming call. To end a call, press the **[Pil]** knob during a call. For the best conversation experience, make sure the WD-300 unit is placed near (within 40cm) the user.

• FM Radio

Press the **[M]** button repeatedly to enter FM radio mode. Press and hold the **[Snooze]** knob to initial automatic channel search. Searched channels will be saved automatically. Press the **[<]** or **[>]** button to switch channels. Short press the **[Pil]** knob to mute the speaker when listening to the radio and short press the button again to unmute.

Note 1: When using FM Radio mode, please plug in the provided AUX cable to the AUX Jack on the device. The cable acts as an external antenna for radio reception. You can adjust the position of the cable for better radio reception.

Note 2: Please note that FM signal can be weaken MUCH depending on the type of building you are in. (For example, It can be hard to catch proper signal when being in a concrete building or basements.)

Note 3: There may be signal interference and an increase in noise in FM radio mode when wireless charge function is being used at the same time.

• TF Card

Insert a TF card to enter TF card mode or press the **[M]** button to switch to TF card mode if card is already inserted. Press the **[<]** or **[>]** button to select music from the card. Press the **[Snooze]** knob to play/pause music.

• Auxiliary Connectin (AUX)

Use the provided AUX cable, connect one end to the AUX Out jack of your audio source device and the other end to the AUX In jack on the WD-300 device. Press the **[M]** button to switch AUX mode. Press the **[Pil]** knob to mute/unmute the speaker.

• Setting the clock

This device automatically synchronizes the time on your mobile phone after it is connected with your phone through bluetooth. However, it requires your phone to support this function in order to synchronize the time to the device. If the time on the device is not updated after it is connected to the phone through bluetooth, then you may need to set the time manually through the following procedures:

Short press the **[O]** button to set the time. Press the **[<]** or **[>]** button or turn the knob to set the hour then press the **[Pil]** knob to confirm. Now press the **[<]** or **[>]** button or turn the knob to set the minute and press the **[Pil]** knob to confirm.

• Setting the alarm

Press the **[Pil]** button twice quickly to set the alarm. Press the **[<]** or **[>]** button or turn the knob to set the hour then press the **[Pil]** knob to confirm. Now press the **[<]** or **[>]** button or turn the **[Pil]** knob to set the minute and press the **[Pil]** knob to confirm. Once the alarm is set, a white dot next to the clock digits will appear indicating that an alarm has been set.

• Snooze/Alarm Dimiss & Alarm On/Off

Press the **[Pil]** knob when the alarm buzzes to snooze for 5 minutes. Press any buttons (Except On/Off button & the Snooze button) to dismiss the alarm when it buzzes. The alarm will still buzz on the next day. To disable the alarm completely, press and hold the **[O]** button until the white dot next to the clock digits disappear.

• Soothing Mode/ White noise mode

(Optional) Only available in WD-300A soothing mode version.) Press the **[M]** button to switch to Soothing mode. Press the **[<]** or **[>]** button to select soothing sounds. Press the **[Pil]** knob to play/pause soothing sound. Soothing sound/music will automatically stop if the speaker has not been operated for 30 mins.

• Specifications

• BT version:	V5.0	• Charging output:	5W/7.5W/10W
• Wireless Distance:	≤10m	• Input voltage:	5V-3A / 9V-2A
• Speaker Power:	3W	• Size:	195x105x72 mm
• Speaker impedance:	4Ω	• Battery Capacity:	1200mAh

We produce quality products with our heart for our customers. If you encounter any difficulty in using our product please feel free to contact us and we will sincerely serve every customer. Contact information can be found from the online/offline store that you purchased this item.


p6

p7

p8

p9

p10

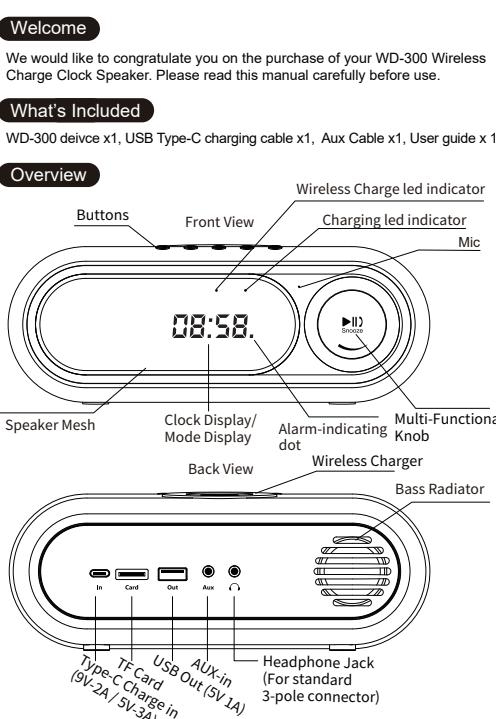

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.