 



Thank you for purchasing the Griffin Magnetic Powerbank 5000mAh with Wireless Charging, item GRFPB1001-BLK. Charge compatible devices with your power bank. Please read this manual carefully before charging devices with the wall charger.

A QUICK LOOK

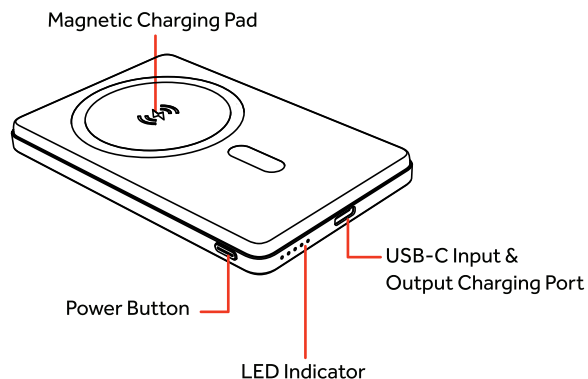


CHARGING THE POWERBANK

 
1. Insert one end of the included USB-C to USB-C charging cable into the USB-C port of the power bank.

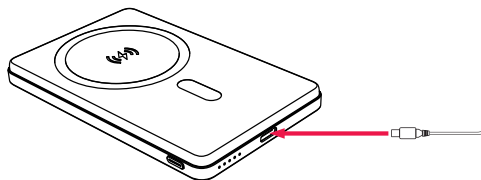

 2. Insert the other end of the charging cable into the USB-C port of a compatible charging adapter (not included).

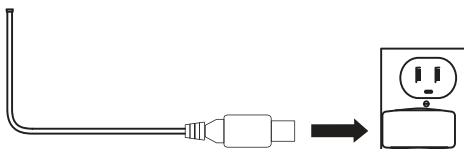

 3. The light indicators will illuminate progressively while the power bank is charging to indicate the battery level. Four light indicators will illuminate a solid light once your power bank is fully charged.

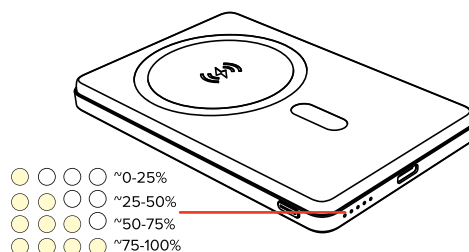

Important: The power bank's internal battery will become depleted over time if left idle. Periodically charge your power bank if it is left unused for extended periods.

CHARGING YOUR DEVICES

Press the power button until the LED indicators turn ON.

If you have a phone with wireless charging capability, place it on the Magnetic Wireless Charging Pad to charge it. Make sure to remove any thick or heavy phone case before charging your phone.

For best results try to place your phone as close to the center of the charging pad as possible.

Note: Be careful when using your phone while it is on the power bank. Be sure to avoid abrupt motions which may cause your phone to fall off, leading to possible damage.

If your phone cannot be charged wirelessly, use a compatible USB-C charging cable (not included) and plug one end into your phone's charging port and the other end into the USB-C port on your device.

When properly connected the power bank's indicator lights will illuminate. View the phone's display screen to see your phone's charging progress.

Warning: Do not place any metallic items other than compatible smartphones on the charging surface.

NOTE: On iPhones 8 and higher, there may be some heating while charging. If your phone becomes too hot while charging it is possible that the phone limits wireless charging to 80%. Remove the phone from the charger, wait until it cools, and try charging again, making sure to charge in a cool, dry place.

MAGNETIC POWERBANK

5000mAh with Wireless Charging



SPECIFICATIONS

Battery Type: Lithium Ion Polymer Cell

Battery Capacity: 5000mAh

Type-C Input: 5V=3A 9V=2A 12V=1.5A

Type-C Output: 5V=3A 9V=2.22A 12V=1.67A

Wireless Charging Output: 5W 7.5W 10W 15W

IMPORTANT SAFETY PRECAUTIONS

When using your Power Bank, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR POWER BANK.
2. Never expose your power bank to high temperatures, extreme cold, high humidity or any moisture or water.
3. In order to avoid the risk of electric shock, never attempt to open your power bank or repair it without the assistance of a certified professional.
4. Your power bank is not to be used by children or the infirm without adult supervision.
5. When your smartphone or USB device is fully charged, unplug it from your power bank.
6. Do not use your power bank at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop your power bank, throw it, or subject it to strong impacts or physical trauma.
8. If you detect any abnormalities when using your power bank, contact the manufacturer for support. In addition, do not continue to use your power bank if you detect any leakage, smoke or fire.
9. If fluid from inside the power bank gets into your eyes, do not rub your eyes. Wash your eyes with clean water and immediately contact a physician.
10. When connected do not place your power bank on flammable materials such as rugs, carpets or bedding.
11. Do not charge the power bank and charge an electronic device at the same time. This will shorten the power bank's battery life.
12. Do not place any metallic items other than compatible smartphones on the charging surface.
13. Only place compatible phones on the charging surface. The use of incompatible phones can cause your charger to overheat.
14. Wireless charging may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz
15. Do not use harsh chemicals when cleaning your power bank, and never submerge your power bank in water.



Risk of Fire and Burns.

Do Not Open, Crush, Heat Above 104°F (40°C) or Incinerate.
Always Follow All Manufacturer's Instructions When Using.

MAINTENANCE AND CARE

- Before using your power bank, inspect the ports and plugs to make sure that they are clear of dust and debris before charging a device or inserting a Micro USB cable.
- Use a soft cloth to clean your power bank. Never use any harsh chemicals or detergents. Make sure your power bank is dry before using.
- When your power bank is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a USB cable that is connected to your power bank. Connect and disconnect all cables as carefully as possible.
- Please recycle or dispose of your power bank properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your product for further information.

CONTENTS

- 5000mAh Powerbank
- USB-C to USB-C Charging Cable
- User's Manual With Warranty Information

ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.griffintechology.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR GSICS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by GSICS. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

