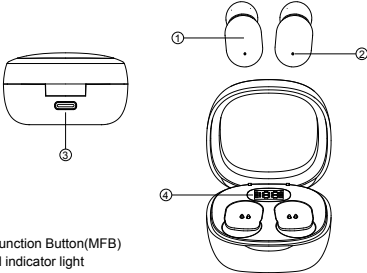


说明书材质：105G铜版纸，正反两面单色印刷，Size: 63x100mm

True Wireless Earbuds with Charging Case User Manual Version 1 FCC ID:2A3ZO-240090A	True Wireless Earbuds 4SP036A9YZ PRODUCT KEY  1.Multi Function Button(MFB) 2.Earbud indicator light 3.Type-C USB input 4.Charging case battery indicator SPECIFICATION Earbuds battery capacity: 30mAh Charging case battery capacity: 300mAh Play time: about 3 hours (it varies with volume level) Charging time: about 2 hours to the charging case about 45 mins to earbuds Charging port: Type-C	INCLUDES 2 TWS Earbuds Type-C Charging Cable (11.80") Charging Case Small Medium and Large Eartips CONTROLS Charge the earbuds Put the earbuds into the charging case, the earbuds will be charged automatically. The red status LED light will be on during charging and will turn off when fully charged. Charge the charging case Use a Type-C cable connected to a USB charger (DC 5V-1A) The Steps for dual earbud pairing (First use only) Take out both earbuds from the charging case at the same time. The LED light on both earbuds will be flashing blue and red. One of the earbuds LED will turn off after 2 seconds. This means that both earbuds pairing is successful and are ready to pair with device. Turn on the wireless on your device and search for a new device then select "swissbrand blaze" to connect. How to re-connect The earbuds will automatically try to re-connect with the last paired device after re-start. If not put the earbuds back into charging case and try again, or connect manually.	EARBUD BUTTON FUNCTIONS Power ON: Press+hold(3s) L/R earbud Power OFF: Press+hold(5s) L/R earbud Play/Pause: Press once L/R earbud Increase Volume: 3x Press L earbud Decrease Volume: 3x Press R earbud Next Track: 2x Press L earbud Previous Track: 2x Press R earbud Activate Voice Assistant: 2x Press L/R earbud ANSWER/END/REJECT INCOMING CALLS Answer/End: Press once L/R earbud when incoming calls Reject: Press+hold(2s) L/R earbud FREQUENTLY ASKED QUESTIONS The smartphone cannot find the wireless earbuds Check whether the earbuds power is switched on or not. Does the status LED light flash red and blue alternatively? If the wireless earbuds still haven't been found after switching power on, please restart both the earbuds and the wireless search on your phone. There is something wrong with the wireless earbuds while using them Please try to re-connect with the smartphone after turning it on and restarting the earbuds. Check the charging status of the earbuds by putting them into the charging box until the red LED indicator is on. Then take them out and let them try to re-connect with your device.	The wireless earbuds always disconnect or make noise when connected to smartphone The wireless earbuds power status is low, please re-charge it. There is an obstruction between the mobile device and the wireless earbuds, or the wireless distance is beyond the signal range. Please do not cover the wireless earbuds with your hands in order to maintain the continuous stability of the signal. Try to keep the wireless earbuds and the smartphone in the same direction. THIS IS A BATTERY-OPERATED PRODUCT. THIS IS NOT A TOY. INTENDED USE OF THE PRODUCT SHOULD NOT RESULT IN EXPOSURE TO THE INTERIOR BATTERY. In case of abuse, there is risk of rupture, fire, heat, leakage of internal components. Abuses include but are not limited to charging for a long time, short circuit, put into open flame, put into water, whacked with hard object, punctured with acute object, crushed, and broken. Proper Handling: Do not open, disassemble, crush, or burn battery. Do not pierce the battery casing with a nail or other sharp object, break it open with a hammer, or step on it. Do not strike, throw or subject the battery to severe physical shock. Do not attempt to disassemble or modify the battery in any way. Do not handle battery in a manner that allows terminal to short circuit. Avoid mechanical damage of the battery. Battery may explode or cause burns, if disassembled, crushed, or exposed to fire or high temperature. Do not short-circuit the battery by connecting wires or other metal objects to the positive(+) and negative(-) terminals. Do not immerse the battery in water or allow it to get wet. Do not use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any way. If the battery is in use or being recharged, remove it from the device or charger immediately and discontinue use. Avoid all personal contact, including inhalation. Wear protective clothing when risk of exposure occurs.	Proper Storage: Store in a cool, dry, and well-ventilated area. Keep away from heat, fire, and direct sunlight. Keep out of the reach of children. Disposal considerations: Recycle in accordance with government, state and local regulations, to ensure proper disposal. If exposed to the battery – vapor fumes may be irritating to the eyes and skin. First aid measures: After eye contact: Flush eyes cautiously with plenty of water for at least 15 minutes, occasionally lifting the upper and lower eyelids to assure adequate flushing. Get medical aid. After skin contact: Remove contaminated clothing and rinse skin with plenty of water or shower for 15 minutes. Get medical aid. After inhalation: If inhaled, quickly leave the site to fresh air immediately. Administer artificial respiration if breathing is difficult. Get medical attention. After swallowing: If swallowed, wash out mouth with water provided person is conscious. Get medical attention. If exposed to fire, the battery may burst, releasing hazardous chemicals and causing potential combustion. Lithium-ion batteries contain flammable electrolyte that may vent, ignite, and product sparks when subjected to high temperature, when damaged or abused (e.g. mechanical damage or electrical overcharging), may burn rapidly with flare-burning effect, may ignite other batteries in close proximity.	Fire-extinguishing measures: Use copious amounts of cold water. May use dry powder, sand, earth. Questions? Comments? Contact contact@culturefly.com FCC Statement NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Company Name: TopTech International Inc. Company Address: 17870 Castleton St., Ste 215 City of Industry Nevada,CA 91748 United States Telephone Number: (908)930-1042
---	---	--	---	--	--	--