

TROUBLESHOOTING

No power	Recharge your Halo speaker using the included USB type C charging cable. If not working try using a different cable.
Music is not playing over Bluetooth®	Make sure your Bluetooth® device has A2DP profile. Check if both devices are paired and connected over Bluetooth®. Restart the speaker to reconnect your Bluetooth® device.
Bluetooth® device will not reconnect with the speaker	Navigate to your Bluetooth® settings menu on your Bluetooth® device, tap "MERKURY BT126" and select "Forget". Now follow the steps to pair your device again.

TECHNICAL SUPPORT

If you are experiencing problems, do not attempt to fix the product by yourself or return it to the store you bought it from. Please refer to the user manual or just contact our helpful support team:

Merkury Innovations
45 Broadway, 3rd Floor,
New York, New York 10006
www.merkuryinnovations.com
support@merkuryinnovations.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:
 1. This device may not cause harmful interference.
 2. This device must accept any interference received, including interference that may cause undesired operation.

©2024 Merkury Innovations, LLC.
 To explore our full selection of products, visit us at: www.merkuryinnovations.com

The illustrated product and specifications may differ slightly from that supplied. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.

Made in China

MERKURY
INNOVATIONS

Bluetooth®

HALO | High-Definition Stereo TWS Bluetooth® Speaker

Included:
Bluetooth speaker
 USB Type C charging cable
 User manual

User Manual for
BS780-2

IMPORTANT: PLEASE READ BEFORE USING THIS PRODUCT

ON-BOARD CONTROLS (TOP)

The Halo high-def stereo Bluetooth® speaker has three easy-to-use buttons on the top panel that control power, volume, and the LED light.

1. Power On/Off: Press and hold this button to turn the speaker on or off.
2. Volume Up: Press button to increase the volume.
3. Volume Down/LED Light:
 - Press this button to decrease the volume.
 - Press button twice to cycle through the three brightness levels of the LED light.
 - Press and hold button to turn the LED light on or off.
4. USB-C Charging Port: Plug the USB-C charging cable into this port to recharge the speaker.

SPECIFICATIONS

Speaker Specifications: Speaker Unit: 45mm 4Ω 5 W Material: ABS Plastic and Mesh Product Dimensions: 5" x 5" x 6", 16 oz	Power Information: Output Power: 5W Lithium Battery: 18650, 1200 mAh Charging Time: 3 Hours Charging Port: USB C Play Time*: 10hrs @70% volume
Bluetooth® Information: BT Version: JL V5.3 Transmission Distance: 33 ft	

*Depends on individual use and may be slightly more or less than the time specified.

CHARGE

- Connect the speaker to a 5V-1A USB Charger or USB charging wall adapter using the included charging cable.
- The LED light will turn on while charging.
- The LED light will turn off automatically when fully charged.

PAIR & CONNECT

- Press and hold the power button on the speaker to turn it ON or OFF
- Make sure the speaker is turned ON
- On your Bluetooth® enabled device, navigate to the Bluetooth® settings menu, turn on the Bluetooth® feature, and search for new devices.
- Wait a few seconds & select "MERKURY BT126" the speaker will emit a tone when successfully paired.

NOTE:
 • If your device's Bluetooth® version is below version 2.1, you may need to enter the password "0000".

PLAY

- Connect your device to the speaker via Bluetooth® (see "Pair & Connect with a New Device").
- Open your favorite music app and press play.
- Control the music tracks & volume from your device.

NOTE: All audio, including music, games, videos, and notifications will be routed through the speaker.

TRUE WIRELESS STEREO (TWS) FUNCTION:

The Halo speaker supports True Wireless Stereo (TWS) function, which allows you to connect two speakers together for an even more immersive listening experience. Here's how to use the TWS function:

- Turn on both speakers.
- Double click the Volume Up button on one of the speakers.
- The LED light on the speaker you double-clicked will flash and you will hear a voice prompt indicating that the speaker is in pairing mode.
- Search for the pairing name "MERKURY BT126" on your Bluetooth® device and connect to it.
- The two speakers will now be connected and will play together.

RECONNECT TO BLUETOOTH®

- You only need to pair your Bluetooth® device with the speaker once.
- With your previously paired device's Bluetooth® turned on & in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth® device it was connected to.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth® settings menu on your device, turn on the Bluetooth® feature, and select "MERKURY BT126" from your list of paired Bluetooth® devices.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.