



BUDWEISER BOTTLE SPEAKER

Bluetooth® Premium Wireless Speaker



BW-BBS-001

Instruction Manual

Please read manual before
operating this product.

Contents

1 Introduction.....	1
2 Package Contents	2
3 Product Diagram	2
4 How To Use.....	3
4.1 General functions.....	3
4.2 Pairing to mobile phone.....	4
4.3 Charging your headphones.....	5
5 Product Specifications	6
6 FAQ	7

**Compatible with all devices,
Bluetooth® & Non-Bluetooth
w/ supplied Aux Cable**

**The Bluetooth® word mark
and logos are registered
trademarks owned by the Bluetooth
SIG, Inc.**

**This product is intended for purchase
by persons of legal drinking age.
Enjoy responsibly.**



1.Introduction

Congratulations, and thank you for choosing Budweiser Wireless Bottle Speaker. This manual will help you operate the Bluetooth Bottle Speaker, but you should first familiarize yourself with the Bluetooth® functionality of your mobile phone or smart device before using the Wireless Bottle Speaker.

Safety Rules

- 1 Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual.
- 2 Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging to prevent any possible injury or damage.
- 3 Do not modify, repair or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.
- 4 Do not use any diluent or volatile liquid to clean the product.
- 5 Do not use the product in a hazardous location.

2. Package Contents



Bluetooth® Premium
Wireless Speaker



1X Micro USB Cable



1X Instruction Manual



1x AUX 3.5mm Cable

3. Product Diagram



On/Off Button

Aux 3.5mm Port

Micro USB Charging Port

4.How To Use

4.1.General Functions

Desired Result	Required Action
Turn on & Enter the pairing mode	Press and hold down the on/off button for 2-3 Seconds
Pairing	Use a Bluetooth® enabled mobile phone or other Bluetooth® enabled device to perform necessary pairing actions.
Turn off	Press and hold down the on/off button until the speaker turns off.
Charging	Plug the supplied Micro USB cable into the Micro USB Charging port.
Answering a Call	Short press the on/off button to answer phone calls, short press the on/off button again to end the call.
Music Control	Please use your smart phone or smart device controls to play/pause music, volume control and previous and next track

4.2. Pairing to a mobile phone

- To use your Bluetooth® Bottle Speaker, you must first pair your Speaker to a Bluetooth® enabled device. Once your Bluetooth® Speaker is paired to a smart device, they will remain paired and automatically recognize each other whenever they are in range.
- Pairing to a Bluetooth Enabled Smart Device: Turn on your smart device/Phone and ensure the Bluetooth® function is turned on / activated.
- Long Press the on/off button for 2-3 seconds and the LED lights will start to flash red and blue, you are now in pairing mode
- In your Bluetooth® settings under search devices the smart device will list the "Budweiser Bottle Speaker" as discovered device, tap or select Bud Light Bottle Speaker and your wireless speaker should now be connected.
- The Blue LED light will start to flash once you are paired successfully.

4.3 Charging your Speaker

- Use the Micro USB cable provided with your Wireless Speaker. Connect the Micro USB plug to the Micro USB charging port on the speaker.
 - Add a photo of the speaker in the empty space, showing the cable plugging in.
 - Connect the USB end to a USB port on a PC/Laptop or wall adapter in order to start charging the speaker.
- * Make Sure to Charge the Speaker for 3-4 hours before initial use.



5.Product Specifications

Driver Diameter	40mm
Frequency Range	130HZ-15KHZ
Sensitivity	105dB
Impedance	4 Ω
Bluetooth® Version	5.0
Bluetooth PCB BRAND	JL6928B
Battery Capacity	300mAh
Receiver Distance	10m
Charging Time	1.5-2 hours
Playing Time	2 hours at 50% volume



6.FAQ

1. Why is there no power when I try to power on the speaker?

Ans: Ensure the battery has been charged up to 3 hours for initial use.

2. There is no sound during playback?

Ans: Check the connection between the speaker and the phone or smart device, if the connection is not established, please try the pairing mode again. Make sure the Speaker is paired with your Bluetooth® enabled device.



**PARTY IN
STYLE**



**UP TO 4 HR
PLAYTIME**



**BUILT-IN
MIC**



Support

If you have problems with your device, please consult the instructions in this manual.

Manufacturer Warranty

We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please email us at info@GabbaGoods.com or visit us on the web at www.GabbaGoods.com



BUDWEISER BOTTLE SPEAKER

Bluetooth® Premium Wireless Speaker

© 2021 ANHEUSER-BUSCH,LLC

Budweiser®, a registered trademark
of ANHEUSER-BUSCH,LLC, used under license

Distributed by:
M&S Accessory Network Corp.,
New York, NY 10001
Designed in The U.S.A. | Made in China



www.GabbaGoods.com
Technical Support

Keep All Relevant Information for Future Reference.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.