

100.00 mm

PAIRING THE SPEAKER

1. Ensure the speaker is turned off. If it is not, please turn off the speaker first before pairing.
2. Press and hold the Power On/Off button for 5~7 seconds until the blue LED turns on. This will indicate your speaker is now in pairing mode.
3. Place the speaker and the Bluetooth device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 33 feet apart.
4. Ensure Bluetooth is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
5. Once you have activated Bluetooth on your device, select the device from the list of available Bluetooth devices.
6. Please note, pairing mode on the speaker will last for two minutes. If no devices are paired after two minutes, the speaker will automatically return to standby mode.
7. If pairing is unsuccessful, turn off the speaker first and repeat following the aforementioned steps. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

If prompted, enter password or PIN Number "0000".

SPECIFICATIONS

Waterproof Rating:	IPX7
Output:	3 W
Input:	DC 5V, 300mA
Battery:	3.7V Lithium-ion battery

Operation Manual

Thank you for purchasing the Waterproof Wireless Speaker. Please read all instructions carefully before using and retain this manual for future use and reference.



正面

142.00 mm

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight and corrosive liquid.
Do not use the unit if it has been dropped or damaged in any way.
Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
Do not puncture or harm the exterior surface of the product in any way.
Keep the unit free from dust, lint, etc.
Do not use this unit for anything other than its intended use or purpose.
Doing so may damage the device.
This product is not a toy. Keep out of reach of children.
Do not use the unit at excessive levels as this may damage hearing.
Do not expose batteries, batter pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.



NOTE: DO NOT SUBMERGE SPEAKER

PACKAGE CONTENTS

- Portable Wireless Speaker
- Micro USB Charging Cable
- Aluminum Carabiner
- Operation Manual

KEY FEATURES

- Built-in rechargeable battery
- Volume control
- Built-in Microphone
- Suction Cup
- Aluminum Carabiner

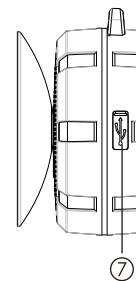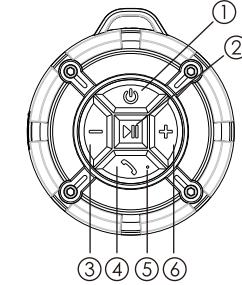

KEYS

1. Power / Pairing	2. Play / Pause
3. Volume - / Previous	4. Hands-free
5. Microphone	6. Volume + / Next
7. USB Charge Port	

CHARGING THE SPEAKER

The speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the speaker. Connect the USB cable to a computer USB port and the Micro USB plug to the charging port of the speaker. The red LED light will illuminate while the speaker is charging. A full charge of the battery takes around 2 hours. When the battery is fully charged, the LED light will turn off.

背面

说明书材质: 128g铜版纸, 双面印刷

外框不要印, 对折后正面在外

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.