

User Manual for Wireless Doorbell

Features:

1. Range: $\geq 30m$ (indoor), $\geq 200m$ (open area).

The actual distance will be affected by many factors.

2. 3 Levels of volume + Mute mode.

3. 38 ringtones.

Specification:

Transmitter	Receiver
Working Voltage: DC3V	Working Voltage: AC100-250V 50Hz-60Hz.
(Battery: CR2032*1pc).	Frequency: 433.92MHz.
Transmitting power: <10mW.	Consumption: $\leq 0.5W$
Battery: CR2032*1pc.	Volume: 0-90dB.
	Music: 38 ringtones

FCC Warning Statement


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Diagram(please refer to the real object):

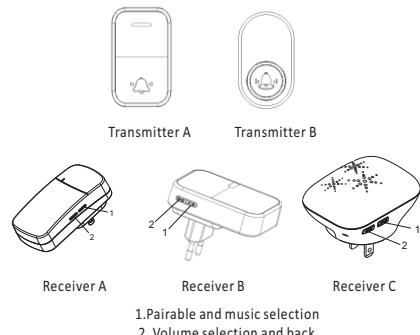

User instruction:

The products have been paired already, and you can use it directly. In the case of changing or adding transmitter, please refer to the following operation:

1 Pairing

Plug in the receiver, long press PARING button for 3 second till the indicator light always ON. Then press the transmitter, and the receiver will blink which means the pairing successful.

2 Delete all transmitters

Plug in the receiver and then long press PARING button in 1 minute, till indicator light always on and blinks 3 times to delete all transmitters.

Installation:

Place the transmitter exactly where you intend to fix by screw or double-sided tape. Confirm the receiver will sounds when you press the transmitter push button.



Hot tip:

Don't install the transmitter on metal objects, such as metal door, metal window, anti-burglar door.

Notices: If there is insulating sheet inside the transmitter, please take it out before following operation.

1 Remove one side of double-sided tape and stick it on the back of transmitter.

2 Clear the surface of fix position. Try to not fix the transmitter on metal objects. Remove another side of double-sided tape and stick the transmitter well.

3 Plug in the receiver.

4 Press the music button to select favorite ringtone.

Problems:

1 Receiver does not sound: 1) plug it well or not. 2) Power on or not.

3) Mute mode or not.

2 Wireless distance is too short: 1) Check if fix on the metal objects or heavy wall or inference with other electronic device.

3 Indicator light of transmitter is too dark: Replace the battery.

Change the battery:

When the indicator light of the transmitter is too dark, please change the battery CR2032 as the following operation:



Transmitter A

Transmitter B

1. Use a screwdriver to insert the side gap of the plastic case, pry the upper plastic case out.
2. Use a screwdriver to insert the gap of battery stand, pry the battery out.
3. Reload new battery, observe correct battery polarity. And then assemble upper plastic case to bottom plastic case properly.



Transmitter B

Use small screwdriver to pry location 1 and take the bottom plastic case out, take out whole PCB and then take the battery out. And then reload new battery and then assemble them together.