



RGB LED Disco Light Instruction manual



**Attention
PC Cover Rotation Prohibit!!!**

Contents

Intended Use _____	2
Safety Instructions _____	3
Items Supplied _____	4
Inserting / Changing Batteries _____	5
Putting Into Operation _____	6
Technical Data _____	6
Disposal _____	7

Explanation of Symbols



Safety instructions:

Please read them carefully and comply with them in order to prevent personal injury and damage to property.



Supplementary information



Attention
PC Cover Rotation Prohibit!!!

Dear Customer,

We are delighted that you have chosen this **LED party light**.

Before using the article for the first time, please read the instructions through carefully and keep them for future reference. If the article is given to someone else, it should always be accompanied by these instructions.

The manufacturer and importer do not accept any liability if the information in these instructions is not complied with.

Intended Use

- ☐ This article is suitable for decorating and lighting dry indoor areas.
- ☐ The article is designed for personal use only and is not intended for commercial applications. Use the article only as described in the instructions. Any other use is deemed to be improper. Keep the instructions in a safe place.
- ☐ The following are excluded from the warranty: all defects caused by improper handling, damage or unauthorised attempts at repair. This also applies to normal wear and tear.

Safety Instructions



Dangers of Injury

- ☐ Batteries can be deadly if swallowed. Therefore keep batteries and the article out of the reach of children and animals. If a battery is swallowed, seek medical assistance immediately.
- ☐ Do not look directly into the light source! It could damage your eyes.
- ☐ Keep children and animals away from the packaging material. There is a danger of suffocation!
- ☐ This is not a toy! Keep children and animals away from the article. Children must be supervised in order to ensure that they do not play with the article.



The Proper Handling of Batteries

- ☐ Before inserting the battery, check whether the contacts in the battery compartment and on the battery are clean, and clean them if necessary.
- ☐ Use only the battery type specified in the technical data (see the "Technical Data" section).
- ☐ When replacing batteries, ensure the correct polarity (+/-).
- ☐ Take the battery out of the battery compartment when it is discharged or if the article is not going to be used for a prolonged period. This will prevent any damage that might occur if a battery leaks.
- ☐ If the battery has leaked, do not allow battery acid to come into contact with your skin, eyes, or mucous membranes. If you touch battery acid, rinse the affected sites with abundant fresh water immediately and contact a doctor as soon as possible.

- ☐ Remove a leaking battery from the battery compartment immediately. Clean the contacts before you insert a new battery.
- ☐ The battery must not be charged or reactivated in any way, it must not be disassembled, thrown into a fire, immersed in liquids or short-circuited.




The Proper Handling of the Article

- ☐ The light may not be used for the direct irradiation of people, animals or plants.
- ☐ Do not take the light and the remote control apart. Have any repairs done only by a specialist workshop or the customer service department.
- ☐ Do not place any covers, e.g. cloths or similar items, over the light. Contact with these sources could lead to a fire.
- ☐ Do not drop the article or subject it to severe impact.
- ☐ If you do not intend to use the article for a prolonged period of time, switch off the article and store it in a dry place.
- ☐ Do not use the article if it has visible signs of damage.
- ☐ Do not expose the light to extreme temperatures, strong temperature fluctuations or moisture.
- ☐ **Do not use any corrosive or abrasive cleaning agents to clean the article!** They could damage the surface.

Items Supplied

- 1 x LED light
- 1 x Instruction manual
- 1 x remote control incl. battery (type CR2025)

Overview of Remote Control

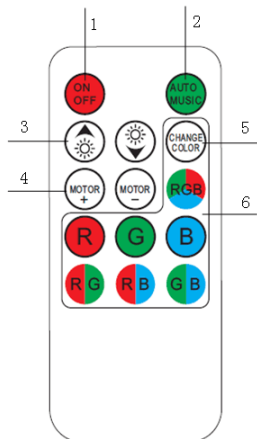

- | | |
|-----------------------|------------------------------------|
| 1 On/Off Switch | 4 Speed Setting |
| 2 Music Sensor Switch | 5 Color Change Mode |
| 3 Brightness Setting | 6 Control pad for colour selection |

Inserting / Changing Batteries



The battery in the remote control is not inserted. So you have to insert a CR2025 type battery before use.

1. Push the catch on the battery compartment to the right using your finger nail and pull out the battery compartment.
2. Remove the used battery and dispose of it in an environmentally friendly way.
3. Insert a 3 V battery of the CR2025 type. Ensure the correct polarity (+/-) when inserting the battery.
4. Place the battery compartment back into the remote control. It must engage audibly.

Putting Into Operation

1. Unpack the items supplied and remove all protective films and stickers. Check all parts for possible transport damage. If you find any transport damage, contact the customer service department immediately.
2. Screw the LED light into a suitable lamp fitting (E27/B22).
3. Switch on the LED light by switching on the light switch on the lamp and pressing the On/Off button (1) on the remote control. The light begins to rotate after it has been switched on.
4. Use the control pad for colour selection (6) to select a colour or a colour combination.
5. When you press the colour change button (5), the 5 basic colours light up alternately. Press any colour selection button to switch off colour change mode.
6. Use the speed setting buttons (4) to set the speed of rotation of the LED light.
7. Use the brightness setting buttons to set the brightness of the LED light.
8. When you press the Music Sensor button (2), the LED light flashes with the rhythm of the music which is currently playing. Press any button to switch off the music sensor.
9. To switch off the LED light, press the On/Off button (1).

Technical Data

Control Mode: Remote Controller
LED Source: RGB Full Color
Fitting: E27/B22 Optional



Voltage supply:

Light: 100-240V~ 50/60Hz, max. 3 watt

Remote control: 3 V DC (1 x 3 V button cell, CR2025 type)

Disposal



The packaging material is recyclable. Please dispose of it in an environmentally friendly manner and take it to a recycling centre.



Dispose of the article in an environmentally friendly manner. The article should not be disposed of in the normal domestic waste. Please dispose of it at a recycling centre for used electrical and electronic devices. You can obtain more information from your local authorities.



Non-rechargeable and rechargeable batteries should be removed before the article is disposed of and should be disposed of separately from the article. To protect the environment, non-rechargeable and rechargeable batteries may not be disposed of with normal household waste, but must be taken to suitable collection points. Also note the relevant statutory regulations governing the disposal of batteries.



Attention
PC Cover Rotation Prohibit!!!

All rights reserved.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.