

game controller function manual

I. Overview

2.4G wireless gaming controller is the appearance of elegant fashion, streamlined shape, user-friendly design; 2.4GHz wireless transmission technology, the design of intelligent power-saving mode, for you to concentrate on creating a suitable Andrews video game, but also support computer games The game handle lets you play any game more handy.

2. The specification parameters

- 1, support Gamepad for PC/Laptop Computer(Windows XP/7/8/10) Android video game
- 2, using 2.4GHz RF wireless transmission technology; distance $\geq$ 8 meters;
- 3, while supporting the number of hands: 2 (need to support the game);
- 4, 20 wireless channels, up to 20 sets of handles at the same time working in an environment.
- 5, support Android standard menu key Back, Menu, Home key function.
- 6, standby current less than 60uA;
- 7, the working current is less than 15mA;
- 8, battery 2 AA (5).
- 9, surface treatment: anti-sweat oil;
- 10, the key life: 50,0000 times; rocker life: 50,0000 times.

3. Quick start

- 1, Gamepad for PC/Laptop Computer(Windows XP/7/8/10) ,the handle receiver connected to the smart Andrew TV or set-top box of a USB interface;
- 2, handle the battery, turn on the power switch to the "ON" position, the handle will be automatically connected with the receiving head, after the success of the red LED is always bright. If it is not successful, please press the HOME key twice to force the connection with the receiver.
- 3, the handle key function as shown below

A, the handle side of the positive diagram:



B, power switch diagram



C, handle receiver



4. Handle detailed operation

1 Turn on the handle

Turn on the power switch to "ON" position, the handle will automatically connect with the receiver, the connection is successful, indicating that the red LED is always on. If it is not successful, please re-switch the handle power or plug the receiver.

2 handle use

After the connection is successful, follow the prompts to use, the game, please keep the appropriate distance with the TV.

3 handle shut down

The power switch is set to "OFF" position, the handle is in a completely off state, power consumption is 0mA;

4 handle sleep

1, (when the boot connection) when there is no handle receiver, 10 seconds after entering the sleep mode;

2, in the connection state, if there is no axis and key operation, 5 minutes after entering the sleep mode, then LED off;

3, sleep mode, press the HOME key to wake up; wake up after the red LED light, you can play the game.

5. Handle on the code

When the handle is inoperable or the new handle is to be added, the handle and receiver must be re-coded.

1, the receiver is powered on after 15 seconds in the code state: Insert the receiver into the smart TV or set-top box USB interface, turn on the TV or set-top box power.

2, the handle is equipped with a battery, the power switch to the "ON" position (the distance when the code does not exceed 2 meters). Press the HOME key twice quickly, the LED will flash quickly, the flag into the code state.

3, when the red LED is always on the state, that the success of the code. If the code is not successful, turn off the handle for 3 seconds and then turn on the power or plug the receiver. The


4, if the need for the second handle on the code, the same method with the above.

6. The handle on the computer to use and test:

1, fast use: the "receiver" into the host USB port, the computer automatically find the driver and the installation is complete, you can enter the game normally used (the game needs to support the handle).

2, test instructions

Start the Windows system into the "Start" menu, and then enter the "Control Panel" option, find the "game controller" menu and click "Properties" pop-up chart can be handle after the test:

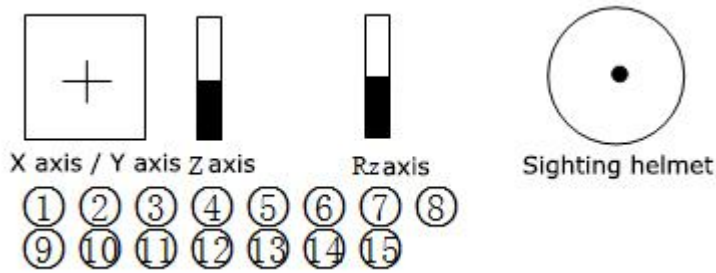

7. Functional description

7.1, a key Internet access

Press the HOME button, will start a key Internet access

8.Common problems

1, open the handle power switch, LED does not flash, do not connect?

A: Make sure that the battery is installed, or that the battery is installed correctly.

2, the use of LED lights will flash

A: The battery is low, you need to replace the battery.

3, in the course of the red LED does not light up?

A: may be broken, need to re-code connection.

4, in the use of the process sometimes LED flashing or use the key to delay?

A: The handle may be too far away from the TV or the receiver is blocked too much! The receiver can be led out with a USB extension cable.

5, in the computer game handle can not use?

A:First in the game OPTION option to set the handle device operation, and set the button mapping relationship; or in the game OPTION option can not find the game device, the game only supports the keyboard and mouse, does not support the handle of the game.

Warm reminder

1, when the handle accidental disconnection, voltage protection and other conditions, making the handle can not connect, and the connection has no function and other crash conditions, the need to turn off the power after 3 seconds to re-open;

2, if any other questions please contact the manufacturer;

3, do not put this product in extreme hot and humid place;

4, do not let this product immersed or exposed to water, to use in a dry place;

5, children in the custody of adults to use the product;

6, do not use alcohol liquid to wipe any part of the product, please use a soft cloth and a small amount of water on the product for cleaning.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment