

wicue

VR-3014

## ELECTRONIC SUNGLASSES

### INSTRUCTION MANUAL

#### @Supports voice calls

This machine is equipped with an upper passive microphone, making calls clear and without fear of interference.

#### Product features



The lens transmittance of electronic sunglasses is divided into four levels, which are 8%, 16%, 26%, and 37%. Users can adjust the lens transmittance according to their own environmental conditions to ensure protection. A pleasing visual tinting effect under environmental changes, improves the safety, and it is not easy to cause visual fatigue.

#### Product characteristics

Frame color	Black
Frame Materials	TR-90
Lens materials	Flexible liquid crystal film, TAC
4-level dimming	8%, 16%, 26%, 37%
Bluetooth	5.0
Charging time	Fast charge for 15 minutes 80% and 1 hour 100%
Battery capacity	110mAh
Speakers	Dual stereo speakers

#### Introduction

Thank you for using our product. Please read the manual before using. The manual might change due to hardware or software update.

#### Product description

Electronic sunglasses are directional audio smart glasses. These are stereo bluetooth glasses with an automatic dimming function, which are easy to operate and carry.

#### Product features

##### ①4-level dimming

Four dimming levels, enabling easy handling of all kinds of ambient light. When in use, you can switch the transmittance of the lens by pressing the button located at the left temple. The transmittance of the lens is divided into four levels. The transmittance levels are 8%, 16%, 26%, and 37%.

##### ②Anti-UV

The lens has anti-UV feature, and can resist 100% UVA/UVB, protecting the user's eyes.

##### ③Polarization

Polarizers are applied to the lenses at the time of manufacture, providing the benefits of general polarized glasses such as: counteracting road reflection, water reflection, mirror reflection, and more.

##### ④No color shift

The inside color of the lens is grayish-brown, which avoids visual discoloration and improves driving safety.

##### ⑤Bluetooth support

These sunglasses are equipped with the Actions 3015 Bluetooth chip, which brings stable signal transmission, supports higher quality music experience, low latency, and provides better call and music quality.

##### ⑥Long battery life

The temples of the sunglasses are equipped with 110 mAh lithium polymer batteries, which can continuously play music for more than 4 hours, and supports phone calls and other voice communications for more than 3 hours.

##### ⑦Magnetic pogo pin charging

Magnetic charging design, magnetically attach the charger, easy to use, supports fast charging, can charge 80% in 15 minutes, and fully charges in 1 hour.

①Compatible with bluetooth enables devices such as mainstream brand mobile phones and tablets.

②Supports AAC audio decoding technology to achieve CD-level sound quality.

③Left and right double speakers, directional playback, real stereo sound effect.

#### Packing list

①Electronic sunglasses \*1

②Charging cable \*1

③Glasses pouch (with cleaning cloth)\*1

④User manual\*1

⑤Polarization test card\*1

⑥Nose pads\*1 Pair

#### Operational instructions



#### ◆Charging

①Before use, please use the provided charging cable to charge the sunglasses. It takes about 1 hour to fully charge.

②The LED indicator on the temples is steady red when charging, and the sunglasses are turned off during the charging process.

③After the charging is completed, the LED indicator on the temples will be steady green.

#### ◆Low battery prompts

When the battery power is lower than 3.5V, the equipment has a low power voice prompt, reporting "Battery Low" every 2 minutes, and rings 2 sounds once.

#### ◆On/Off

①Perform a longer press on the right leg button for 3 seconds to turn on, and when you hear the prompt sound "Power on", it is turned on. After turning on, the indicator light of the sunglasses lights up green and goes out after 3 seconds.



②Perform a longer press on the right leg button for 3 seconds to power off. When you hear the prompt sound "Power off", it is turned off. During the power off process, the indicator light of the sunglasses lights up in red, and then goes out after 3 seconds.

◆Bluetooth pairing connection

When the sunglasses are turned on, the sunglasses will automatically enter the pairing state. During the pairing process, "pairing" will be prompted every 15 seconds within 1 minute until the pairing is successful. Open the Bluetooth of the device to be connected (such as mobile phone, MP3, player, computer, etc.), you can search for the device name: Wicue audio, click connect, and the Bluetooth pairing window will automatically pop up, click pair, the Bluetooth connection is successful, the prompt sounds "Connected".  
①After turned on without a pairing record, it will automatically enter the pairing state; when there is a pairing record, it will automatically connect back to the last used mobile phone when it is turned on;

②When the phone is re-connected, after the connection is successful, the prompt will sound "Connected";

◆Play music

①Music play/pause, click the button on the right leg.  
②Previous song: In the music play/pause state, quickly click the right leg button three times.  
③Next song: In the music play/pause state, quickly click the right leg button two times.

◆Voice Assistant

Press and hold the button on the right leg for 1 second to open the voice assistant.(For example: Siri)

◆Make a call

①Incoming call reminder: 1) IOS system reminder tone is mobile phone ringtone; 2) Android system reminder tone is Bluetooth sunglasses ringtone.  
② Answer/hang up the call: short press the button on the right leg.  
③Refuse the call: In the incoming call state, double-click the button on the right leg.  
④When calling, double-click the button on the right temple of sunglasses, it could switch the call voice from headset to smartphone.

◆Restart

Charge and restart the entire device.



Left mirror leg button

◆Transmittance adjustment

①Long press the left leg button for 3 seconds to turn on and off the brightness adjustment.

②The transmittance of sunglasses is divided into 4 levels. After turning on the adjustment of the sunglasses transmittance, short press the left leg button, and the lens transmittance will switch to the next gear (0->1->2->3->0). The 4 levels of brightness correspond to transmittances of 37%, 26%, 16%, and 8%.

Notice

①Please read the manual carefully before using this product, and keep this manual.  
②Please fully charge the product before using it for the first time.  
③If the product is not charged for a long time (more than two weeks), please charge it before use.  
④Do not wipe the lenses directly. Wet the lenses first, and then dry them with glasses cloth. Try to use suede and strong absorbent glasses cloth to wipe clean gently, carefully not to apply too much force. When wiping, the glasses cloth should be wiped in the same direction, not back and forth, nor wiping circularly on the lens.  
⑤Please charge the product in an environment of 0°C~50°C.

Matters needing attention.

①Do not disassemble or repair or modify this product for any reason, otherwise it may cause fire, electronic breakdown or even complete damage to this product.

②Do not place the device in an environment with too low or too high temperature (below -20°C or above 70°C).

③Do not wet the product in contact with liquid, soak in liquid, or directly contact with chemical reagents. After the glasses are filled with water, please dry them naturally in a dark environment or use a hair dryer to slowly dry them before returning to room temperature (When using the hair dryer, please avoid high temperature to prevent the glasses from being burned).

④The temples are made of lightweight synthetic materials with a certain opening range. Do not pull the temples excessively or in the opposite direction, as the temples may break.

⑤Do not expose the glasses to the sun for a long time, otherwise they will be deformed, aging, or broken.

⑥Do not put the magnetic end of the charging cable close to metal objects to prevent the danger of short circuit caused by magnetically attracting metal objects.

Important safety information.

①Before using the sunglasses, please read all safety information to ensure correct and safe use.

②Use of power supplies, chargers or batteries not approved by the manufacturer may cause fire, explosion or other hazards.

③When used, the minimum transmittance is 8%, which may affect the safety of driving. If you still wear problems, the company will not bear any legal responsibility.

④Please use accessories approved by this manufacturer and compatible with this model of equipment.

⑤Please use the device within the temperature range of -20°C—70°C, also store the device and its accessories at room temperature. When the ambient temperature is too high or too low, it may cause equipment failure.

⑥The device uses a non-removable built-in battery, please do not replace the battery yourself to avoid damage to the battery or the device.

⑦If the charging is completed, please disconnect the charger from the device and unplug the charger from the power outlet. Do not charge continuously for more than 12 hours.

⑧The battery is not allowed to be disassembled, hit, squeezed or thrown into fire. If it is severely expanded, please do not continue to use it.

⑨Do not place it in a high temperature environment. Overheating of the battery may cause an explosion.

⑩Keep the equipment dry.

⑪If the device or any other parts cannot work normally, please do not repair any products by yourself.

⑫When connecting other devices, please refer to the connection method in the user manual, and do not connect unmatched devices at will.

	To avoid hearing loss, do not use high volume for a long time.
--	--

Warning

①Please follow relevant laws and regulations and do not use it in the following environments.

②The use of equipment is strictly prohibited in environments where flammable and explosive oil and gas or chemicals are stored near gas stations, oil depots, and chemical warehouses.

③Do not use this equipment in hospital operating rooms, emergency rooms, intensive care departments, etc.; in order to avoid interfering with the operation of medical instruments, please keep it away from pacemakers, hearing aids, cochlear implants and other medical equipment when using this equipment. The distance between the device and the pacemaker exceeds 15 cm.

④To use this equipment near personal medical equipment, please consult a physician and the equipment manufacturer.

⑤Please observe all safety warnings and regulations concerning the use of this equipment while driving.

⑥In thunderstorms, in order to avoid lightning accidents, please do not use it outdoors.

⑦Do not use the charger in the bathroom and other places with high humidity, otherwise it may cause electric shock, personal injury, fire and damage to the charger.

⑧Please comply with relevant laws and regulations that are expressly prohibited in any environment.

Warranty certificate

In order to better enjoy the Warranty rights, please keep the purchase invoice and the Warranty certificate after purchasing this product. The purchase invoice and the



certificate must be filled in completely and correctly.

**Repair warranty principle**

1.In accordance with normal use and without violating the above precautions, hardware failures of this product caused by product quality problems are covered by the repair warranty. Warranty is given during the warranty period. This warranty applies to liquid crystal electronically controlled sunglasses series products. The above series product implements "7-day replacement warranty" and "one-year repair warranty" .

2.Normal use means no damage caused by man-made or force majeure.

3.Replacement conditions: when the direct user finds that the product hardware is faulty within 7 days of purchase (excluding consumables), it can be replaced with the purchase invoice at the place of purchase.

4.Repair warranty: when the function is invalid under normal use during the warranty period, the company is responsible for the free repair warranty, which mainly includes to malfunction of the dimming lens but excludes the hardware case, instructions, packaging, other consumables, postal, and on-site service fees.

5.For products that exceed the warranty period, the company can provide paid repairs for the functional failures under normal use. The company can be responsible for maintenance with charging fees of certain component, accessories, and labor costs.

6.The condition of the replacement is that all the objects in the package are complete, the appearance is not worn or smudged, and the serial number of the product is the same with the outer box's.

**Note 1:**The change of the product color is not within the scope of product replacement.

**Note 2:**Please carefully check whether the appearance is damaged when purchasing the product. The damage of the product appearance after purchase will not be within the scope of the warranty.

7.**Repair warranty:** when the function is invalid under normal use during the warranty period, the company is responsible for the free repair warranty.

8.**Maintenance:** when the function fails under normal use during the maintenance period, the company is responsible for maintenance and charges fees of certain component and accessory costs.

9.The following conditions are not eligible for free warranty service, but repair service is

provided with only charging fees of component, accessories, and labor costs.

① Violation of the above **"Matters needing attention"**:

② Damages caused by human factors including uses in abnormal working conditions or not following the instructions, etc.

③ Damage caused by force majeure such as floods, fires, earthquakes, lightning strikes, abnormal voltages, etc.

④ Products beyond the warranty period.

⑤ No proof of purchase or proof inconsistent with the product model or altered.

10. Without providing a valid purchase invoice, it will be processed according to the over-warranty period condition and the cost of repairing components and accessories will be charged.

**Repair warranty method**

When entrusting repair, please contact the local distributor with the valid purchase invoice or the copies, or directly call the Wicue service line: 86-0756-8819942.

**Contact us**

Address: Room 113, Building 19, Creative valley, 1889 Huandao east road, Hengqin new district, Zhuhai city.

TEL: 86-0756-8819942

Email: support@wicue.com

Website: www.wicue.com



Product maintenance records					
Model No.		Date of purchase			
No.	Fault description	Cause of failure	Disposition	Maintenance date	Date of return
1					
2					
3					

Note: Please keep the record for maintenance.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.