

# **SURPERCONSOLE-X PRO user Manual**

## **I. System startup and shutdown**

1. System startup: Press the power button to start the system startup.
2. Shutdown: press SELECT- - - -> SHUTDOWN SYSTEM (software shutdown protection system), and then cut off the power supply.

## **II. Main interface of the system**

After entering the main interface of the system, the key operation shall refer to the following table:

Left and right + key with robar	Switch over the simulator platform
B, key	Enter or determine
A, key	Return or cancel
START key	set up
SELECT key	Soft restart or soft shutdown settings
L2R2	Turn the game menu to the page

# Three, set

## 1. Language Settings

System Settings- -Language

START---->>SYSTEM SETTINGS---->>LANGUAGE

(picture presentation)

## 2. Handle button setting

After the USB interface is connected to the handle, press the handle button B to enter the handle button setting.

(picture presentation)

## 3.WIFI linkage

START- - - ->> NETWORK SETTINGS- - - ->> ENABLE WIFI, then select the wifi network as required, and fill in the password;

(picture presentation)

## IV. Operation instructions

Function key, the specific function depends on the simulator	+ word key, rocker bar, ABXY key L1, R1, L2, R2, start, select (hot key),
The coin drop is in the arcade simulator	SELECT
Enter the game from the title	START

menu	
Fast forward (switch)	Hot key +R2
Save the state	Hot key +R1
Load status	Hot key +L1
Status memory card slot +	Hot key + to the right
Status memory card slot-	Hot key + to the left
Increase the amount	Hot key + to the key
Reduce the amount	Hot key + to the key
Power simulator menu	Hot key +Y
Restart the game	Hot key +A
Exit the simulator	Two consecutive Start + select

## V. Introduction of keys and interface

### Key Introduction



## **VI. Safety precautions**

Do not store machine in dusty, humid, high temperature and magnetic environment. Especially in swimming pool, bathroom (this product is not waterproof)

When carrying the machine, such as running, mountain climbing and other high-intensity exercise, please fix the machine firmly on the body or backpack, so as to avoid falling from a height or heavy extrusion caused by damage.

When plugging the SD card, shut off first, because the current is very large and will cause unpredictable damage to the machine.

When unplugging the power adapter, do not touch the power video device with a wet hand to prevent electric shock accidents.

Some of the games of this product contain violent scenes. Please deal with them carefully before using them. Parents also please do a good job of supervision of their children do not indulge for a long time.

## FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.