





使用说明书 Instruction Manual

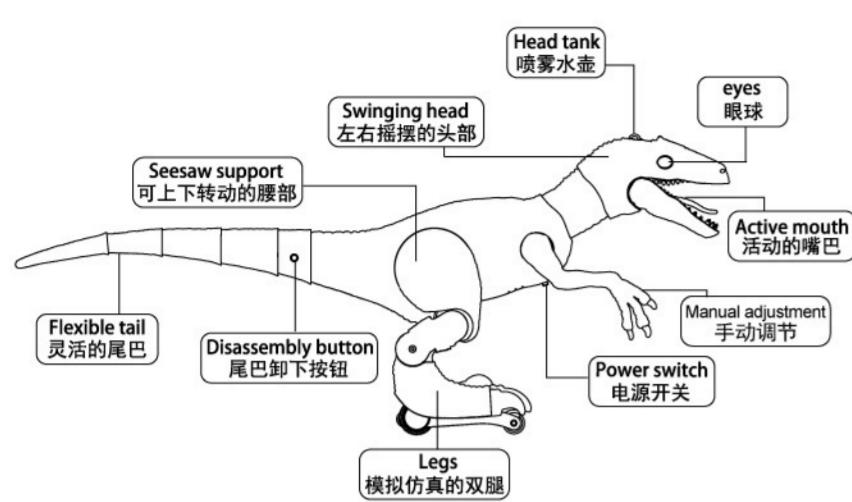

One-handed remote control with 4 modes to play.
单手遥控四大模式随意切换，不一样的玩法


Remote Control Function and Battery Installation 遥控器功能及电池安装

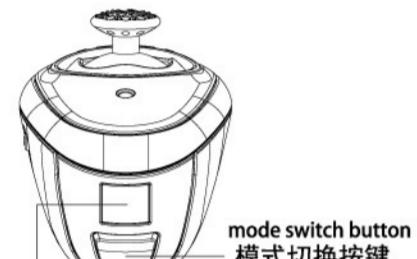


Status indicator (green light - walking mode, red light - sliding mode, yellow light - free mode, blue light - head action mode, white light - volume adjustment)
状态指示灯（绿灯-步行模式，
红灯-滑行模式，黄灯-自由模式，
蓝灯-头部动作模式，白灯-音量调节）

1


Battery installation diagram 恐龙充电电池安装图例

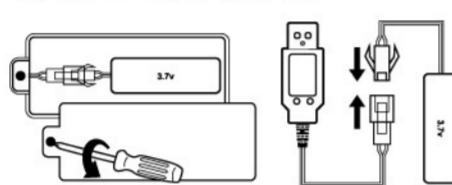

本产品使用1组3.7V充电电池(包电),
请使用5V的充电器充电。
3.7V rechargeable battery requires
(battery included)
Please use 5V recharger.

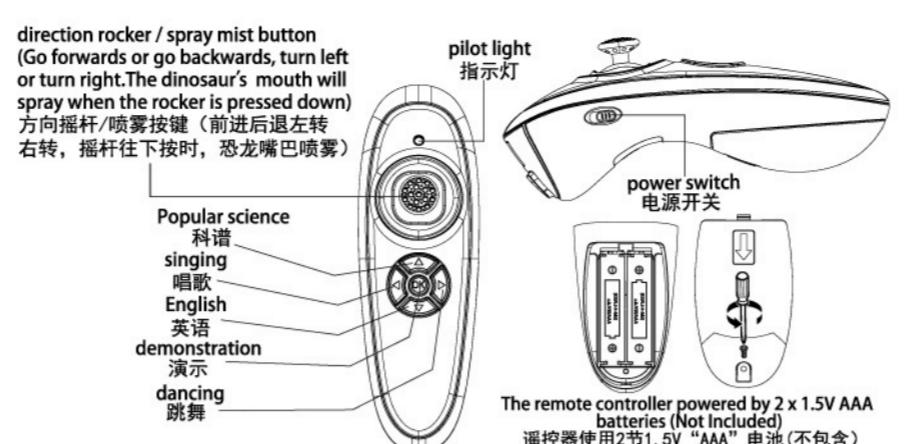

Dinosaur Tail Installation 恐龙尾部安装

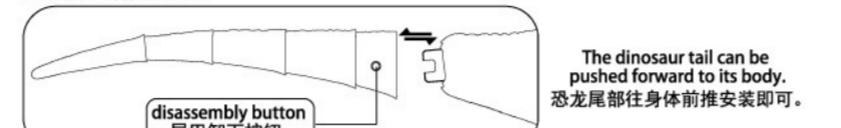

The dinosaur tail can be
pushed forward to its body.
恐龙尾部往身体前推安装即可。

Function Description

- Turn on
- Turn on the dinosaur power switch, play dinosaur call+voice+action. Turn on the remote controller power switch. The default mode is walking mode.
- Note: if the remote control button isn't operated within 1 minute, it will automatically enter the power saving mode. Touch the remote control mode switch button to wake it up, no need to reboot.
- Operate the remote control direction rocker: push forwards/go forwards; push back/go backwards; push left/turn left push right/turn right.
- There are walking mode, gliding mode, free mode, head action mode. You can use the mode button to switch according to the status indicator color change.
1. Walk mode - simulate dinosaur walking action; gliding mode - gliding forwards/backwards; free mode - The dinosaur will walk forwards/backwards when shaking the direction rocker slightly and slide forward and backward when pushing the directional rocker to the end.
2. Spray mist: First add water to the dinosaur head tank, then press the joystick down. The dinosaur's mouth will go spray mist.

The spray can be used in any mode with the tank filled with water.

功能说明

1. 开机
- 打开恐龙电源开关，播放恐龙叫声+语音+动作，打开遥控器电源开关，默认为步行模式。如果1分钟内没有按任何遥控器上的按键，遥控器会自动进入省电模式，只需触碰遥控器模式切换按键就可以唤醒，遥控器无需重开机。
- 操作遥控器方向摇杆：前推/前进；后推/后退；左推/左转弯；右推/右转弯。
- 使用模式按键来切换，根据状态指示灯颜色变化，有步行模式，滑行模式，自由模式，头部动作模式选择自己喜欢的模式。
- 步行模式：模拟恐龙行走动作前进后退；滑行模式：滑行前进后退；自由模式：头部动作模式选择前进后退。
2. 喷雾：先给恐龙头部水壶加水，方向摇杆往下按，可以使恐龙嘴巴喷出大量的水雾。在水箱加满水的情况下，喷雾在任何模式下都可以使用。
3. Playing in standby mode (voice+action)

When the dinosaure starts to snore, it will automatically enter sleep state if there is no other operation within 5min. After entering the sleep state, you need to reboot it.

2

4.Demonstration
● Sound effects, walking, sliding, looking up, opening mouth, spraying mist, turning circles.

5.Singing, 5 songs in total (voice+action)

6.Dancing, 5 songs in total (voice+action)

7.Popular Science, 4 segments in total (voice+action)

8.English Words

9.Remote joystick rotation function

● The remote rotates 180 degrees to the left or right, and the dinosaur will automatically rotate 360 degrees according to the direction you choose.

10.Volume adjustment

● Long press the joystick to enter the volume adjustment (push up +, push down -), then long press to exit.

3. 待机播放（音效+动作）

当恐龙出现打呼噜声后五分钟没有继续操作恐龙时，
它会自动进入休眠状态。进入休眠状态后，需要重新开机。

4. 演示

● 音效、步行、滑行、抬头、张嘴、喷雾、转圈。

5、唱歌，共5首（音效+动作）

6、跳舞，共5首（音效+动作）

7、科普，共4段（音效+动作）

8、英语单词

9、遥控器摇杆旋转功能

● 遥控器向左向右旋转180度，恐龙会根据你选择的方向自动旋转360度。

10. 音量调节

● 长按方向摇杆进入音量调节（推上+，推下-），再长按退出。

11.Low battery

● If the dinosaur is low on battery, the dinosaur goes slow or stops.


Please recharge.

● After fully charged, the dinosaur can be used for about 40 minutes.

11. 电量不足

● 如果恐龙电量不足，动作停止3秒后会发出“滴、滴、滴”的报警声，提示你需要充电了。

● 充电后，恐龙可以使用约40分钟。

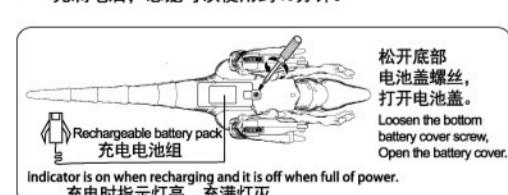

Indicator is on when recharging and it is off when full of power.

充电时指示灯亮，充满灯灭。

Input power more than 5V is not allowed.

◎ 请勿使用高功率充电器（5V以上）充电

Note: There is USB charging cable inside the package, which can be connected to a computer or a mobile phone to charge. After the battery is fully charged, the USB charging indicator light is off, and it generally takes about 2 hours to fully charge.

● Rechargeable battery cautions

a. Please ensure the battery charged in dry and ventilated environment, keep away from heat sources and explosives.

b. If the battery has alarmed when using. Do NOT charge the battery immediately as its surface temperature has not cooled down. Otherwise it will cause the battery to swell then cause fire.

c. If the battery is not used for a long time, it will reduce the battery power. Charging or not charging for a long time will reduce the battery life.

包装里面有配USB充电线，可以连接电脑或者5V的手机充电器充电。

充满电后，USB充电指示灯灭，电池充满时间大约需要2小时。

3

● 充电电池注意事项

- 充电时，请确保充电环境干燥通风，远离热源、易爆物品。
- 使用时，电池已经报警后，电池表面温度尚未冷却下来，请勿立即进行充电，否则会引起电池发胀而造成火灾。
- 电池长时间没有使用，会减少电池电量。长时间充电或不充电会减少电池的使用寿命。

CAUTIONS FOR USING BATTERY

- 1.Battery: remote controller- 2x1.5V AA non-rechargeable batteries. Dinosaur-Li-on 3.7V 1200 mAh rechargeable batteries
- 2.Install the battery with correct polarity. The supply terminals are not to be short-circuited.
- 3.Non-rechargeable batteries are not to be recharged.
- 4.Recharge battery can be charged under the guardianship of adults.
- 5.Exhausted batteries are to be removed from the toy.
- 6.Different types of batteries or new and used batteries are not to be mixed.
- 7.Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be removed from the toy when not in use.
- 8.Please use the USB cable form this set to recharge. Please do not use the un-recommended USB cable.
- USB cable is not a toy. USB cable need to be used under the guidance of adults.
- 9.This toy can not be used by children under 8 years old. Please use the recommended adapter. Adapter is not a toy.
- 10.Unscrew the cover with a screwdriver, opening battery cover insert the batteries in the light of polarity and voltage, then close battery cover. Screw the cover with a screwdriver.
- 11.Please make sure the USB is connected to equipment with () () remark when recharging.

电池安全使用注意事项

1. 玩具使用电池类型：恐龙使用1组3.7V 1200 mAh可充电电池包，
遥控器使用2节1.5V AAA 非充电电池；
2. 非充电电池不可充电；
3. 如何取出和放入电池：用螺丝刀松开螺丝钉，揭开电池盖，
按正确极性放入和取出电池；
4. 取出和放入电池应按玩具电池室上的标识进行；
5. 只能使用与推荐电池一样或相同的电池；
6. 不可混用新旧或不同类型的电池；
7. 用尽的电池应该从玩具中取出；
8. 电源端子不应短路；
9. 内含电子元件，不得入水或在潮湿的环境下使用，用干布擦拭表面污迹；
10. 本产品使用配送的USB充电线进行充电，不得使用不被推荐的USB充电线，
USB充电线不是玩具；
11. USB充电线连接必须请由家长完成，电池充电时USB只能连接二级、
三级标签的设备进行充电操作；
12. 与玩具一起使用的USB充电线应定期检查其电线、插头、外壳和其他
部件是否损坏，发现损坏时应停止使用，直至修复完好；
13. 充电电池只能在成人监护下充电；
14. 充电电池在充电前应从玩具中取出；
15. 电池应以正确的极性放入；

SPECIFICATIONS, COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATION.

说明书含有重要信息，请保留备用。



4

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.