

User Manual

Product Name: Wireless push button for automatic door

Mode Name: PB04

Working Voltage: DC 3V



Transmitting Frequency: 433.92MHz

Add remote: 1. Keep pressing the learning button LEARN, release the button a till LED become yellow , then press any button on remote , remote will been added after led flash and buzzer rings.

2. Keep pressing any button on remote , and keep pressing button LEARN on remote at same time , release button LEARN till LED become yellow , remote will been added after led flash and buzzer rings


Delete remote : Keep pressing learning button A 5 seconds , all remote memory will delete after LED flash 3 times
(Tip : Ensure keep pressing learning button when delet remote memory)

Wireless push button learning and delete methods same as remotes

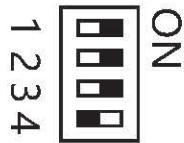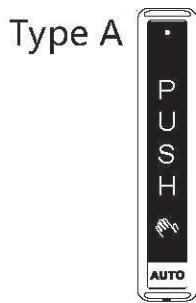

Please check the DIP switch if it's same as the image shown (during setting process) DIP 1、2、3 on the left, DIP 4 on the right

Type B(Optional)

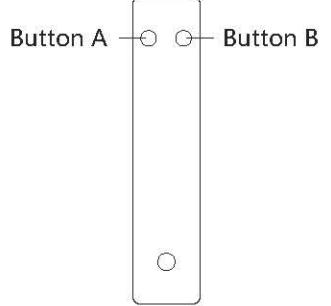

Function selection of wireless push button (work with swing door) 1. Remove battery
2. Keep pressing "Reset" button
3. Insert the battery at same time , the red led flash
4. Keep pressing button A , red led off about 5 second , Then flash again
5. Release Reset button and A button , Setting is done

Notes:

1. Receiver has been built-in. It can be connected wireless accessories directly.

Tip: Wireless push button can't be locked, If need to lock, it need to connect to an external receiver

2. Exit only function:

Connect outside sensor or button to terminal "Open-B", connect inside sensor or button to terminal "Open-A". Then press "full lock" button on remote

3. When double open, Synchronous cable must be connected refer to manual. Power on , Ensure the setting on both controller is the same. If speed is different during operating , Please slightly adjust open/close speed, open/close barking speed, opening time

4. When double open, remote control must learn both controller , in order to control two door at same time

5. In double open mode , accessories should connect to both controller (parallel connection)

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.