

SUITCASE STYLE BLUETOOTH TURNTABLE



Model No.: TE-001

Instruction Manual

Dear Customer, Thank you very much for your purchasing. Before using your new product, please read these instructions to prevent any damage, and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within the unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying the unit.

2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use the speakers near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug these speakers during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the speakers have been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. To reduce the risk of fire or electric shock, do not expose the speakers to rain, moisture, dripping or splashing, and no objects filled with liquids, such as vases, must be placed on them.
15. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause an electric shock or fire.
16. The wall plug is the disconnecting device. The plug must remain readily operable.
17. No naked flame sources, such as lit candles, should be placed on the speakers.
18. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, tablecloths, curtains, etc.

BEFORE USING THE UNIT

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.
- The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on an amplifier/receiver.
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service company.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank the cord.
- To keep the laser pickup clean, do not touch it, and always close the disc tray.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference

DO NOT MOVE THE UNIT DURING PLAYBACK

During playback, the disc rotates at high speed.


Doing so may damage the disc or the unit.

WHEN MOVING THIS UNIT

When changing the unit's location or packing the unit for moving, be sure to remove the record or disc. Moving this unit with the record or disc loaded may result in damage to this unit. If the unit is to be packed and moved a great distance, it is also advisable to tighten the turntable transport locking screw.

HANDLING RECORDS


- Do not touch the record's grooves. Only handle records by the edges or the label. Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.

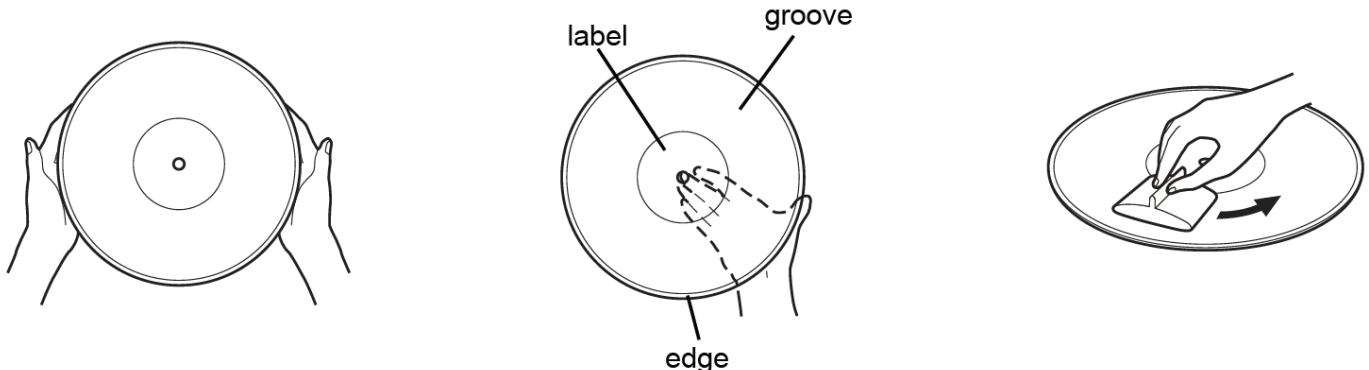

- Should the record become dirty, gently wipe the surface in a circular motion, using a soft anti-static cloth.
- Keep your records away from dust. Keep them in a cool, dry place.

- To avoid dust and scratches, keep records in their sleeves and jackets when not in use.
- Store records upright on their edges. Records stored horizontally will eventually bend and warp.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp the record.
- Do not store your records in the trunk of your car. The temperature in a closed trunk can ruin your collection.
- Store records in an area with a stable temperature and low humidity.

LOCATION OF CONTROLS

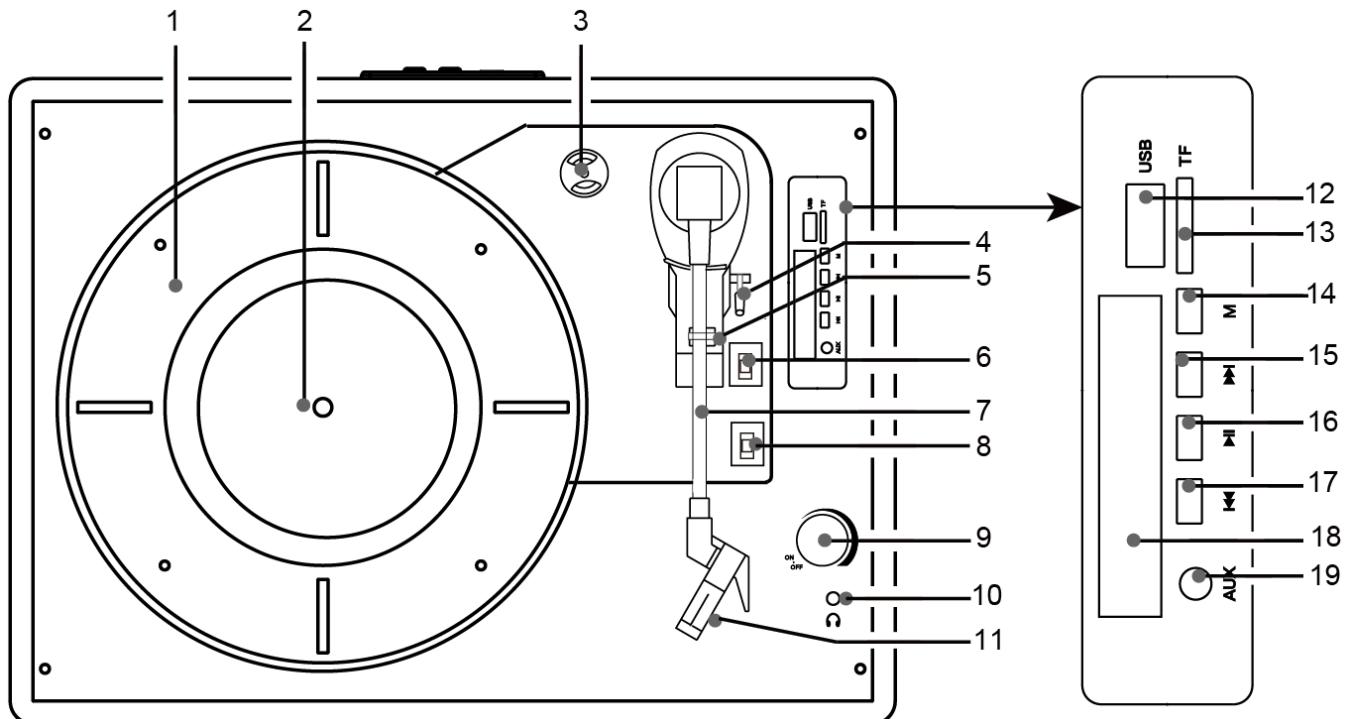

1. Turntable Platter

2. Turntable spindle

3. 45 RPM adaptor

4. Tone arm lift lever

5. Tone arm holder

6. Auto stop ON/OFF switch

7. Tone arm

8. Speeds select switch

9. Power ON-OFF/Volume knob

10. Headphone jack

11. Stylus

12. USB connector

13. TF connector

14. M Button- Play modes select key/ Record button


15. ►►Next music or FM program switch

16. ►||Pause and Play switch and DEL button

17. ||◀Previous music or FM program switch

18. LED Display

19. Aux in jack

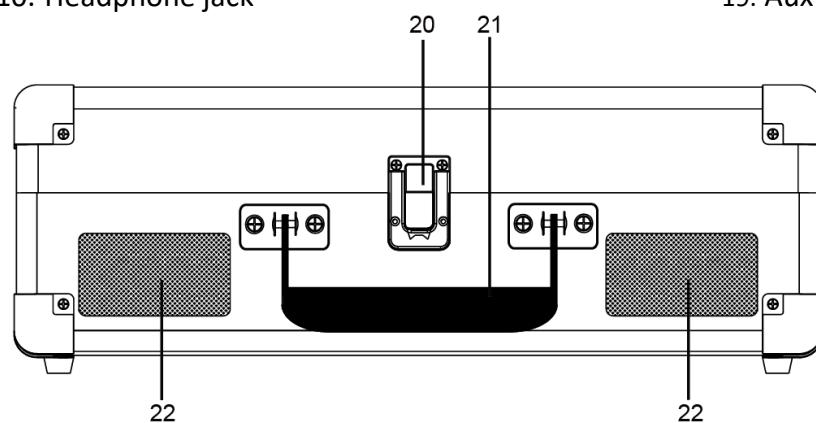

20. Lock catch


21. Handle

22. Speakers

23. FM Antenna

24. LINE OUT jacks


25. DC In jack

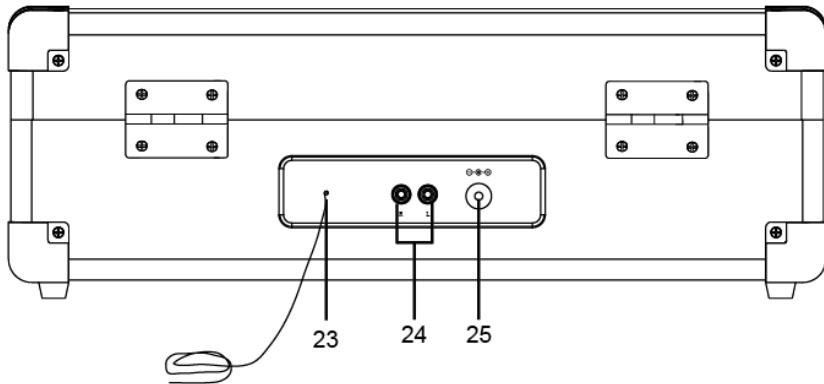

GETTING STARTED

General Operation:

1. Open the top cover as the illustrated follows:

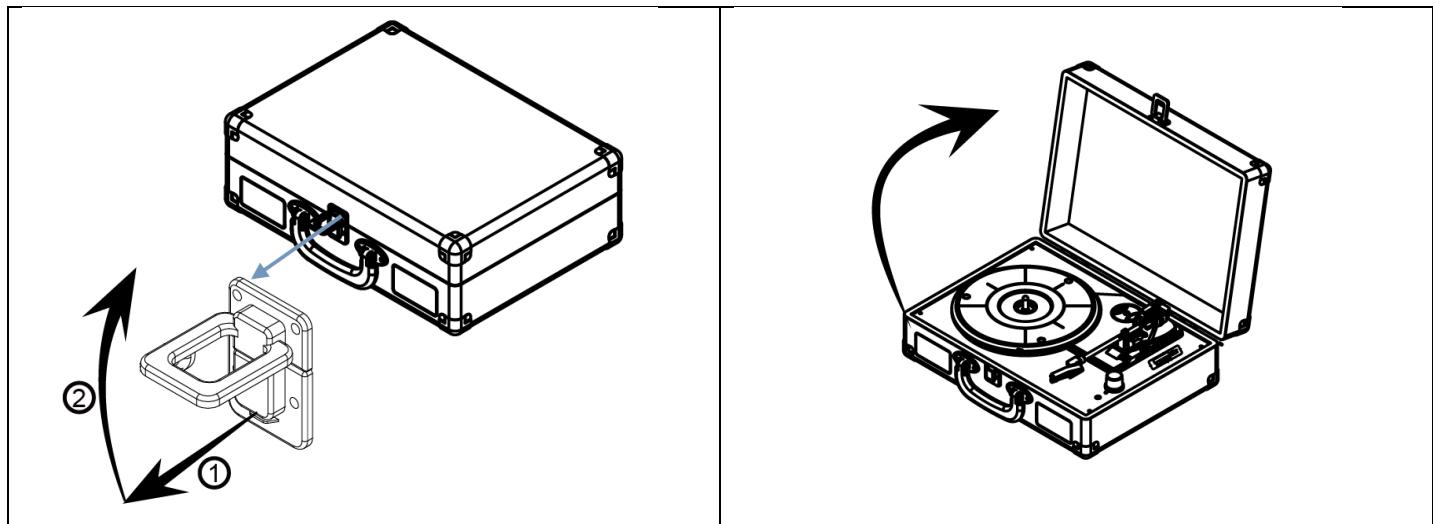

2. Connected the unit to AC power as instruct below.

Ensure that the mains voltage of your home corresponds to the operating voltage of the adaptor. Your unit is ready to be connected to a mains voltage of 5V DC adaptor.


- Connect the Power adapter to the wall outlet.
- Connect the DC connector to the “DC IN” jack ²⁵ on the rear of the unit.

3. Turn the Power ON/OFF--Volume knob clockwise to power on the unit and set the volume to the desired level.”-Pho” will show on the display.
4. When finished listening, turn the Power ON/OFF--Volume knob counterclockwise until display not light.
5. Close the cover then lock it.

Amplifier Connection (if required)


Whilst you can listen to your new Retro Suitcase Turntable using the built in speakers, you may also wish to connect it to your existing Hi-Fi system. Connect the “line out” RCA ports ²⁴ to the “line input” on your mixer or amplifier using an RCA cable (not supplied).

- Red plug into the Right Channel Input.
- White plug into Left Channel Input.

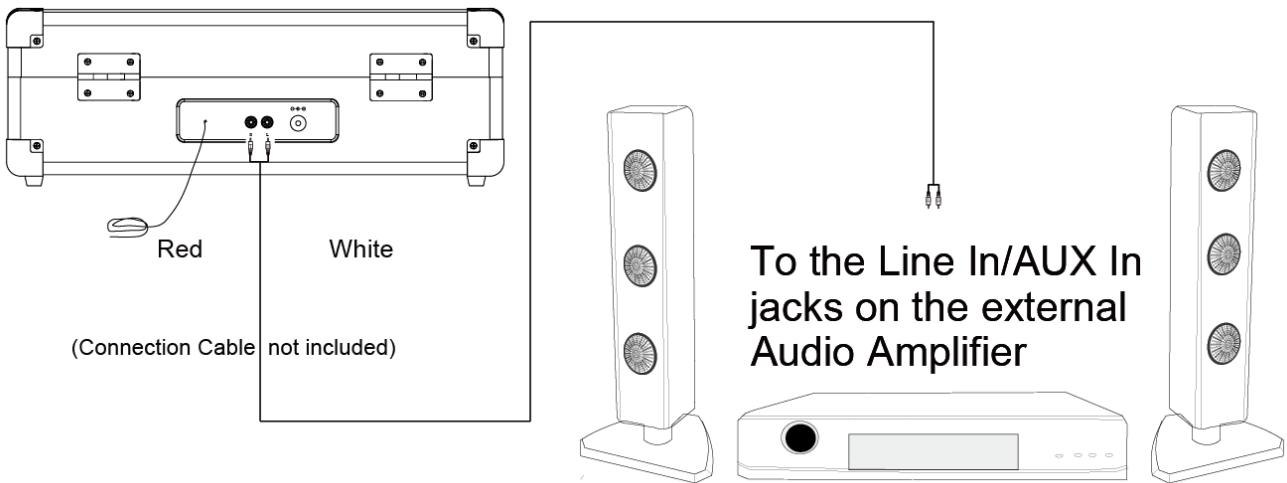

Playing a record

1. In first time use, take off the protective cover from the stylus as the illustrated below:

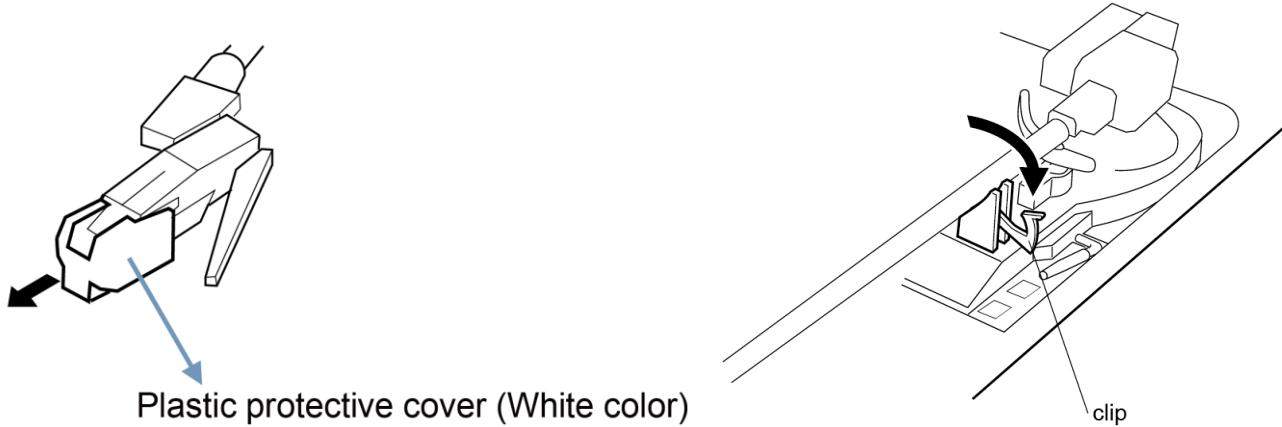

2. Unlock the Tone Arm from the holder as the illustrated above.
3. Place the Record on the center spindle ②.
4. Note: If you are playing a 45 RPM Single (small size record), place the supplied 45 RPM adapter ③ to the center spindle then place the record on it.
5. Slide the Speed selector ⑧ to 33 45 or 78 to match the play speed of the record.
6. Set the auto stop control ⑥ to ON if you want the turntable to stop turning when it has reached the end of the record. If the switch is set to OFF, the turntable will continue turning at the end of the record.
7. Turn on the Power Switch ⑨, it comes to Phono mode automatically, And the display ⑯ show "-Pho". Please note the Switch also controls volume.
8. Raise the Lever ④ to raise the Tone Arm then move it to the top of the desired location of the record. Release the Lever ④ to put the Tone Arm onto the record. Play will auto start.
9. When finished playback, the unit will auto stop turning when Auto stop switch at "ON" position. If Auto stop switch at "OFF" position, the turntable will continue turning at the end of the record.
10. Raise the Lever ④ to raise the Tone Arm then put it back to the Holder ⑤. Release the Lever then lock the Tone Arm on the Holder.

Bluetooth function

(lift up the tone arm and put it on the rest)

For first time use or re-pairing to a new BT Device, pairing it as below:

- Turn on the Power Switch ⑨, then press "M" button ⑯ till it enter into Bluetooth mode. The display ⑯ shows "bt".

Note: The display ⑨ shows “-Lod” when loading time .

- Turn on the Bluetooth function of your device and enable the search or scan feature to find the Bluetooth pairing name “***”. (See your device’s instructions to add or setup a Bluetooth device). Select “***” from the device list when it appears on your device screen. If required, enter the pass code “0000” to pair (link) with your device.
- It will has beep sound if connected successful, then you can play music from your Bluetooth device.
- Press the Button  ⑯ or  ⑯ to select previous or next track.
- Press button  ⑯ to pause and play music.
- Adjust volume by volume control ⑨ or by your Bluetooth device.

Normal operation after paired:

- Turn on the Power Switch ⑨, then press “ M” button ⑯ till it enter into Bluetooth mode. The display ⑯ shows “ bt” .
- Wait a few seconds until the unit auto paired to the external BT Device.
- It will has beep sound if connected successful, then Plays the music in the paired BT Device as usual.
- During playback, using the control buttons on the paired cell phone to skip the tracks; pause; play...etc.

USB/TF function

(lift up the tone arm and put it on the rest)

- Turn on the Power Switch ⑨, and Insert your USB or TF card to slot ⑯ or ⑯. If USB or TF card inserted before, press “ M” button ⑯ till enter into USB or TF card mode.
- The display ⑯ will show “-Lod”, then it displays “USB” or “TF”, music will begin.
- Press the Button  ⑯ or  ⑯ to select previous or next track. Press and hold the Button  ⑯ or  ⑯ to fast-forward or fast-backward.
- Press button  ⑯ to pause and play music.
- Press and hold the button  ⑯, the display will show “dEL”, then press the button  ⑯ again to delete the current playing music.
- Adjust volume by volume control ⑨.

FM function

(Lift up the tone arm and put it on the rest)


- Turn on the Power Switch ⑨, then press “ M” button ⑯ till enter into FM mode. The display ⑯ shows “ FM 87.5 MHz” .
- Release the FM antenna ⑯ and adjust the position to get clear channels.
- Press the button  ⑯ to mute the sound . Press again to restore the sound.
- Press and hold the button  ⑯ to automatic search FM radio. The tracks will be saved as P01, P02, P03 ... when finished scan.
- Press the Button  ⑯ or  ⑯ to select previous or next track.
- Press and hold the Button  ⑯ or  ⑯ to previous or next track scan.
- Adjust volume by volume control ⑨.

Aux in function

(Lift up the tone arm and put it on the rest)

- Turn on the Power Switch ⑨, and Insert aux in cable (not supplied) to Aux in jack ⑯ then press “ M” button ⑭ till enter into Aux in mode. The display ⑯ shows “ LINE” .
- The other side of aux in cable connect your devise, then you can enjoy the music.
- Press the button ►||⑯ to mute the sound . Press again to restore the sound.
- Adjust volume by volume control ⑨.


Note: The buttons ◀◀⑯ or ▶▶⑯ is useless when Aux in mode. You can adjust the tracks by your devise.

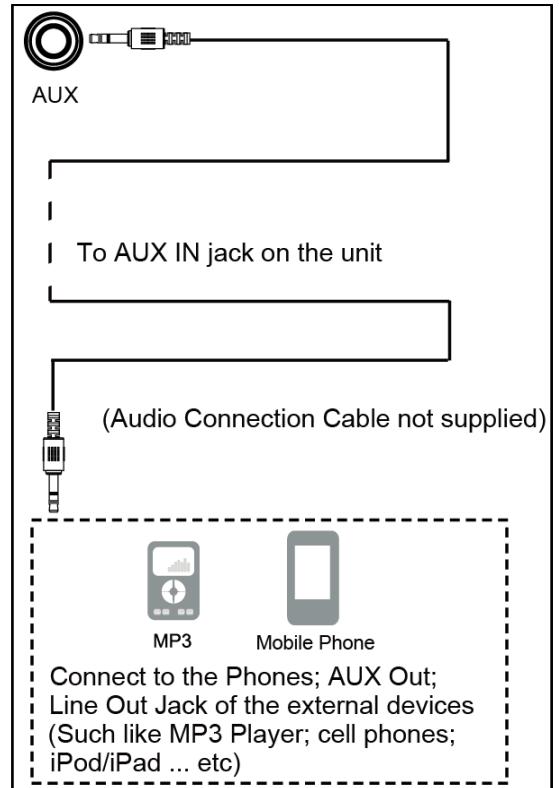

- Turn on the Power Switch ⑨, and Insert your USB or TF card to slot ⑫ or ⑬. Press “ M” button ⑭ till enter into Phono /Aux in /FM mode.
- Then press and hold the “ M” button ⑭ till hear one time beep sound. It begins to record songs from Phono /Aux in /FM to USB or TF card.
- Stop recording. Press and hold the “ M” button ⑭ till hear two times beep sound. It stop recording and save the recorded songs to USB or TF card as the last song.
- Press “ M” button ⑭ till enter into USB or TF card mode to enjoy the recorded song.
- Clear recorder music. Press and hold the button ►||⑯ , the display will show “ dEL”, and you will hear beep sound twice , the currently playing music has been deleted.

HEADPHONE:

For private listening, connect the 3.5mm plug from the Earphone/Headphone (not supplied) into the HEADPHONE jack ⑩ on the top of unit. Sound from speakers will be auto cut.

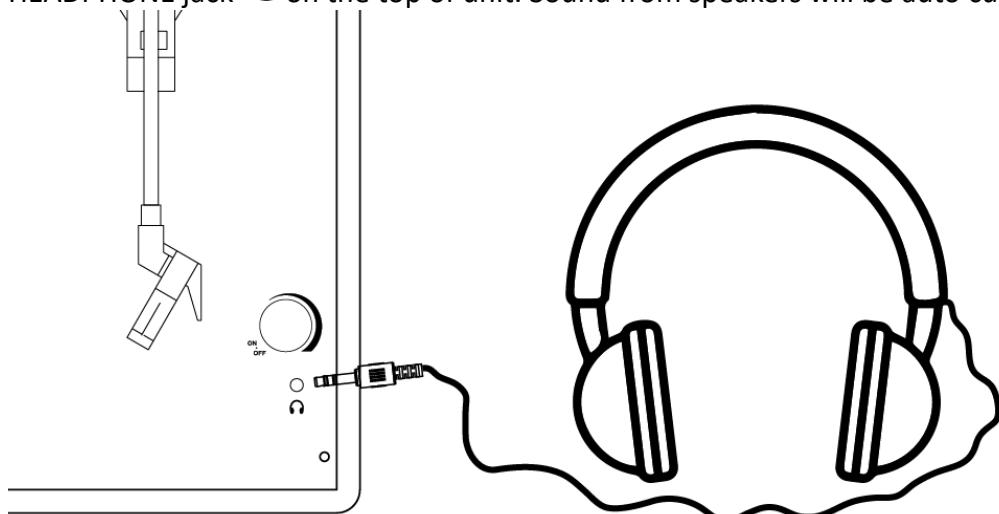


MAINTENANCE

How to replace the stylus

The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality


Removing an old stylus:

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".
2. Pull the stylus out toward direction "B".

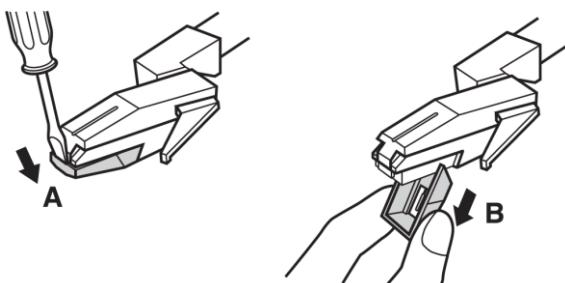

Installing a new stylus

1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.

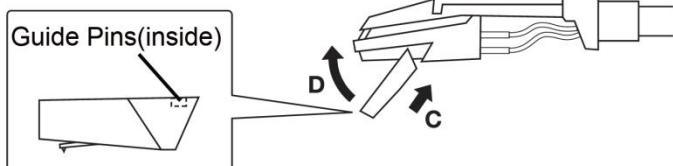

Caution:

- Do not remove or bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit's power before you replace the stylus.
- Keep out of the reach of children.
- Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable stylus to malfunction.
- Do not expose stylus to extreme heat.
- Contact a qualified repair company if you experience difficulty in changing the stylus.

SPECIFICATIONS

Product Name	Suitcase Style Bluetooth Turntable
Speaker Driver	5W *2
Dimensions (each speaker)	L13.8" x D10.2" x H4.9" (L350 x D260 x H125mm)
Power	DC5V=1A
Inputs	1 x 3.5 mm stereo mini-jack 1 x Bluetooth 1 x USB card 1 x TF card
PowerOutput	5Watts
Frequency Range:	FM : 87.5-108 MHz
3 Speeds	33; 45; 78 rpm
Auto stop	Auto Stop ON or OFF
RCA out	Yes
Recording	USB/TF card recording

ACCESSORIES

- 1 x User's Manual
- 1 x AC/DC Adaptor (Input: AC 100-240V~; 50/60 Hz; Output: DC 5V, 1A,)
- 1 x 45 RPM Adaptor

TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	REMEDY
GENERAL		
No sound in general.	Volume not adjusted.	Adjust the Volume knob.
	Source mode in wrong position.	Using the Mode button, select the proper function as required.
	Power cable disconnected or loose.	Check the connection or the Power cable.
The unit does not reset to operation of any button	Under the influence of electrostatic phenomenon, the product may malfunction and require user to disconnect	Turn off the unit, disconnect the mains plug, and reconnect after a few seconds.
PHONO		
No sound when playing vinyl records	Volume not adjusted.	Adjust the Volume knob.
The sound is breaking up or buzzing.	There are many dust on vinyl records	Clean your records with an anti-static cloth.
	45RPM vinyl without using 45RPM adaptor	Use 45RPM adaptor when playing 45 RPM vinyl records
	There are obstacles when rotating	Remove the obstacles and put the device on a horizontal table or place.
BLUETOOTH		
No sound when playing audio via Bluetooth	Your Bluetooth device has not been paired properly.	Pairing your Bluetooth device according to the Pairing name "KXRM19" to a Device Section. and playingAudio.

	The volume control of your Bluetooth device is set at too low.	Increase the volume of your Bluetooth device.
	The volume control of the main unit is set at too low.	Increase the volume of the main unit to turn to your wish.
USB/TF		
No sound in USB/TF mode	Volume at minimum.	Adjust the volume knob.
	External device not connected properly.	Clear contacts pins and connect again.
AUX		
No sound in AUX mode	Volume at minimum.	Adjust the volume knob.
	External device not connected properly.	Clear contacts pins and connect again.
FM radio		
No sound in FM radio mode	Volume at minimum	Adjust the volume.
FM channel is not clear	The FM antenna not untie.	Loosen the FM antenna back of side, and adjust the external cable position to get clear channel

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

The distance between user and products should be no less than 20cm.