 


英语

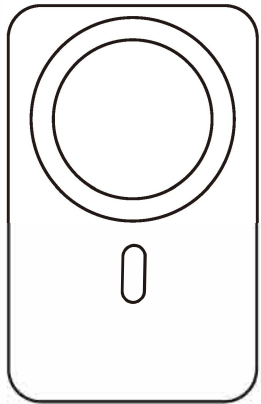

AOGUERBE

Magnetic Wireless Power Bank
10000mAh 15W
MODEL: KT-D003

Instruction Manual

 
Please read this instruction carefully before using the product and keep it properly

Name: magnetic wireless power bank
Product model: KT-D003
Battery model: polymer battery
Material: ABS + PC
Battery capacity: 10000mah
Rated capacity: 5800mah
Energy conversion: $\geq 75\%$
Type-C input: $5V \approx 3A$, $9V \approx 2A$
Type-C output: $5V \approx 3A$, $9V \approx 2.2A$, $9V \approx 2A$
Wireless charging and output:
 $5W$, $7.5W$, $15W$
USB output: $5V \approx 3A$, $9V \approx 2.2A$, $12V \approx 1.5A$,
 $5V \approx 4.5A$, $4.5V \approx 5A$


Product size: 110x68x16mm

33x2.67x0.63 inch

Net weight: 184g 6.48 oz

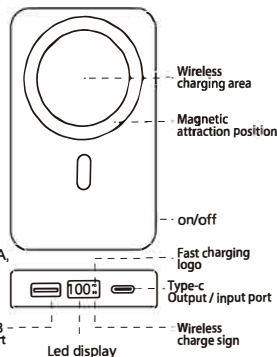


Packing list :

 

Wireless Power Bank*1



 Instruction*1



USB to Type-C Cable*1

Product description :

This product is a portable charging device that can provide wired charging and wireless charging for mobile phones, tablets, e-books, game machines and other famous products. The product has the characteristics of wired charging and wireless charging in one, magnetic suction positioning, power digital display, 20W PD fast charging, three output (including wireless output), 15W wireless fast charging, etc. Product built-in FOD, overcharge, overdischarge, temperature protection and other safety protection circuit.

USING INSTRUCTIONS :
Checking quantity of electricity :

Press on/off button check the remaining electricity of the power bank on the Led display. The display will automatically turn off after about 30 seconds;

Charging the power bank :

When connecting to the charging cable matching the mobile power interface, the electric quantity number of the display will flash, which means that the connection is normal and the power bank is charged.

If there is no flash with the number, it means that the connection fails and there is no charging. Please check whether the charging cable is connected correctly.

Operation instruction of wired charging :

 
 
Connect the USB charging cable to the corresponding output port of the power bank, and the power bank will automatically turn on the output. Due to compatibility, some smartphones need to press the button to turn on the power output function, which is a normal phenomenon and need not be ignored. Press the key once to supply power to the external equipment.

Wireless charge operation instructions :

Press the key once, and the Led display will be on. At this time, the mobile phone that supports wireless charging will be charged within 30 seconds. Place the mobile phone in the wireless charging area to charge the mobile phone wirelessly. If there is no wireless load access within 30 seconds, the product will automatically turn off the wireless charging function.

Wireless charging tips :

Wireless charging mobile phone needs to place the wireless charging area of the product (see the illustration for the wireless charging coil emission area) for wireless charging. The charging distance of this product is within 2mm. If the wireless charging distance exceeds 2mm, the wireless charging cannot be carried out. Please adjust the wireless charging distance of the mobile phone within the wireless charging range.

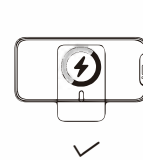

Charge the product:

Use the power adapter/computer USB port to charge the local wireless charging mobile power bank. The Type-C charging cable can be used to plug into the Type-C input port of the wireless charging power bank to charge the power bank. Connect the USB connector to the charger or the USB port of the computer, and the number of the power indicator will start to flash, indicating that the product is being charged. When it is fully charged, the digital display will display "100".

Charge mobile phones or other digital devices:

1. Check whether the charging voltage of the digital product matches the output voltage of the product.
2. Select the original charging cable of the digital product, one end is connected with the digital product, and the other end is connected with the output port of the product. The wired output terminal of the product automatically turn on to charge the mobile phone or other digital products, and the digital display screen will always be on.
3. Charge the mobile phone with a wireless charging function, press the button once, and the digital display will light up. At this time, the wireless charging function can be used. Put the mobile phone with wireless charging function in the center of wireless charging of mobile power bank, and the mobile phone can be charged at this time, and the digital display will be always on.

Reminder :

Please read all instructions and warnings before using this product. Improper use will damage the product or personal safety.

1. The charging contact surface on the back of the mobile phone does not contain metal substances, such as iron sheets, rings, metal protective cases, etc.
2. When the mobile phone is charging, if intermittent charging or serious heating is found, it is likely that the receiving coil of the mobile phone is not fully aligned with the wireless charging coil, and there are metal foreign bodies in the protective sleeve of the mobile phone. Please try to cool the mobile phone, remove the protective sleeve, and then align it in the normal position.
3. This product has an over-current protection function. If the product is used improperly, it will turn off or reduce the output power, reduce the charging speed and ensure safety. Please check whether the equipment is used improperly or not.
4. Do not let children use alone under 12-year, especially the accessories.
5. Please use a dry soft cloth to clean the surface. Do not use chemicals, soap, or detergent.
6. Please don't dismantle the machine by yourself. The user's abnormal use or improper placement of this product may reduce the service life or damage the product. Therefore, the responsibility does not belong to the warranty responsibility or the manufacturer's responsibility. Please understand.
7. There is a conversion rate in the power bank, so the battery capacity of the power bank is not equal to the rechargeable capacity.
8. Please charge your power bank regularly (at least 5 months is recommended) to maintain its long service life.
9. Improper use of the product may easily result in the product itself or endanger the safety of personal and property.
10. If consumers violate the product manual and improperly apply or warn, the personal and property damage caused by consumers and the company will not bear any legal responsibility.
11. Non-professionals are strictly prohibited to decompose this product.
12. Avoid using electrical appliances or loads that exceed the output current of the product (the circuit will be protected, no output).
13. Avoid strong physical effects, including knocking, throwing, trampling, squeezing, etc.

FCC Statement

This device complies with part 15 FCC Rules. Operation is Subject To the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not explicitly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: this equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC radiation exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 0 cm surrounding the device and 0cm above the top surface of the device must be respected.