

Checking quantity of electricity :
Press and hold button check the remaining electricity of the power bank, the four power indicator lights are on the left of the product.

Wireless Charging the iPhone 12 Series or Later
To place wireless charging, press the power button or place your device on the charger as illustrated below and it will be held in place magnetically. Note: After the phone is placed correctly, there may be a delay of 3-5 seconds, the product will automatically turn on the charging mode. If there is no wireless load access within 30 seconds, the product will automatically turn off the wireless charging function.

Wireless charging tips :

Wireless charging mobile phone needs to place the wireless charging area of the product (see the illustration for the wireless charging coil emission area) for wireless charging. The charging distance of this product is within 2mm. If the wireless charging distance exceeds 2mm, the wireless charging cannot be carried out. Please adjust the wireless charging distance of the mobile phone within the wireless charging range.



Charge the product:


Use the power adapter to charge the local wireless charging mobile power bank. The Type-C input port/Lighting charging cable can be used to plug into the Type-C input port/Lighting input port of the wireless charging power bank to charge the power bank. Connect the Type-C connector to the charger, and the power indicator lights will start to flash, indicating that the product is being charged. When it is fully charged, the power indicator lights will stop flashing.

Recharging Your Portable Charger :

When connecting to the charging cable matching the mobile power interface, the power indicator lights will flash, which means that the connection is normal and the power bank is charged, if there is no flash, it means that the connection fails and there is no charging. Please check whether the charging cable is connected correctly.



Charging Your Device Wirelessly and Recharging Your Portable Charger Simultaneously

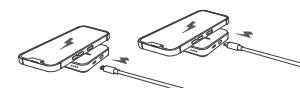

<p>Charging Your Phone or Earbuds Using a Charging Cable : Connect the Type-C charging cable to the corresponding output port of the power bank, and the power bank will automatically turn on the output. Due to compatibility, some smartphones need to press the button to turn on the power output function, which is a normal phenomenon and need not be ignored. Press the key once to supply power to the external equipment.</p> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;"> <p>1.Using Type-C to Lighting Cable</p> </div> <div style="text-align: center;"> <p>2.Using Type-C to Type-C Cable</p> </div> </div> <p>Charge mobile phones or other digital devices :</p> <ol style="list-style-type: none"> Check whether the charging voltage of the digital products matches the output voltage of the product. Selected the original charging cable of the digital product, one end is connected with the digital product, and the other end is connected with the output port of the product. The wired output terminal of the product automatically turns on to charge the mobile phone or other digital products, and the indicator light will be always on. Charge the mobile phone with a wireless charging function, press the button once, and the indicator lights will light up. At this time, the wireless charging function can be used. Put the mobile phone with wireless charging function in the center of wireless charging of mobile power bank, and the mobile phone can be charged at this time, and the indicator lights will be always on. 	<p>Reminder: Please read all instructions and warnings before using this product. Improper use will damage the product or personal safety. 1.The charging contact surface on the back of the mobile phone does not contain metal substances, such as iron sheets, rings, metal protective cases, etc. 2.When the mobile phone is charging, if it is interrupted or serious heating is found, it is recommended that the charging coil of the mobile phone is not fully aligned with the wireless charging coil, and then align it to the normal position. 3.This product has an over-current protection function. If the product is used improperly, it will turn off or reduce the output power, reducing the charging speed to ensure safety. Please check whether the equipment is used improperly or not. 4.Do not let children use alone under 12-year, especially the accessories. 5.Pleas use a dry soft cloth to clean the surface. Do not use chemicals, soap, or detergent. 6>Please don't dismantle the machine by yourself. The user's abnormal use or improper placement of this product may reduce the service life or damage the product. Therefore, the responsibility does not belong to the warranty responsibility or the manufacturer's responsibility. Please understand. 7.There is a self-discharge rate in the power bank, so the battery capacity of the power bank is not equal to the rechargeable capacity. 8.Pleas charge your power bank regularly (at least 5 months is recommended) to maintain its long service life. 9.Improper use of the power bank may cause damage to the product itself or even lead to the safety of personal and property. 10.If consumers violate the product manual and improperly apply or warn, the personal and property damage caused by consumers and the company will not bear any legal responsibility. 11.Non-professionals are not permitted to disassemble this product. 12.Avoid using sharp appliances or loads that exceed the output current of the product (the circuit will be protected, no output). 13.Avoid strong physical effects, including knocking, throwing, trampling, squashing, etc. Misuse, dropping, or excessive force may cause product damage. 14.Store the product in a cool, dry place. Do not store the product in a hot or humid environment. Do not dispose of the product in heat or fire. 15.Use of a power supply or charger not recommended or sold by the product manufacturer may result in a risk of fire or injury to persons.</p>	<p>16.Operating temperature should be between 0°C to 45°C/32°F to 113°F 17.Storage Temperature range: -10 to 60°C 18. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.</p> <p>INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS</p> <p>IMPORTANT SAFETY INSTRUCTIONS</p> <p>WAARSCHUWING – When using this product, basic precautions should always be followed, including the following:</p> <ol style="list-style-type: none"> Read all instructions before using the product. To reduce the risk of injury, close supervision is necessary when the product is used near children. Do not put fingers or hands into the product. Do not expose persons to the sun for long periods of time. Use a power outlet or charger recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons. Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons. Do not use the power bank in an environment that is extremely hot, cold, moist, or dusty. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury. Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons. Do not use a power bank in fire or excessive temperature. Exposure to fire or temperature above 100°C may cause explosion. The temperature of 100°C can be replaced by the temperature of 212°F. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained. Switch off the power bank when not in use. 	<p>podoruservices@hotmail.com US: 1-323-405-8820 Mon-Fri 9am - 6pm (PST) CA: 1-343-513-1011 Mon-Fri 9am - 6pm (PST) UK: 44-7488879800 Mon-Fri 6pm - 3pm (BST)</p> <p>English * CAUTION: Risk of Fire and Burns. ⚠ Do Not Open, Crush, Heat Above 45°C or (In)erate. ⚠ Follow Manufacturer's Instructions.</p> <p>Deutsch * ACHTUNG: Brand- und Verbrennungsgefahr; * Nicht öffnen, zerquetschen, über 45°C erhitzten oder verbrennen. * Befolgen Sie die Anweisungen des Herstellers.</p> <p>Français * ATTENTION: Risque d'incendie et de brûlures. ⚠ Ne pas ouvrir, écraser, chauffer au-dessus de 45°C ou incinérer. * Suivez les instructions du fabricant.</p> <p>Italiano * ATTENZIONE: Rischio di incendio e ustioni. * Non aprire, schiacciare, riscaldare sopra i 45°C o incendiare. * Seguire le istruzioni del produttore.</p> <p>Español * PRECAUCIÓN: Riesgo de incendio y quemaduras. ⚠ No abrir, aplastar, calentar sobre los 45°C o incinerar. * Siga las instrucciones del fabricante.</p> <p>Polski * OSTRZEGAWCZE: Ryzyko pożaru i poparzeń, * Nie otwierać, zgniatać, podgrzewać powyżej 45°C ani spalać. * Postępuj zgodnie z instrukcjami producenta.</p> <p>Nederlands * WAARSCHUWING: Risico op brand en verbranding. * Niet openen, pletsen, verhitten boven 45°C of verbranden. * Volg de instructies van de fabrikant.</p> <p>Svenska * VARNING: Risk för brand och brännskador. ⚠ Dölj inte, krossa inte, lämna över 45°C efter bränna in. * Följ tillverkarens instruktioner.</p> <p>Türkçe * DİKKAT: Yangın ve yanık riski. * Aşmayı, ezmeye, 45°C üzerinde istemeyin veya yakmayı. * Üretmenin talimatlarını uygulayın.</p> <p>Croatia * VAROVANJ: Nebezpečí požáru a popálení. * Neovítejte, nezdáte, neznechte nad 45°C a nezapálte. * Dostupné informace výrobce.</p> <p>UK CE FC IC RoHS Made in China</p>
---	---	---	---

