



70mm

85mm



G7 Music Player


User Manual

About HIFI WALKER G7

What's in the box?

- 1 * HIFI WALKER G7 Music Player
- 1 * USB Type-C Cable
- 1 * User Manual
- 1 * Strap
- 1 * Protective Cover
- 1 * Protective Film

HIFI WALKER G7 Button Functions

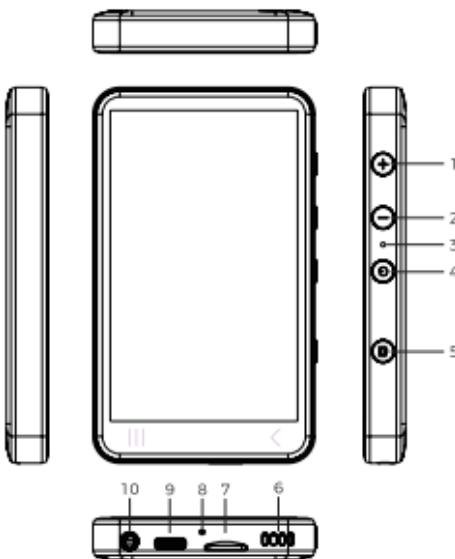

1. Volume Up	6. Speaker
2. Volume Down	7. TF card slot
3. Reset Hole	8. Mic Hole
4. Power button	9. USB Type-C Port
5. Camera	10. Earphone pot

Basic Operation

1.Charging

Battery will be fully charged in approximately 3 hours on a wall charger. If charging on a computer or other devices, the charging time varies as the input differs on each device.

2.Power on/off

Hold the power button 4 to turn on/off the player. Short press button 4 to turn on/off the screen.

3.Volume adjustment

- a. Press button 1 to increase volume.
- b. Press button 2 to decrease volume.
- c. Touch: When the volume bar pops up, you can adjust the volume by dragging the slider.

4.Take photo

Unlock the screen and press the camera button to enter photo mode.

5.Reboot the player

If the player freezes, press and hold the Power button for 10 sec to reboot the player. All settings will be reset to the factory settings.

6.Reset

If the player crashes, please press the "RESET" button to reset the system and force restart. If is still cannot be turned on, check whether the product is out of power.

7.Screenshot

Press and hold the "Power on/off" button. A screenshot shortcut will appear on the right side of the main interface. Tap to take a screenshot.

8.Main page introduction

a.Status bar: When you enter the specific function menu, the topmost column of the interface is the status bar, which displays the information: time, battery, power and Bluetooth status icon.

b.Function Icons: Click on the icons directly in the main interface to access various functions or make relevant settings for the device.

9.Return

Click "←" in the lower right corner to realize the function of returning to the previous menu.

Main Feature

- ◆ 4.0-inch full-viewing angle IPS display
- ◆ Full-screen capacitive touch control
- ◆ Multi-format audio support, synchronized lyrics display, multiple sound effects
- ◆ Support video playback, 1080P HD decoding
- ◆ Adopt Bluetooth 4.0 module, low power consumption, high stability, long transmitting distance (support two-way Bluetooth connection)

- ◆ With clock and alarm function
- ◆ Support many kinds of picture formats, support slide show
- ◆ Support TF card, maximum expansion of 128GB.
- ◆ Support multi-language
- ◆ Support external playback

Functional manuals

1. Gallery

In the main interface, click the picture icon to enter, and click the target file to open the file.

to open the file. Click to display the picture, and the back and toolbars will appear at the top.

The toolbars are: Delete, Play Slide Show, Edit, Rotate Left/Right, and Crop.

Set as background, details, print function. The lower left corner "can edit the picture. Slide left and right to turn pages.

2. FM Radio

In the main interface, click "Radio" icon to enter, click " " to manually fine-tune the radio band to select a station. Tap " "to realize quick selection of saved radio stations, "is the saved radio frequency band. The upper right corner "of is for automatic searching of radio bands. "is for selecting headphones or speakers. "can record the sound of radio bands. Tap "to

play or pause the radio.

3. Recorder

In the main interface, click the "Record" icon to enter.

1. Start recording: Click "●" to record.
2. Pause/resume recording: Click the "■" button to pause the recording, and then click "●" to continue recording.
3. Save recording: click "■" to save the recording.
4. Recording file list: click "≡" to view the recording file.
5. [Tip] Recording format is WAV and MP3.

4. Calendar

In the main interface, click the "calendar" icon to enter.

The upper left corner "▼" can choose: day, week, month, schedule corresponding to the format of the interface, select a day to add notes and other information. "⋮" menu bar has: New Event, Refresh, Search, Displayed Calendar, Clear All Events, Jump to, Settings and other functions.

5. File management

In the main interface, click the "File" icon to enter, you can view the local or TF card files, click the target file to open the corresponding file, click the target file within the music, video, pictures and other information, will enter the corresponding music, video, pictures and other functions of the interface.

Click on the music, video, picture, etc. in the target file, it will enter the corresponding music, video, picture and

other functional interfaces. It also has new folder and search function. Long press on a file will have the functions of copying, cutting, sharing, deleting, renaming, detailed information and so on.

6.Bluetooth

In the main interface, click the "Bluetooth" icon to enter. Click to open the upper-right corner switch, click to search for new devices to connect to the available devices and automatically connect back to the original device, at this time the top of the Bluetooth icon becomes "●"; in the search for "available devices" list, click to select the desired device to connect.

7.Camera

Select "Camera" in the main interface to enter. There are photo and video functions, select the person or scene you need to shoot and click "●" to take a picture, after taking a picture of the photo in the lower left shows a thumbnail, click to open the photo. The upper left corner of the "●" mode selection. Inside the "●" setting, you can personalize the viewfinder mode, EIS sound recording, white balance, video quality, avoid flicker and other functions.

After selecting the video click on the bottom "●" for the camera, camera interface, click on the "●" end of the camera, "●" to pause the camera "●" to continue to camera "●" in the camera to capture photos. Two fingers in the middle of the screen can zoom in and out to adjust the distance of the screen.

8. Setting

Select "Settings" in the main interface. You can click on the corresponding settings:

- a. Bluetooth: Bluetooth connection can be made to other devices, such as cell phones, Bluetooth earphones, stereos and other devices.
- b. Memory: You can check the internal storage status information of the camera.
- c. Applications and notifications: you can view the recently opened applications and view the notification permissions, etc.
- d. Battery: You can view the battery level and smart power saving settings.
- e. Display: You can adjust the screen brightness, night mode, wallpaper, hibernation time, screen rotation, font size, font style, screen saver and so on.
- f. Sound: You can adjust the media volume, alarm volume and notification volume adjustments.
- g. Storage: You can view and manage the camera and the TF memory card.
- h. Security: You can set the lock screen password of the camera to encrypt and protect the data.
- i. Auto shutdown: You can select 5 minutes, 10 minutes, 15 minutes, 20 minutes and never shutdown.
- j. Timer on/off: You can set the time for automatic on/off.

k.System: Language and Input Methods; Date and Time; Restore Factory Settings; About Device.

9.Charging operation and battery management

- a. This machine supports USB charging, connect one end of the USB port to the USB port of the computer, and then connect the other end to the charging port of this machine to start charging.
- b. Battery symbol stops flashing that charging is complete.
- c. New batteries need to go through several charging and discharging processes to achieve optimal performance.
- d. If you do not use the unit for a long period of time, please charge and discharge the unit at least once a month to prevent damage to the battery due to over-consumption.
- e. Damage to the battery caused by over-consumption of polymer batteries is not covered by the warranty. Problems caused by charging the unit with a charger that is not designed for this unit are not covered by the warranty.

10.TF card Instructions

This unit is equipped with a TF card expansion card slot, which allows you to put videos, pictures, e-books, etc. into the memory card. To use, insert the card correctly according to the setting of the slot, push the card inward until you hear a click. To remove the card, push the card into the slot and release it. The card will be

ejected automatically before removing the card.

Note:

- a. Insert the card correctly into the card slot of the machine.
- b. Do not pull out the memory card during the operation of the memory card (e.g. reading, copying, etc.), otherwise data errors may occur.
- c. Avoid using and storing the memory card in high temperature and high humidity environments.
- d. Keep the memory card away from liquids and corrosive materials.

Specification

Model	G7
Dimensions	105*62*11.7mm
Product Weight	107g
Display	4inch 480*800
Battery	2000mAh
Recommended Charger	5V/1A
Standby time	5 days
Audio format	MP3,OGG,FLAC,AAC,WAV,WMA,APE

Video format	RM,AVI,RMVB,FLV,MP4,DAT,MKV,MPG,MOV,TS
Record format	WAV,MP3
Camera	5MP
Picture format	JPG,BMP,GIF,PNG
Interface	Type-C USB2.0
Language	English, Chinese, Multi-language
TF Card Expansion	≤128GB

Frequently Asked Questions

1.Can't power ON the G7

Press and hold the Power button for 3 sec. If the status light does not light up, please charge the player for at least 10 mins and power on again.

If the status light does not light up after 10 mins of charging or if the status light does light up but the screen is dead, please contact our customer support.

2.Player freezes

Press and hold the Power button for 8 secs to reset the device. The status light will be off, and all setting will return to factory.

3.Can't hear music when playing

- Check if the volume is too low
- Check if your earphone is will plugged and not damaged

c.Check if your music file is well supported and not damaged

4.The navigation bar will disappear after open some applications

When the navigation bar disappears, you can check whether the navigation bar is hidden. Steps: Settings > Navigation bar > Hide navigation switch, and select Close. If there is no problem in the navigation bar setting, you can pull down from status bar to open the notification bar and the navigation bar will be appeared. You can choose to exit and return.

5.Some video formats can not be opened in the built-in video software

The built-in video software of this device has limited decoding capability. It can download third-party video software for playback. In addition, files in rmvb format are copyright protected, so this device cannot support this format.

6.The music player can not search for Bluetooth devices or can search for Bluetooth devices but keeps showing connection failure

a. It is necessary to check if the Bluetooth function of music player and Bluetooth devices is turned on. If so, please search for pairing.

b. Check if the Bluetooth device is in pairing state, if so, please disconnect it first, and then re-search for pairing.

c. Check if the music player has been connected to multiple devices before. If so, you can delete them all, and then reconnect.

Check if the Bluetooth version of the Bluetooth

d. headset or Bluetooth speaker is above 2.1. Sometimes if you can't find it, it may be because of incompatibility.


7.Frequent disconnection and reconnection after successful Bluetooth connection

- a. First of all, please confirm the use environment of the music player. If it is used in close proximity to other 2.4G signal sources or under obstacles, such as indoor wall penetration, signal base stations, routers high-speed rail, subway, etc., it will be interfered by the signal and thus cause disconnection, and you can try it in an open place.
- b. If the direct distance between the music player and Bluetooth device exceeds 8-10m, or the distance from the back to the obstacle exceeds 4-5m, the connection will be disconnected. Please use the Bluetooth function within the Bluetooth range of the product.


8.How to Connect G7 Device to Mac?

Step 1 : Download the "Android File Transfer" app from the following link: <http://android.p2hp.com/filetransfer/index.html>

Step 2 : After downloading, the icon will appear as shown:

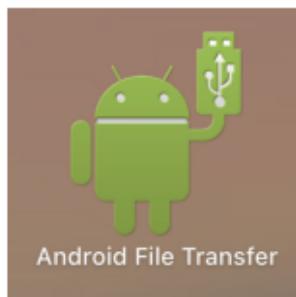

Step 3: Open the “Android File Transfer” app, then connect your device using a USB cable. Your Mac will then be able to read the contents of the Android device.

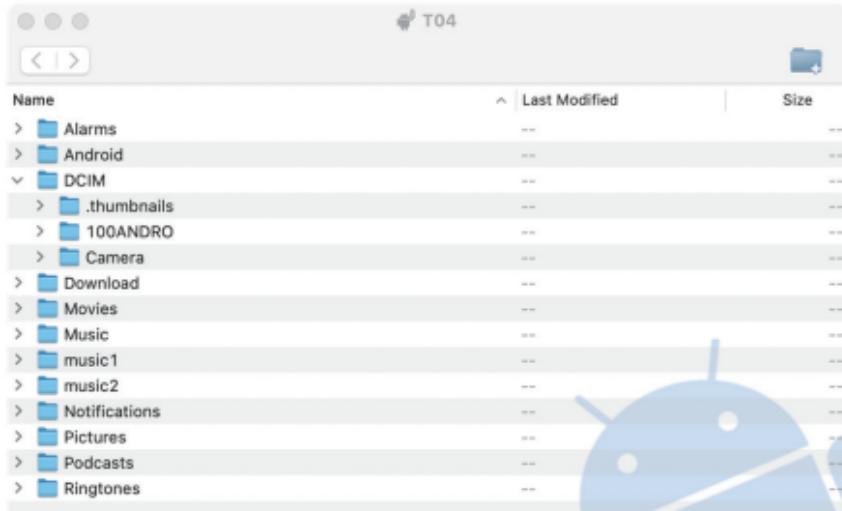

9. What if you forgot the password to open the screen?

You can use the universal password: 123789.

10. About parental control.

You can use the teenlimit that comes with G7. In addition, you can also download the app: Parental Control through Google Play, which can also help you better manage your children's entertainment time.




HIFI
WALKER®

Website: www.hifiwalker.com

Facebook: [@HIFIWALKER.official](https://www.facebook.com/HIFIWALKER.official)

Youtube: [HIFI WALKER](https://www.youtube.com/HIFIWALKER)

Email: Service@hifiwalker.com

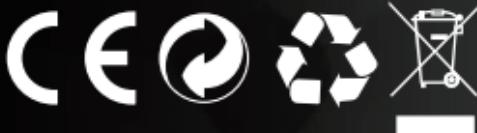

EU

REP

SUCCESS COURIER SL
CALLE RIO TORMES NUM.1, PLANTA 1,
DERECHA,OFICINA 3, Fuenlabrada, Madrid,
28947 Spain
successservice2@hotmail.com

Manufacture: Shenzhen Yudongxingzhe Limited
rm510,BLK A,QiXing ChuangYiGongchang,
BaoAn,518101 Shenzhen,China
yudong@outlook.com

ENG- Warning!

- Lithium battery inside
- Do not open the product
- Do not expose to heat, water, moisture or direct sunlight

GER- Warnung!

- Lithiumbatterie im Inneren
- Produkt nicht öffnen
- Nicht Hitze, Wasser, Feuchtigkeit oder direktem Sonnenlicht aussetzen

ESP- ¡Advertencia!

- Batería de litio en el interior
- No abra el producto
- No lo exponga al calor, agua, humedad o luz solar direct

FRA- Avertissement !

- Batterie au lithium à l'intérieur
- Ne pas ouvrir le produit
- Ne pas exposer à la chaleur, à l'eau, à l'humidité ou à la lumière directe du soleil

ITA- Attenzione!

- Batteria al litio all'interno
- Non aprire il prodotto
- Non esporre a calore, acqua, umidità o luce solare diretta

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.