


Speaker manual

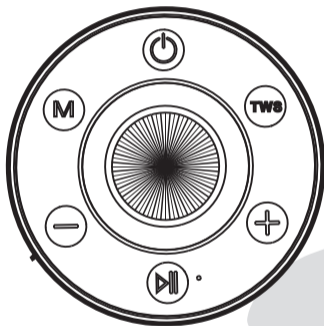

Waterproof Speaker T7

Kindly reminder:

- Before use, please make sure that the plug cover is tightly covered to prevent falling into the water and damaging the loudspeaker.
- Please do not use products at high temperatures, such as direct sunlight, stoves or open fires
- Put the product out of reach of children.
- Please use a soft cloth to clean the product instead of chemicals with strong irritation. Be sure to disconnect the power supply before cleaning.
- Do not puncture or disassemble the outer surface of the product in any way.
- Do not insert any metal objects into the equipment to prevent electric shock to the equipment.


Operation of key functions

-  : On/off key

Hold down the power button for 3 seconds to turn on and off the speaker.

-  :TWS key

1. Short press the LED lamp in turn in multiple modes
A. Breathing lamp: gradually change from one color to another.
B. Turn off the lights.
C. Fast flash: colorful flash.
2. If there are two loudspeakers, you can set up a pair of boxes. Please press and hold to pair or cut off the connection between the two loudspeakers.

-  :Next key

1. Long press to play the next song
2. Short press to turn up the volume

-  : Previous key

1. Long press to play the previous song
2. Short press to turn down the volume

-  ° : Play button

1. Short press to play or pause music, and short press to answer or end the call.
2. Press and hold to reject the call.
3. Double click to redial the previous call.
4. Press and hold to disconnect the current wireless connection.
5. In FM broadcast mode, long press the button to automatically search and save the broadcast channel, Short press to play or pause FM.

-  : Mode key

Short press to switch between wireless mode and FM broadcasting mode

Wireless pairing

Charge the speaker for 5 hours before initial use.

1. Hold down the power button for 3 seconds to enter pairing mode. In Bluetooth mode, if the blue has not been connected for about 5 minutes, it will automatically close.
2. Activate wireless capabilities on media player devices and search for "T7" to pair from the list. If the media device prompts for a password, enter "0000".
3. If pairing fails, refer to the user manual of the media player device for wireless settings. Remove all redundant unused models from the pairing device list and start again from step 1.

Charging equipment

Wireless speakers are powered by built-in rechargeable lithium batteries.

1. Open the DC 5V charging port cover.
2. Connect the charging cable from the USB socket on T7 to the standard USB charging port, such as computer or USB charger.

Technical indicators

Bluetooth: 5.0

Frequency range: 100hz-20hz

Working distance: 10M

Microphone: built in

Rated power: 5W

SNR: 85 + DB

Charging voltage: DC 5V

Battery capacity: 600mAh

Charging time: about 4 hours

Playback time: about 7 hours (about 50% sound level)

Shell material: ABS + silica gel

Speaker size: 85*85*45.5mm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.