

Congratulations and thank you very much for choosing a Trenbader product!

OVERVIEW

Imagery and audio are both sensorially stimulating. Meet the Trenader Bravo Gallery, a multifunctional 3-in-1 accessory that's decorative, easy to use and uniquely customizable.

Though it may display as a flat paneled photo frame, this multipurpose appliance is also engineered to perform as a portable boombox and wireless radio. A truly revolutionary design configured to eliminate desk clutter, the picture frame unit comes equipped with built-in Bluetooth speakers and a FM tuner. It's rechargeable, portable and sophisticatedly simple.

Easily personalize the picture frame with your own photos! Insert everything from family portraits to printed artwork. Simply remove the plastic lens & pop in the 5x7 photo or print of your choosing, to show off family photos, advertise, memorialize loved ones, greet visitors or exhibit artwork.

Please read and keep all safety and use instructions.

Important Safety Instructions

- Read through and keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, objects have fallen into the apparatus, does not operate normally, or has been dropped.

Warnings / Cautions:

This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device. Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product. Do NOT make unauthorized alterations to this product. Do NOT use a power inverter with this product. Use this product only with the standard USB power source.

Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.


Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like). The product label is located on the bottom of the product.

Guide to features: Front

- Detachable Picture Frame
- Frame Windows (Lens)
- USB Type C Port
- Audio Aux / External Antenna
- Stand
- Volume Dial
- Power On/Off (Long Press 3s)
- Play/Pause (Short Press)
- Previous
- Next
- Bluetooth (Bluetooth Release)
- Source (Radio / Aux / Bluetooth)
- FM Radio Tuner
- Indicator (Aux-Blue/Radio-Green)
- Bluetooth Indicator
- Power Indicator

WHAT IS IN THE BOX?

- 1 x Trenbader Bravo Gallery Speaker
- 1 x Quick Start Instruction Manual
- 1 x Photo Trimming Guide
- 1 x Audio Cable
- 1 x USB A to USB Type C Charging Cable
- 1 x External Antenna

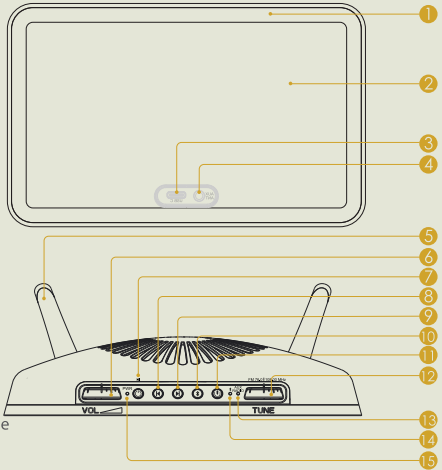

Instruction Manual

- Deattachable Picture Frame
Swap the picture with the deattachable frame
- Frame Windows Lens
- Charge the device with USB Type C power, 5V 2000mA
- Audio Aux / External Antenna Terminal
- Stand
- Volume Dial
- Power On/Off (Long Press 3s)
- Play/Pause (Short Press)
- Previous
- Next
- Bluetooth (Bluetooth Release)
Short press to activate bluetooth, indicator blink white
Long press 3 seconds to release the paired bluetooth device and switch to ready to pair new device, indicator blink blue.
- Source (Bluetooth / Radio / Aux)
Press to switch to activate the BLUETOOTH/FM/AUX function
- FM Radio Tuner
Twist the analog tuning dial to the right or to the left to adjust the FM frequency range.

- Source Indicator - FM Radio (Green Color)
Brightest green when best tuning has been achieved. Some listenable FM stations will not light the tuning indicator and should be tuned by ear for the clearest signal.
- Source Indicator - AUX Indicator (Blue Color)
The device will switch to Aux input once the audio cable plug in. and indicator light up in blue color.
- Bluetooth Indicator
The speaker will stay at searching mode for paired device, the indicator blink white. Press and hold the release button to pair new device, the indicator blink blue. The indicator glow white once connected.
- Power Indicator
The Power LED indicator glow green while the device on, glows red while power connected, When fully charged, glows green.

Low Battery Alert

The Power LED indicator will blink in red color while the battery level is under 15%.

Customize With Pictures

Simply Insert your own 5x7 photos to customize the Bluetooth frame. Swap out the pictures and change up your music playlist at a whim. Use your customized photo display to show off family photos, advertise, memorialize loved ones, greet visitors or exhibit artwork.



Placement Guidelines

For best Bluetooth® performance, place your mobile device within 33 ft. (10 m) of your speaker, and make sure there is a clear line of sight between you and your speaker. Moving your device farther away, or not having a clear line of sight may impact sound quality, and your device may disconnect from your speaker.

Keep other wireless equipment at least 3 ft. (1 m) away from your speaker.

Place your speaker and your device outside of and away from metal cabinets, other audio/video components and direct heat sources.

Avoid placing your speaker on wet or dirty surfaces.

Connect To Power

Your SPEAKER ships with a partial charge. Before using your speaker for the first time, connect your speaker to a standard USB power source, Your speaker does not need to be fully charged, but it does require the initial connection to activate the battery.

- Plug the small end of the USB cable into the USB Type C connector on your speaker.
- Plug the other end into the USB power supply.
- Plug the USB power supply into an AC (mains) outlet. If necessary, plug the AC adapter for your region into the AC (mains) outlet.

The (Power)LED indicator glows red while power connected, When fully charged, glows green.

Low Battery Alert

The Power LED indicator will blink in red color while the battery level is under 15%

Powering on/off your speaker

Press and hold the Power ON/OFF button to turn on the speaker. you hear a tone while the speaker is on, you can start to stream your music wirelessly and use the radio. Press and hold the Power ON/OFF button to turn off the speaker.

Play / Pause

While the speaker is on, short press the Power ON/OFF button will Play or Pause the music.

Auto-Off

The speaker powers off after 10 minutes of inactivity (no sound coming from your speaker) while using the following connections and power sources:

- AUX connection operating on battery or AC (mains) power.
 - Bluetooth® connection operating on battery power.
- The speaker powers off after 5 minutes if no any connections.

Bluetooth Operation

Prior to pairing, verify your device is Bluetooth anable and your device is not connected to any other Bluetooth product. Devices may pair differently. Below is a general guide.

- Turn the volume up about ¼ to start. Simply press the bluetooth button or source switch to activate bluetooth. This will power on the Bluetooth to pairing mode. Press the bluetooth button - Connecting mode Press and hold the bluetooth button - Pairing mode



Blink White Connecting



Blink Blue Ready to Pair



Glow White Connected

- Turn on the Bluetooth wireless technology on your enabled device.
- Select "Trenbader Bravo Gallery (Not Paired)" when it appears on your device's screen to initiate searching.

- You will hear a tone from the Trenbader Bravo Gallery confirming connection

and you can begin playing your music wirelessly. Adjust the volume level on your device. You should not have to pair your device again, depending on your device, you may need to make multiple attempts at pairing and/or connecting to the speaker, but please give your device adequate time to pair or connect before repeating the process.

If you have already powered on your speaker and paired at least one mobile device, the Bluetooth® indicator blinks white and connects to the last paired mobile device. The Bluetooth® indicator glows solid white.

FM Radio Operation

Switch the source to FM radio position. This will set your device to FM radio. Start tuning the FM tuning dial to search the best radio station for radio listening.

The internal FM antennas will provide good reception. For FM radio, rotate the radio for best reception. Buildings made with concrete, steel, or aluminum siding will hinder reception. Household appliances, electric blankets, computers, CD players, and other electronic devices can also adversely affect reception or inject noise. If you experience this, move the FM radio further from the offending device. Metal surfaces may also hinder FM reception

External Antenna

You can also connect the external antenna to the terminal, and hang the other end toward the windows for better FM reception.

Bluetooth Operation

Model: BGA
Output: 4W x 2 (RMS)
Frequency: 90Hz-20,000Hz
Input: DC5.0V 2000mA
Battery: 3.7V 2600mAh
Charging Duration: 2 hours.
Max current: 4000mA
Impedance: 4 Ω
S/N: d≥82dB
FM Frequency: 76.0-108.0MHz
Driver: 2 x 40mm Full-Range Driver with Radiator
FM Radio Exteneral Antenna: 1200mm(47inches)
Dimensions:
 7.17" W x 2.87" H x 4.45" D
 (182mm W x 73mm H x 113mm D)
Weight: 0.83 lbs (0.375 kg)

Notes

Specifications subject to change without notice. Trenbader reserves the right to make product changes without notice. trenbader word marks and logos are trademarks of Sunrado Technoligy Ltd. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.Other trademarks and trade names are those of their respective owners.

Warranty

Trenbader warrants to the original purchaser of the below listed items for 6 months after initial purchase of the products that it shall be free of defects in design, assembly, material, or workmanship, and will repair or replace, at its option, any defective unit free of charge. This is a Limited Warranty subject to the limitations and exclusions set forth herein.

FCC Statement:
 This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
 Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

INSTRUCTION MANUAL
 Trenbader Bravo Gallery Picture Frame
 Wireless Speaker



Trenbader

Model BGA