


80mm

ΑΕΡΓΕΚ

User Manual

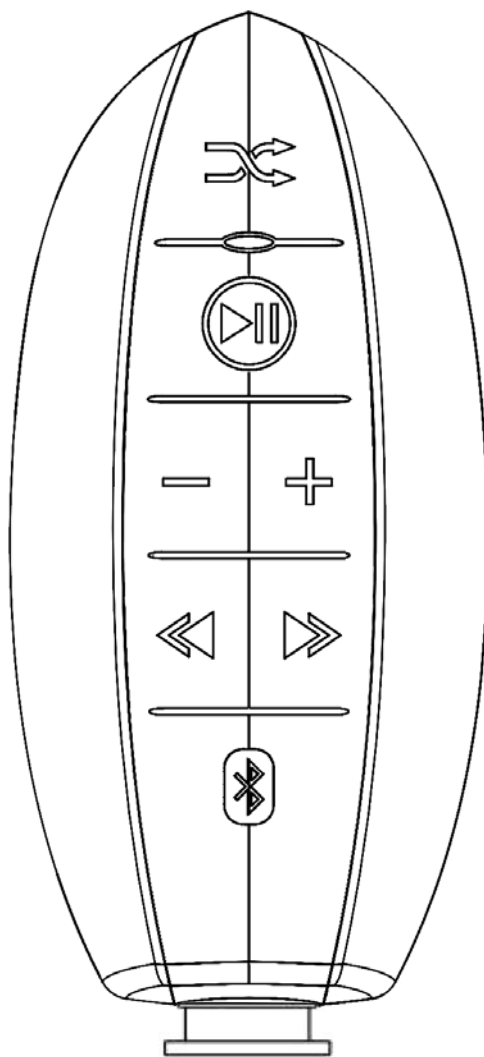

110mm

S19 WATERPROOF MUSIC PLAYER

English (1-8) | Español (9-16)

CONTENT

English

Before Use.....	1
Important Notice	1
Charge and Transmission.....	1
Product Overview.....	3
LED Indicator Instruction.....	5
Music.....	6
Bluetooth.....	7
Specifications.....	7
Help and Troubleshooting.....	8

Español

Antes de Usar.....	9
Importante Noticia.....	9
Cargar & Transferir	10
Descripción del Producto.....	12
Instrucción del Indicador LED.....	13
Música.....	14
Bluetooth.....	15
Especificaciones.....	16
Ayuda y Resolución de Problemas.....	16

S19 WATERPROOF MUSIC PLAYER

Before Use

Thank you for purchasing **AGPTEK** Music Player. Please read this user manual carefully before using the product.

Manufacturer: ORIVER (SHENZHEN) LIMITED

Address: RM510, BLK A, Qi Xing Chuang Yi Yuan, District 28, Bao'an, ShenZhen, China.

Email: support@agptek.com

Important Notice

❖ Bluetooth:

- Bluetooth can only connect to mobile phones.
- Bluetooth DO NOT work underwater, the effect will be reduced when used underwater.
- Fast forward or rewind function DO NOT work when playing music in Bluetooth mode.

❖ Charge and Transmission:

- Please keep it dry completely before charging or transmitting (Although the S19 player is waterproof, charging with water on it can cause serious damage to the player.)

❖ Usage Notice:

- Please insert the earphone into the jack of player before swimming. Please DO NOT use the extension cord while swimming because it is

non-waterproof. And the extension cord is used for other non-underwater sports (such as running).

- Please DO NOT use the player continuously for more than 2 hours underwater to prevent the risk of damage to the player from water pressure.
- In order to avoid short-circuit when charging, please wash it with clean water after swimming and then shake it dry, and place it air-dried for at least 1 hour before charging. (Note: If the machine is in a hot and dry environment, at least 1 hour to dry out; if the machine is in a humid environment, at least 2 hours to dry out.)
- If you have used our MP3 in sea water, please rinse the sand in the earphone hole with clean water, dry it out before charging.

Note: Do not disassemble the machine by yourself because the water vapor may enter during the process, causing short-circuit or damage to the machine.

Charge and Transmission

❖ Charge:

- Please fully charge your device before using it for the first time.
- It is recommended to charge by computer, 5V/1A or 5V/500mAh adapter, not recommended to use 5V/2A and above fast charging charger.
- After fully charged, it can play for 8-10 hours.

❖ Transmission:

1. Connect the player with your computer via a USB cable with transmission function.
2. When your PC recognizes the player, the disk name will be displayed on the PC as "AGP-S19".
3. Then download the file to the computer and drag it to a folder of the player.
4. Support formats: MP3/WMA/WAV/FLAC/M4A/APE.

Note: In order to avoid short-circuit while charging, please wash it with clean water after swimming and then shake it dry, needed at least 1 hour to dry out before charging and transmitting

Product Overview



1. Play Mode: Play Order By Shuffle / Play Order By Name
2. LED Indicator Light
3. Power on / Power off, Play / Pause: Long press for 3 s to turn on or off, single click to play or pause.
➤ **Note:** When the player crashes, you can press and hold the power button for more than 8 s to reset.
4. Volume-
5. Volume+
6. Previous Track / Previous Folder / Fast Rewind
7. Next Track / Next Folder / Fast Forward
8. Bluetooth Mode
9. 3.5mm Earphone Jack (Charge / Transmission)
10. Clip: 360° Swivel Clip
11. Waterproof Connector
12. USB Cable: The 3.5mm end can be inserted into the player, the USB port to connect a computer or an adapter.

LED Indicator Instruction

STATUS	BEEP	LED INDICATOR
Power on/off	Power on/off	Triple Flashing Green
Play	Play	Flashing Green
Pause	Pause	Solid Green
Play from Memory	Play from Memory	/
Play Order by Shuffle	Play Order by Shuffle	/
Play Order by Name	Play Order by Name	/
Previous Folder	Previous Folder	/
Next Folder	Next Folder	/
Bluetooth Play	Bluetooth Play	Solid Green
Bluetooth Collecting	Bluetooth Collecting	Flashing Red and Green Alternately
Bluetooth Paired	Bluetooth Paired	/
Low battery	/	Flashing Red
Charging	/	Flashing Red
Fully Charged	/	Flashing Green

Music

❖ Play Music

1. Long press  for 3 s to turn on the player. Single click the button to pause or play music.
2. When playing music, press  or  to the previous track or next track. Long press  or  to fast rewind or fast forward.
3. Press  /  buttons to adjust the volume.

❖ Toggle Folder

Press  to pause music, single click  to previous folder, and it will play music in that folder; single click  to the next folder, and it will play music in that folder.

❖ Play Mode

Default Playback Mode: Play Order By Name.

Shuffle Mode: Single click  , when you hear “Play Order By Shuffle”, then it will toggle to shuffle mode.

Play In Order: Single click  , when you hear “Play Order By Name”, then it will toggle to play in order mode.

Note: In Bluetooth mode, it will play the music from the smart phone. You can only toggle the play mode on your phone. When you click  , it will return to local playback.

Bluetooth

❖ Bluetooth Pairing

1. Turn on the Bluetooth of your mobile phone.
2. Click the  button on the player, you can hear "Bluetooth play", and the player will toggle from local playback to Bluetooth mode.
3. When you hear "Bluetooth collecting", you can see that the name "AGP-S19" is displayed on the Bluetooth list of the mobile phone. After you select it, you will hear "Bluetooth paired". After the pairing is successful, you can play music.
➤ **Note:** After the Bluetooth connection is successful, the phone's music will not be played automatically, you need to click  again to play.
4. The pairing process only needs to be manually done once (if not formatted, or the phone is not connected to other Bluetooth devices). When your phone's Bluetooth is turned on and the S19 is in Bluetooth mode, they will be connected automatically.

Specifications

Housings	ABS+PC+Silicone
Size	73.5*33.5*17mm (Clip not included) 73.5*33.5*27.5mm (Clip included)
Net Weight	30g
Interface Type	3.5mm

Memory		8GB	
Format	Music	MP3、WMA、FLAC、APE	
	Bluetooth	MP3、WMA、FLAC、APE	
Usage Time	Music	Wired	12 hours
		Bluetooth	3.5 hours
Battery		150mAh Lithium Polymer Batteries	
Charge Time		1.5-2 hours	

Help and Troubleshooting

▲ Can't turn on the player: The player cannot be powered on, crashes, freezes or has a firmware error.

1. Power off the player and try again.
2. Press and hold the power button for more than 8 s to reset.
3. Update the firmware. Please contact our customer service or check our website at <https://www.agptek.com/blog> to download the firmware.

▲ Can't download files from computer.

1. Please confirm whether it's connected properly.
2. Please check whether the storage space of the internal memory is full.
3. Please check whether the USB cable is damaged.

▲ Can't recognize the player when connected to the computer via USB cable.

1. Reconnect it.
2. Restart the computer and reconnect it.
3. Connect your player to another USB port.
4. Charge the player for about 10 minutes first.

S19 REPRODUCTOR DE MÚSICA IMPERMEABLE

Antes de Usar

Gracias por comprar el **AGPTEK** reproductor de música . Lea atentamente este manual de usuario antes de utilizar el producto.

Fabricante: ORIVER (SHENZHEN) LIMITED

Dirección: RM510, BLK A, Qi Xing Chuang Yi Yuan, Distrito 28, Bao'an, ShenZhen, China.

Email: support@agptek.com

Importante Noticia

❖ Bluetooth:

- Bluetooth solo se puede conectar a teléfonos móviles.
- Bluetooth NO funciona bajo el agua, el efecto se reducirá cuando se use bajo el agua.
- La función de avance rápido o rebobinado NO funciona cuando se reproduce música en el modo Bluetooth.

❖ Cargar & Transferir:

- Manténgalo completamente seco antes de cargar o transmitir. (Aunque el reproductor S19 es resistente al agua, cargarlo con agua puede causar daños graves al reproductor).

❖ **Noticia de Uso:**

- Inserte el auricular en la toma del reproductor antes de nadar. NO use el cable de extensión mientras nada porque no es impermeable. Y el cable de extensión se usa para otros deportes no submarinos (como correr).
- NO utilice el reproductor de forma continua durante más de 2 horas bajo el agua para evitar el riesgo de daños al reproductor debido a la presión del agua.
- Para evitar un cortocircuito durante la carga, lávelo con agua limpia después de nadar y luego agítelo para secarlo y déjelo secar al aire durante al menos 1 hora antes de cargarlo. (Nota: si la máquina está en un ambiente cálido y seco, al menos 1 hora para que se seque; si la máquina está en un ambiente húmedo, al menos 2 horas para que se seque).
- Si ha utilizado nuestro MP3 en agua de mar, enjuague la arena del orificio de los auriculares con agua limpia y séquelo antes de cargarlo.

Nota: No desmonte la máquina usted mismo porque el vapor de agua puede entrar durante el proceso, provocando un cortocircuito o daños a la máquina.

Cargar & Transferir

❖ **Cargar:**

- Cargue completamente su dispositivo antes de usarlo por primera vez.


- Se recomienda cargar por computadora, adaptador de 5V / 1A o 5V / 500mAh, no se recomienda usar un cargador de carga rápida de 5V / 2A y superior.
- Después de cargarse completamente, puede reproducir durante 8-10 horas.

❖ Transferir:

1. Conecte el reproductor a su computadora mediante un cable USB con función de transmisión.
2. Cuando su PC reconozca el reproductor, el nombre del disco se mostrará en la PC como "AGP-S19".
3. Luego, descargue el archivo a la computadora y arrástrelo a una carpeta del reproductor.
4. Formatos de soporte: MP3 / WMA / WAV / FLAC / M4A / APE.

Nota: Para evitar cortocircuitos durante la carga, lávelo con agua limpia después de nadar y luego agítelo para secarlo, necesita al menos 1 hora para secarse antes de cargar y transmitir.

Descripción del Producto

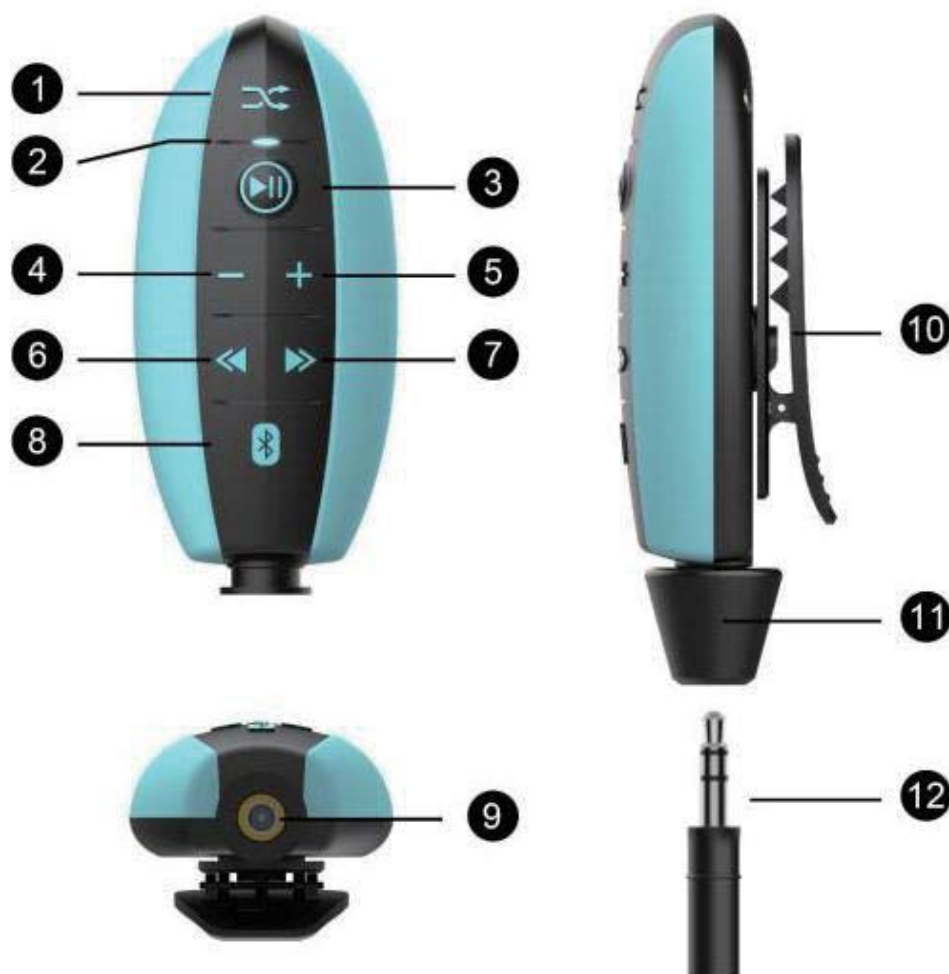

1. Modo de reproducción: Reproducción por aleatorio / Orden por nombre

2. Luz indicadora LED

3. Encendido / Apagado, Reproducción / Pausa: mantenga presionado durante 3s para encender o apagar, un solo clic para reproducir o pausar.

Nota: Cuando el reproductor se bloquea, puede mantener presionado el botón de encendido durante más de 8 segundos para reiniciar.

4. Volumen -

5. Volumen +

6. Pista anterior / Carpeta anterior / Rebobinado rápido

7. Pista siguiente / Carpeta siguiente / Avance rápido

5. Volumen +
6. Pista anterior / Carpeta anterior / Rebobinado rápido
7. Pista siguiente / Carpeta siguiente / Avance rápido
8. Modo Bluetooth
9. Conector para auriculares de 3,5 mm (carga / transmisión)
10. Clip: Clip giratorio de 360 °
11. Conector impermeable
12. Cable USB: el extremo de 3,5 mm se puede insertar en el reproductor, el puerto USB para conectar una computadora o un adaptador.

Instrucción del Indicador LED

ESTADO	BIP	INDICADOR LED
Encendido/apagado	Power on/off	Verde intermitente Triple
Reproducir	Play	Verde intermitente
Pausa	Pause	Verde solido
Reproducir desde la memoria	Play from Memory	/
Orden de reproducción aleatoria	Play Order by Shuffle	/
Reproducir Ordenar por nombre	Play Order by Name	/
Carpeta anterior	Previous Folder	/
Carpeta siguiente	Next Folder	/
Juego de Bluetooth	Bluetooth Play	Verde solido

Recopilación de Bluetooth	Bluetooth Collecting	Parpadeando en rojo
Bluetooth emparejado	Bluetooth Paired	/
Batería baja	/	Rojo parpadeando
Cargando	/	Rojo parpadeando
Completamente cargado	/	Verde parpadeando

Música

❖ Reproducir Música

1. Mantenga pulsado  durante 3 s para encender el reproductor. Haga clic en el botón para pausar o reproducir música.
2. Al reproducir música, presione  o  para ir a la pista anterior o siguiente. Mantenga pulsado  o  para rebobinar o avanzar rápidamente.
3. Presione  /  para ajustar el volumen.

❖ Cambiar Carpeta

Presione  para pausar la música, haga clic  a la carpeta anterior y reproducirá la música en esa carpeta; haga clic  a la siguiente carpeta y reproducirá música en esa carpeta.

❖ Reproducir Modo

Modo de reproducción predeterminado: Reproducir orden por nombre.
Modo aleatorio: un solo clic  , cuando escuche "Play Order By

Shuffle", cambiará al modo aleatorio.

Reproducir en orden: un solo clic  , cuando escuche "Play Order By Name", cambiará para reproducir en modo de orden.

Nota: En el modo Bluetooth, reproducirá la música del teléfono inteligente. Solo puede cambiar el modo de reproducción en su teléfono. Al hacer clic  , volverá a la reproducción local.

Bluetooth

❖ Bluetooth Emparejamiento

1. Encienda el Bluetooth de su teléfono móvil.
2. Haga clic  , podrá escuchar "Bluetooth play" y el reproductor cambiará de reproducción local al modo Bluetooth.
3. Cuando escuche "Bluetooth collecting", verá que el nombre "AGP-S19" se muestra en la lista de Bluetooth del teléfono móvil. Después de seleccionarlo, escuchará "Bluetooth paired". Después de emparejamiento se haya realizado correctamente, podrá reproducir música.
➤ **Nota:** Después de que la conexión Bluetooth sea exitosa, la música del teléfono no se reproducirá automáticamente, debe hacer clic  nuevamente para reproducir.
4. El proceso de emparejamiento solo debe realizarse manualmente una vez (si no está formateado o el teléfono no está conectado a otros

dispositivos Bluetooth). Cuando el Bluetooth de su teléfono esté encendido y el S19 esté en modo Bluetooth, se conectarán automáticamente.

Especificaciones

Carcasas		ABS+PC+Silicona	
Tamaño		73.5*33.5*17mm（Clip no incluido）	
Peso de neto		30g	
Tipo de Interfaz		3.5mm	
Memoria		8GB	
Formato	Música	MP3、WMA、FLAC、APE	
	Bluetooth	MP3、WMA、FLAC、APE	
Uso Tiempo	Música	Cable	12 Horas
		Bluetooth	3.5 Horas
Batería		150mAh Baterías de polímero de litio	
Tiempo de carga		1.5-2 Horas	

Ayuda y Resolución de Problemas

▲ **No se puede encender el reproductor: el reproductor no se puede encender, se bloquea, se congela o tiene un error de firmware.**

- 1.Apague el reproductor y vuelva a intentarlo.
2. Mantenga presionado el botón de encendido durante más de 8 s para reiniciar.
- 3.Actualice el firmware. Póngase en contacto con nuestro servicio de atención al cliente o visite nuestro sitio web en

<https://www.agptek.com/blog> para descargar el firmware.

▲ No puedo descargar archivos de la computadora.

1. Confirme si está conectado correctamente.
2. Compruebe si el espacio de almacenamiento de la memoria interna está lleno.
3. Compruebe si el cable USB está dañado.

▲ No puedo reconocer el reproductor cuando está conectado a la computadora mediante un cable USB.

1. Vuelva a conectarlo.
2. Reinicie la computadora y vuelva a conectarla.
3. Conecte su reproductor a través de otro puerto USB u otro cable USB.
4. Primero cargue el reproductor durante unos 10 minutos.

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Mambate US Inc may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The transmitter must not be colocated or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. The installation and use of this product are not restricted.