


PC Wireless Game Controller

User’s Manual

1.Product information

Key Function

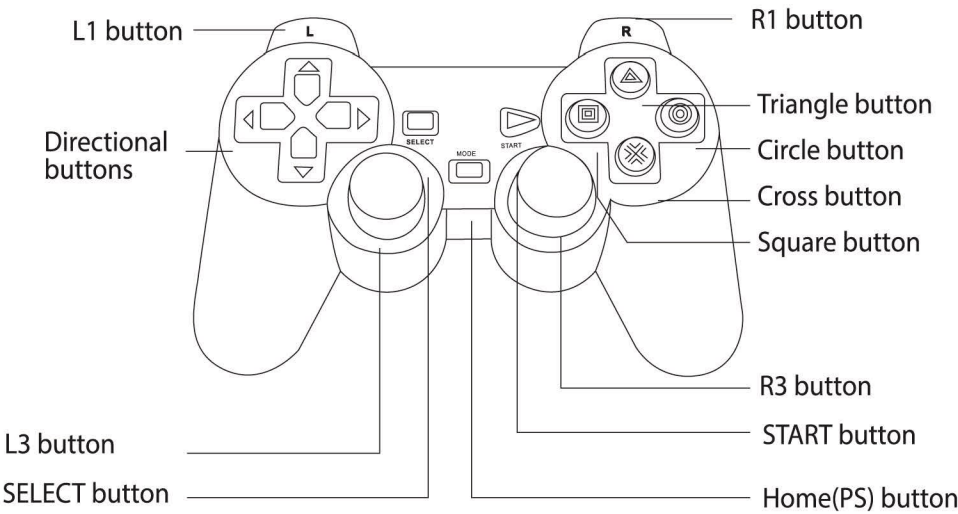

Mode and LED Indicator

- 1) PC mode, right led will be on.
- 2) XINPUT mode ,left led will be on.
- 3) ANDROID mode, two led will be on.

2. Applicable Description

- 1) Application and Connection

PC: Windows XP/7/8/8.1/10

- 2) Driver Description

If need the vibration mode in D-Input, need to install driver.

3. Operating Instructions

- 1) Plug the receiver into USB port of your computer or relative devices
- 2) Use two AAA batteries and switch on your game controller
- 3) Press the START button to connect
- 4) Mode Selection

In D-Input mode, press HOME key for 5 seconds to switch for PC/ANDROID/XINPUT modes

4. Product Specification

Product Name	USB Wire Gamepad	Product Type	PCJ-2356
Application	PC(Windows XP/7/8/10) xinput/android	Operating Temperature	-20 ℃ ~ + 65 ℃
		Humidity	20 ~ 80%
Working Voltage	3 V	Working Current	150 mA
Size	155x110x60 mm	Product Weight	205 g

Federal Communications Commission Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must acceptany interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference, to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.