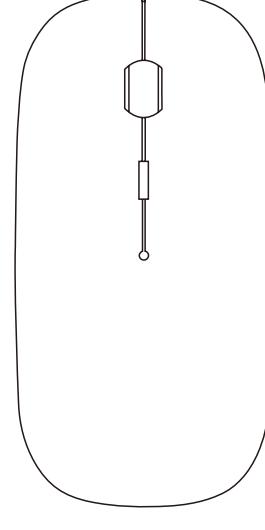
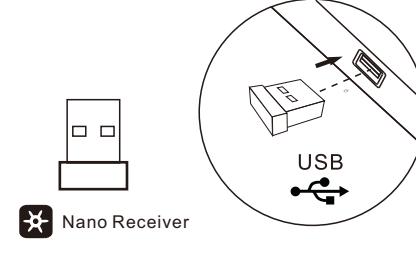


<p>FCC Warning</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,</p>	<p>which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p>	<p>Thank you for choosing our dual mode (Bluetooth+2.4G) wireless mouse. We provide 1 year warranty. If you get any problem, please feel free to contact our customer service team.</p>	<p>Dual Mode Wireless Mouse</p>  <p>Join Community</p> <p>f i p t</p>
<p>Product Features</p> <ul style="list-style-type: none"> ◆ Dual Mode: Bluetooth and 2.4G wireless. ◆ Rechargeable: Built-in rechargeable battery. ◆ Accurate Tracking: Professional IC positioning accuracy. ◆ Silent Click: Soundless design for the right and left buttons. ◆ Auto Sleeping: Be in sleep mode in 8 minutes of inactivity. <p>Charging Instruction:</p> <p>It is recommend to use computer USB interface to charge the mouse. The blue light beside the scroll wheel will be on while charging and then goes off once fully charged, it takes 1-2 hours.</p> <p>2.4GHz Mode</p> <ol style="list-style-type: none"> 1. Take out Nano Receiver (at the bottom of the mouse). 2. Then plug it into the computer's USB port. 	<p>3. Push the "OFF" button to the  position.</p> <p>4. Move the mouse or tap the left and right buttons to use it normally.</p>  <p>Bluetooth Mode</p> <p>Bluetooth Mode (without coding button):</p> <p>Simply switch the "OFF" button to  position, then find "Bluetooth Mouse" and pair.</p> <p>Bluetooth Mode (with coding button):</p> <ol style="list-style-type: none"> 1. Switch the "OFF" button to the  position. 2. Press and hold the "coding button" for 3 seconds. 3. Find "Bluetooth Mouse" and pair. 	<p>iPad Instructions:</p> <ol style="list-style-type: none"> 1. Update the system to iOS 13 or above, and open the device's Bluetooth function. 2. Open Setting - Accessibility - Touch - Assist Touch - Open 3. Device-Bluetooth-Search "Bluetooth Mouse" and click to pair. <p>Note:</p> <ol style="list-style-type: none"> 1. Please input "no code" or "0000" when a four-digit code is required. 2. If connection fails, please delete all paired Bluetooth devices, restart your computer, turn off the mouse, then reconnect the mouse according to the "Bluetooth Mode" guide. 3. Please do not get too close to the "Wi-Fi router" or other wireless signal transmission equipment to avoid interference. 	<p>Trouble Shooting</p> <ol style="list-style-type: none"> 1. Charge the mouse for about 2 hours before first time using it. 2. If the mouse is not used for a long time, it will automatically go to sleep, you can click any button to wake it up. 3. When the mouse is move slowly, check if the battery is low. It is recommended to charge in time. 4. When the mouse is not connected, please check if the power switch at the bottom of the mouse is turned on. Or turn off the mouse, move the Nano receiver to other USB interface try again. 5. If you are not using the mouse for a long time, please turn off the power switch manually to save power. 6. Please try to stay away from strong interference sources.