

产品介绍

产品参数

名称	智能宠物饮水机
型号	PTM-633
尺寸	192*192*160mm
电池	5000mAh
额定电压/电流	5V/1A
额定功率	5W
容量	3L
材质	SUS304+ABS

产品包含

安装步骤

步骤一 清洗部件

1. 安装或者更换滤芯前, 请将滤芯在清水中浸泡5分钟, 将其冲洗干净(去除活性炭在加热过程中产生的碳沫)
2. 用干净的水冲洗不锈钢盘, 滤水盘, 水泵, 水桶, 出水嘴, 出水管。

步骤二 组装产品

1. 将干净的饮用水倒入饮水机桶里, 请不要超过最大水位线
2. 把水泵和出水管按图指示放入桶里, 底部有限位, 放平为正确。

步骤三 安装滤芯

3. 按图指示放上滤水盘, 再放上不锈钢盘, 再插入出水嘴
4. 按图指示放上不锈钢盘, 再插入出水嘴

步骤四 安装底座

5. 把饮水机底座翻到背面, 按一下橘色开关, 机器正式开机, 首次使用电池会有60%的电量。
6. 最后把饮水机放置底座上即可使用。

功能介绍

II. 更换滤芯和水泵海绵

1. 建议每15天更换一次滤芯, 更换滤芯前, 请先用清水浸泡5分钟, 再用清水冲洗, 去除活性炭在运输过程中产生的粉末。
2. 建议每15天更换一次水泵海绵。
3. 为了您的宠物健康, 请及时更换滤芯。

III. 水泵的清洁和保养

1. 打开水泵盖子
2. 把马达里面的叶轮转子用毛刷后面的钩子取出来
3. 用毛刷清洗叶轮转子
4. 清洁叶轮转子后, 请用清水冲洗。
5. 请确保叶轮转子干燥, 并重新装回。
6. 请确保水泵盖子干燥, 并重新装回。
7. 请确保水泵盖子干燥, 并重新装回。
8. 请确保水泵盖子干燥, 并重新装回。
9. 请确保水泵盖子干燥, 并重新装回。
10. 请确保水泵盖子干燥, 并重新装回。
11. 请确保水泵盖子干燥, 并重新装回。
12. 请确保水泵盖子干燥, 并重新装回。

常见问题解答

1. 次机不工作

答: 1. 请确保能正常连接, 或者水管连接不紧, 请重新插入。
2. 请确保水泵是否装配到位, 不管任何时候清洗饮水机或者最后组装时都要先放水泵和水管, 然后放底座再放滤芯盖。

2. 饮水机指示灯不亮

答: 表示饮水机没有水或者水位最低位, 也可能需要将水泵拆开清洁。

3. 插入Type-C充电线后, 充电指示灯不亮

答: 检查充电器是否与墙壁插座完全接触, 确保连接良好。

4. 噪音增加, 出水减少

答: 请清洁叶轮转子, 洗净水。

5. 感应失灵

答: 请感应区朝向宠物。

用户手册
宠物饮水器-PTM-633
User Manual
Smart Pet Water Fountain-PTM-633

Product Description

Specifications

Name	Smart Pet Water Fountain
Model	PTM-633
Dimension	192*192*160mm
Battery	5000mAh
Rated Voltage/Current	5V/1A
Rated Power	5W
Capacity	3L
Material	SUS304+ABS

Products Included

How to Install

Step 1 Cleaning Parts

1. Before installing or replacing the filter, rinse the filter by soaking it in water for 5 minutes (to remove carbon foam produced during the heating process of the activated carbon).
2. Rinse the stainless steel tray, water filter tray, and pump with clean water.

Step 2 Assemble the Product

1. Pour clean drinking water into the stainless steel tank, please do not exceed the maximum water level line.
2. Put the water pump and the outlet pipe into the tank according to the instructions in the picture, the bottom of the limit, put the level is correct.

Step 3 Replace the Filter Element and Pump Sponge

3. According to the instructions on the water filter tray, and then put on the filter.
4. Put the stainless steel tray according to the instructions in the picture, and then insert the spout.

Step 4 Turn on the Water Fountain

5. Turn the water fountain base to the back, press the orange switch, the machine is officially switched on, the first time you use the battery will be 60% charged.
6. Finally, place the water fountain on the base to use.

Function

On/Off Button:

1. The orange button at the bottom of the machine presses the light on for switching on, press the button again to pop up the light off for switching off.

Plugged in for Use:

1. Flip over water fountain base, insert the Type-C cable into the power port, and the other end into the adapter, turn on the power and press the power button to start using it.

*When it is not convenient to use the data cable, please pull out the data cable to cover the silicone plug to pull out the data cable pure battery use, pure battery use for the induction water mode.

Water Discharge Mode:

1. Type-C power supply: intermittent water discharge mode + induction water discharge mode (10 minutes of water discharge, 1 minute of water stop) if the pet comes to drink water in the water stopping zone, the machine will start the radar induction mode to discharge water for 40s.

2. Pure battery-powered: sensor water mode, detecting the pet to drink water will be out of water 40s, timed 60 minutes will be fixed out of water once 40s.

Indicator Light Instructions:

1. Type-C power supply: charging white light breathing, fully charged white light long bright

2. Pure battery power supply: white light is on when the water comes out, it will go out when the water does not come out, white light is on when the water comes out, the battery is fully charged, the red light is blinking with less than 20% of the battery power.

Maintenance and Cleaning

Daily Cleaning & Maintenance

1. Disconnect the power supply and switch off the product before cleaning.

2. Pick up the water fountain tank, the base can not be washed.

3. Put the tank, stainless steel tray, water filter tray and spout into the water to clean.

4. Please do not immerse the main unit of the water fountain in water or put it in the dishwasher.

5. It is recommended to change the drinking water every 3 days, please clean the product before changing the water.

Replace the Filter Element and Pump Sponge

1. It is recommended to replace the filter every 15 days. Before replacing the filter, please soak it in water for 5 minutes, then rinse it with water to remove the powder produced by the activated carbon during transport.

2. It is recommended to replace the water pump sponge every 15 days.

3. Please replace the filter in time for your pet's health.

Cleaning and Maintenance of Water Pump

1. Open the water pump cover.

2. Take out the impeller rotor inside the motor with the hook behind the brush.

3. Clean the water pump and impeller with the brush.

Precautions for Assembly

Step 1

1. Put in the water pump + outlet pipe first

Step 2

2. Put the water filter tray + filter + stainless steel tray

Step 3

3. Release the spout

Troubleshooting

1. Water fountain does not work

A: 1. The water pump may belogged, please clean it thoroughly, if the water pipe connection is not tight, please reinsert.
2. Please make sure that the water pump is assembled properly, after any time you clean the water fountain or the water pump, when you finally assemble it, you should put the water pump and the outlet pipe first, and make sure that you put it in place before you put the water filter tray and so on.

2. Water fountain indicator light

A: It means that the water pump is out of water or not enough for the minimum water level. It is possible that the pump should be disassembled or thoroughly cleaned.

3. After plugging in the Type-C charger, the charging indicator does not light up

A: Check if the charger is fully connected with the wall socket to ensure a good power connection.

4. Noise increase, water out of the decrease?

A: Please clean the impeller or the pump thoroughly.

5. Sensor malfunction

A: Please make sure the sensor is facing your pet.

6. Do not rinse or soak the main unit of the water fountain in water.

A: Do not wash it in hot water or a sterilizer.

7. Please change the filter regularly and clean the pump thoroughly.

A: When you go out on holidays, please make sure the main unit of the water fountain is fully charged and check the remaining water level.

8. 10. This product is not a toy, please do not let children play.

A: Please do not let children play with the water fountain.

9. 11. Please point the detection probe in the direction of your pet's drinking water.

A: Please do not place metal objects in the wireless transmission area.

12. No metal objects can be placed in the wireless transmission area.

Caution

1. This dispenser is recommended for pets over 3 months old.

2. This water fountain is designed for indoor use only, avoid placing it in direct sunlight and keep it away from any potential ignition sources.

3. Please power the water fountain with the adapter provided with the product. Using any other adapter may cause the fountain to malfunction or be damaged.

4. The warranty does not cover damage to the machine caused by improper operation.

5. To prevent pets from knocking over the water fountain, please it against a wall or in a safe location

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.