

AIRHUG

User Manual (EN)



AIRHUG 19

Contents

1. Package included

2. AIRHUG 19 Speakerphone

2.1 AIRHUG 19 Speakerphone Overview

2.2 Button Controls

3. AIRHUG 19 Connecting

3.1 Connect to Computer Device by Cable

3.2 Connect to Mobile Device by Bluetooth

4. AIRHUG 19-2 Microphone

4.1 AIRHUG 19-2 Microphone Overview

4.2 AIRHUG 19-2 Connecting to a Computer

5. Linking Mode

6. How to use AIRHUG 19 Speakerphone

6.1 Speaker Volume Up and Down

6.2 Mute Mode

7.How to use AIRHUG 19-2 Microphone

7.1 Mute Mode

8.Specifications

9.Support

9.1 How to care for your AIRHUG 19 & AIRHUG 19-2

9.2 FAQ

1. Package included




Power plug x1



USB-C to USB-A cable x1



USB-C to USB-C cable x2

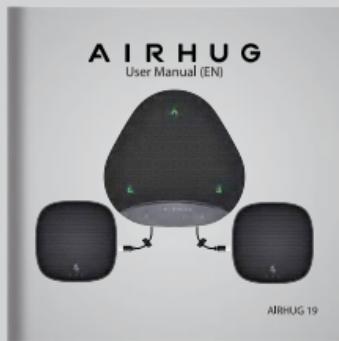

User Manual x1



AIRHUG 19
Speakerphone x1




AIRHUG19-2
Microphone x2


2. AIRHUG 19 Speakerphone

2.1 AIRHUG 19 Speakerphone Overview

Top View

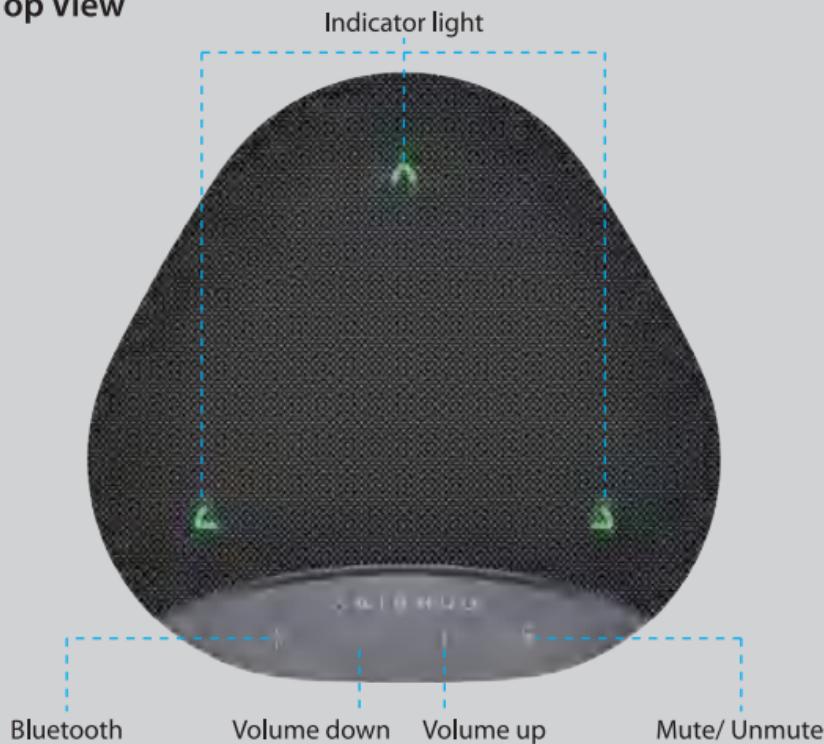

Bottom View

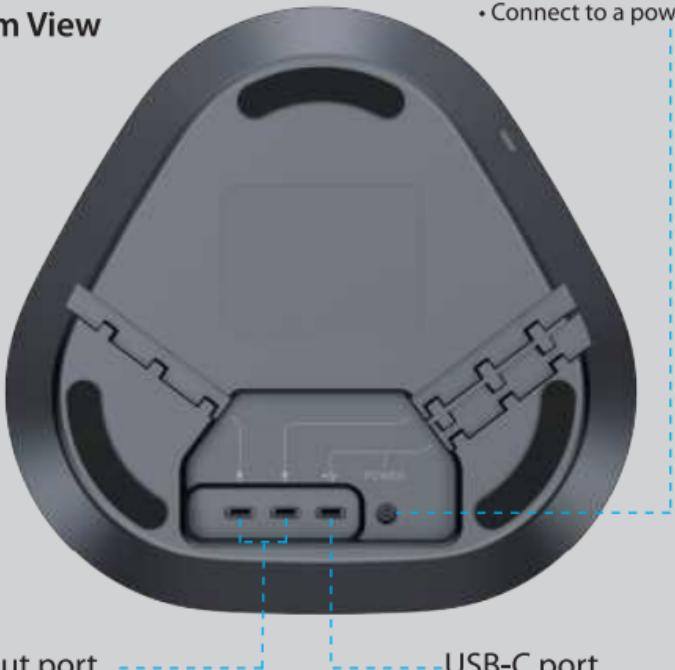

Output port

- Connect to the AIRHUG19-2 Microphone

Power port

- Connect to a power supply.

USB-C port


- Connect to a computer.

	Enter Bluetooth pairing mode	Press 5 secs to disconnect bluetooth
	Volume up	Tap to increase speaker volume.
	Volume down	Tap to decrease speaker volume.
	Mute/ Unmute	Tap to mute / unmute the microphone.


3. AIRHUG 19 Connecting

3.1 Connect to Computer Device by Cable

1. Plug the provided power adapter into the speakerphone.
2. Connect the speakerphone to your computer using the provided USB cable.

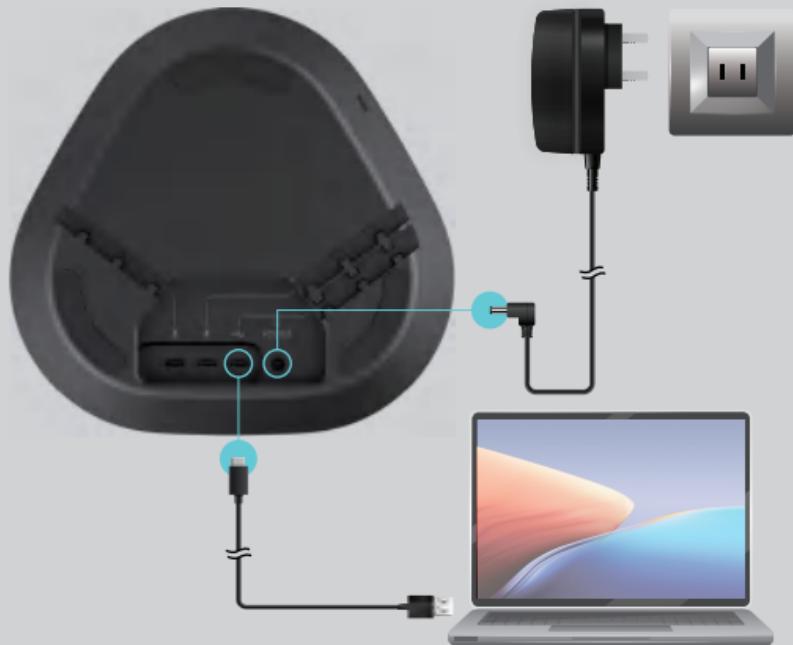

- The speakerphone will automatically turn on once connected to a power supply.
- Once the speakerphone is powered on, the indicator light will turn steady green.

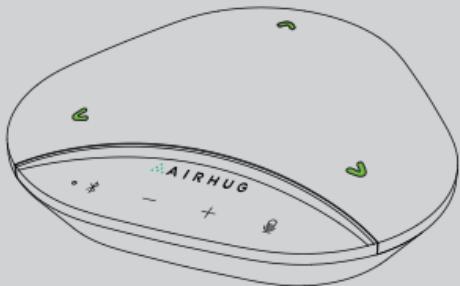

You might need to manually select AIRHUG 19 Speakerphone

- Mac OS

System Preferences > Sound > Sound Effects / Output / Input

- Windows

Right-click on the sound icon > Open Sound settings > Choose your output device / Choose your input device

- Software (Zoom, Skype, others)

Settings > Audio > Speaker / Microphone

1. Plug the provided power adapter into the speakerphone.
2. Tap the  Bluetooth button on the speakerphone then the Bluetooth light flashes blue. Then select "AIRHUG 19" from the list of available Bluetooth devices.

- Each time you power on the product, it will automatically connect with the last successfully connected device if available.
- If you want to connect the speakerphone to other mobile device, please tap the  Bluetooth button entering bluetooth pairing mode and then connect to a new mobile device.



	<p>Press the Bluetooth button (5 secs) to disconnect all bluetooth connection.</p>	
	<p>Bluetooth pairing</p>	<p>Flashes Blue</p>
	<p>Bluetooth connected</p>	<p>Steady Blue</p>

4. AIRHUG 19-2 Microphone

4.1 AIRHUG 19-2 Microphone Overview



Indicator light

Mute/ Unmute

	Mute/ Unmute	Tap to mute / unmute the microphone.
---	--------------	--------------------------------------

**USB-C port**

- Connect to a AIRHUG 19 Speakerphone or a computer

USB-C port

- Connect to a AIRHUG 19 Speakerphone

1. Connect the microphone with your computer using the provided USB C to USB C cable. Plug cable into the USB-C port on the microphone and the other end of cable into the USB C port on your desktop or laptop.



- The speakerphone will automatically turn on once connected to a computer.
- Once the speakerphone is powered on, the indicator light will turn steady green.



You might need to manually select AIRHUG 19 Speakerphone for your PC system or conference software.

- **macOS**

System Preferences > Sound > Sound Effects / Output / Input

- **Windows**

Right-click on the sound icon > Open Sound settings > Choose your output device / Choose your input device

- **Software (Zoom, Skype, others)**

Settings > Audio > Speaker / Microphone


5. Linking Mode

You can link up to 2 AIRHUG 19-2 Microphones on AIRHUG 19 speakerphone for meeting rooms in different sizes.

1. Plug the provided power adapter into a speakerphone.
2. Connect 2 AIRHUG 19-2 Microphones to the Output port on the AIRHUG 19 speakerphone via USB-C cable.
3. Connect AIRHUG 19 Speakerphone to your computer using the provided USB cable.

- Make sure to power the AIRHUG 19 speakerphone instead of the others in the chain.
- The speakerphone connected to your computer is the primary device. Its settings apply to AIRHUG 19 -2 microphones in Linking mode.
- The mute mode state of AIRHUG 19 and AIRHUG 19-2 is synchronous.



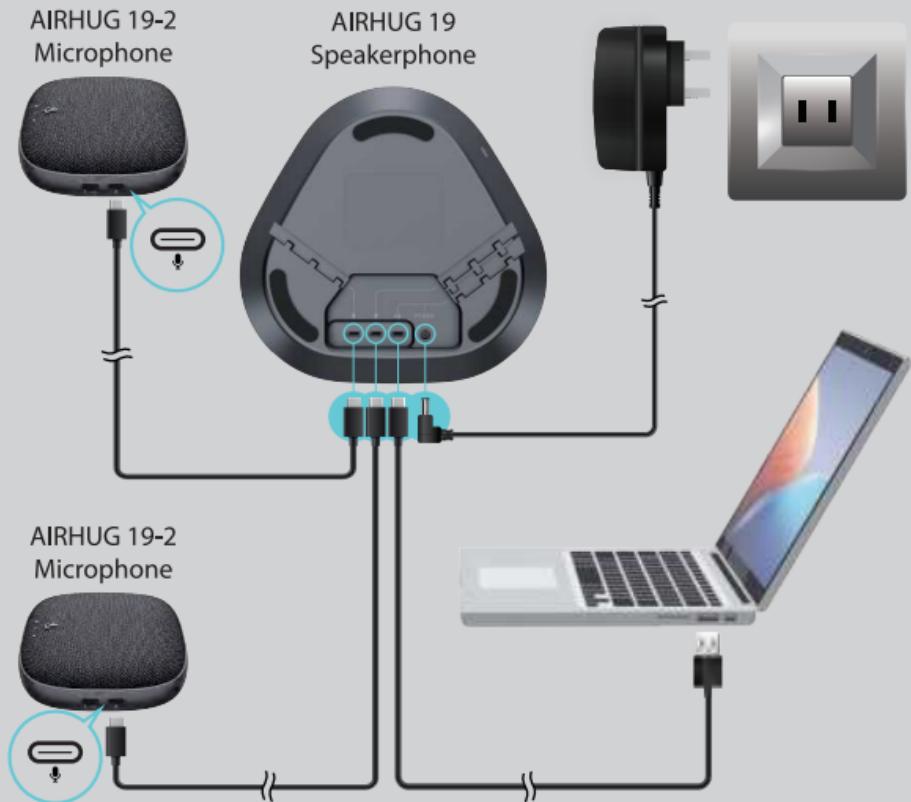

6. How to use AIRHUG 19 Speakerphone

6.1 Speaker Volume Up and Down



Tap to decrease
speaker volume.

Tap to increase
speaker volume.

	Flash x1 time	The volume is decreasing or increasing
	Flash x3 times	The maximum volume
	Slow flash	The speaker mute mode



Tap to mute/ unmute microphone.

A diagram of the AIRHUB device with a red dot at the top and red arrows at the bottom. Below the device, the text "AIRHUB" is written in a circle, with "AIRHUB" in the center and four small arrows pointing outwards.	Steady Red	Mute mode
---	------------	-----------

7.How to use AIRHUG 19-2 Microphone

7.1 Mute Mode



Tap to mute/ unmute microphone.

Please note that the mute mode state of AIRHUG 19 and AIRHUG 19-2 is synchronous.

A diagram of the AIRHUG 19-2 microphone. It is a white, oval-shaped device with a small circular LED indicator on top. The indicator is currently red, indicating that the microphone is in 'Mute mode'. The word 'AIRHUG' is printed at the bottom of the device.	Steady Red	Mute mode
--	------------	-----------

8.Specifications

Specifications are subject to change without notice.

AIRHUG 19 Speakerphone	
Power port input	DC 12V ... 2A
Rated output power (Speaker)	8W
Voice pickup range	5m(16ft)
Microphone	3
Bluetooth	5.0
SNR	65dB
Size	195mm X 188mm X 52.5mm
Weight	487g

AIRHUG 19-2 Microphone	
Input port	5V ± 500MA
Voice pickup frequency	48Khz
Voice pickup range	3m(9.8ft)
Microphone	1
SNR	65dB
Size	104mm X 104mm X 30mm
Weight	179g

9. Support

9.1 How to care for your AIRHUG 19 & AIRHUG 19-2

- Always store the device with the power off and safely protected.
- Avoid storage at extreme temperatures (above 70°C/158°F or below -20°C/-4°F). This can shorten battery life and may affect operation. High temperatures may also degrade performance.
- Do not expose the device to rain or other liquids.
- Never place objects filled with liquids (e.g. vases or drinking glasses) on the device. Liquid in the devices can cause a short circuit.

For additional support, please visit us at [www.airhugshop.com/support](http://airhugshop.com/support)



24/7 Support Web Page

<http://airhugshop.com/support/>

View the FAQs on www.airhugshop.com/support

If you have any other questions about using AIRHUG 19, please email us. AIRHUG support team will solve the problem for you in 12 hours.



24/7 Support Email
airhug.sale1@gmail.com

Manufactured by/ Hergestellt von/ 製：
Feifan Innovation E-commerce Shenzhen Limited
Baoyunda Logistics Center Building 3-602
Fuhua Community, Xixiang Street, Baoan District
Shenzhen, Guangdong, China 518000
Email:airhug.sale1@gmail.com
Phone / Telefon/ 電話：0086-13810899914

Name: Zhile Tehnoloogia OÜ
Address: Harju maakond, Tallinn, Kesklinna linnaosa,
Narva mnt 5, 10117
E-mail: info@zhile-tech.com
Tel: +852 51787554
Contact Person: FEI WEI



Name: ZHILE TECHNOLOGY LIMITED
Address: 61 Nightingale Way, Westfield, Radstock,
England, United Kingdom, BA3 4NL
E-mail: info@zhile-tech.com
Tel: +852 5178 7554



Made in China

In China hergestellt

中国製

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.