

## MTB-CUT M188智能膜切机

### 使用说明书

**产品清单**

**外观及功能**

**使用说明**

**一、串流连接、开机**

将串流线和电源线连接，串流线一端接入串流插孔，将电源线一端接入设备电源口，将刀头安装在分别嵌套的刀头卡位上，插脚固定。连接完成后，按下【串流键】启动设备。

**二、安装膜切机刀头**

①打开刀头盒开关。②打开刀头盒的扳片，调整好刀尖长度后，垂直放入刀头（建议刀头档位5档）。③拔回扳片，固定刀头。④盖好刀头盒。

**三、放置材料**

①准备一张待裁切的保护膜，确认膜面平整且膜层无弯曲、折叠或缺层现象。②放置膜片至所示区域。③机器会自动感应收入膜纸④如需更换其他膜纸，可按一下电源键退出膜纸。

**四、WIFI设置**

在首页点击【设置键】，进入设置界面，点击【WIFI设置】，连接WIFI输入密码，等待机器成功连接WIFI网络。

**五、开始切割**

在主页选择您需要切割的手机品牌、型号，点击【开始切割】。

**六、切割完成**

膜机切割完成后，保护膜会自动推出。

**产品参数**

|          |                     |
|----------|---------------------|
| 型号       | M188                |
| 最大进纸尺寸   | 200mm               |
| 最大切割尺寸   | 195mm               |
| 切割精度     | 0.1mm               |
| 重复精度     | 0.1mm               |
| 最快直线切割速度 | 250mm/s             |
| 最长直线切割速度 | 200mm/s             |
| 最大切割力    | 9.8N                |
| 通讯方式     | WIFI 2.4G           |
| 工作电压     | 110V~240V           |
| 机器功率     | <100W               |
| 工作环境湿度   | -5°C ~ +35°C        |
| 包装外箱尺寸   | 387.5*183.5*128.5mm |
| 包装外箱毛重   | 6.6kg               |
| 净重       | 4.7kg               |

**保修卡**

|      |  |      |  |
|------|--|------|--|
| 产品名称 |  | 设备编号 |  |
| 已维修  |  |      |  |
| 维修次数 |  | 地址   |  |
| 维修   |  |      |  |
| 购买日期 |  | 发货日期 |  |

**保修说明**

|    |      |      |     |     |
|----|------|------|-----|-----|
| 日期 | 保修到期 | 处班经过 | 接收人 | 修理工 |
|----|------|------|-----|-----|

**注意事项**

- 不可用手指触碰刀尖，会手指受伤。
- 在雷雨闪电天气禁止使用，以免雷击损坏机器。
- 机内不可渗入液体，以免金属部件生锈。
- 不可使电源线靠近电源线或电源线，以免电源线过热，导致短路及压在物体下，这些都会使电源线损坏，导致触电或火灾。

## MTB-CUT M188 Protector Film Cutter

### User manual

**Standard Accessories**

**Appearance and function**

**Instructions**

**1. Power on**

①Connect the power supply with the adaptor and insert to the socket. Use 100-240V AC power supply to make the device operate normally.  
②Insert the other end of the adaptor port into the power interface.  
③Press the power button to power on the cutter.

**2. Install the blade holder & blade**

①Open the storage box  
②Pull the paddle of holder clamp, adjust the length of the blade tip, and put the blade holder inside (Gear 5 for the blade holder is recommended).  
③Push back the paddle and fix the blade holder.  
④Cover the storage box.

**3. Place materials**

①Prepare a sheet film to be cut, confirm that the protective film is flat and the film layer is complete without bending, folding or missing layers.  
②Place the sheet film to the area shown.  
③The machine will automatically pick up the film paper.  
④If need to exchange another sheet film, please click the power on button, the protector film will feed out.

**4. WiFi Setting**

Click on the homepage, enter the setting interface, click [WiFi Settings], connect to WiFi, enter the password, and wait for the machine to successfully connect to the WiFi network.

**5. Start cutting**

Select the brand and model of the device to be cut on the homepage and click [Start Cutting] to start cutting.

**6. Complete cutting**

The protector film will be pushed out when the cutting finished.

**3. Firmware system upgrade**

①Tap - [System information] on the homepage to update the firmware version. The password is 1212.  
②Tap - [Restart] on the home page to restart cutter for data updating.

**Machine settings**

**1. Language setting**

①On the homepage, click to enter the setting interface, and click [Language Setting], to switch.

**2. Blade force/Speed/Automatic**

①On the home page, click to enter the setting interface, click [Force/Speed/Automatic], please adjust according to actual usage.

**Specification**

|                                  |                     |
|----------------------------------|---------------------|
| Model                            | M188                |
| Max. media width                 | 200mm               |
| Max. cutting width               | 195mm               |
| Cutting precision                | 0.1mm               |
| Repeat precision                 | 0.1mm               |
| Max. straight line cutting speed | 250mm/s             |
| Max. curve cutting speed         | 200mm/s             |
| Max. force                       | 9.8N                |
| Cur. router interface            | WIFI 2.4G           |
| Input                            | 110V~240V           |
| Power                            | <100W               |
| Working environment              | +5°C ~ +35°C        |
| Packing size                     | 387.5*183.5*128.5mm |
| Packing gross weight             | 6.6kg               |
| Net weight                       | 4.7kg               |

**Safety information**

- Never touch the tip of the blade with your fingers, this will hurt your fingers and damage the blade.
- Never use the cutter when there is a thunderstorm to avoid any damage.
- Fluids or metal objects falling into the cutter may cause fire or disaster.
- Don't damage or replace the original supply power randomly, never make the power cable exceed the length or forced to pull and bend or under heavy object, which may damage the power supply and lead to electric shock or fire disaster.

**Warranty card**

|            |     |             |
|------------|-----|-------------|
| Model NO   | MP3 |             |
| Product NO |     |             |
| Name       |     | Address     |
| Zip code   |     | Phone       |
| Date       |     | Invoice no. |
| Agent      |     |             |
| Date       |     |             |

**Warranty description**

|      |           |           |          |        |
|------|-----------|-----------|----------|--------|
| Date | Condition | Processed | Receiver | Repair |
|------|-----------|-----------|----------|--------|

**Warranty notice**

① This warranty card is requested to be kept by the user for maintenance certificate.  
② The warranty period is valid for one year from the date of invoice.  
③ The warranty equipment must be non-artificially damaged and repaired by personnel authorized by the company.