


INTELLIGENT HUB

USER MANUAL

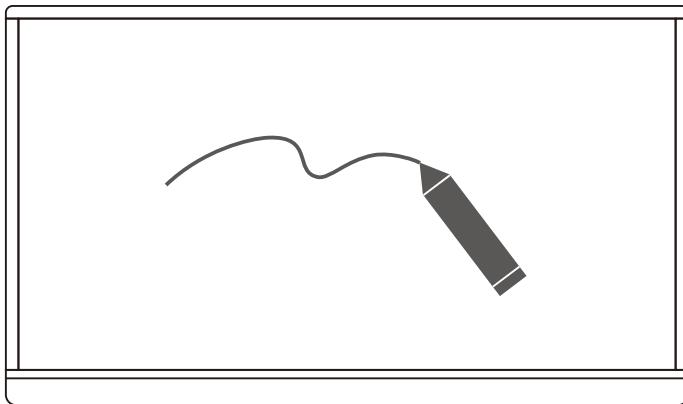

- Please read carefully this manual before operation.
- Please retain it for future reference.

Welcome to use Intelligent Hub

Thank you for purchasing the Intelligent Hub. I sincerely hope that multimedia products will bring you a convenient experience. Before using this product, please read this manual carefully, it will let you know the various functions of this machine, and will be more convenient for your using.

- Ensure that the power supply is grounded to ensure safety!

⚠ warning

In the daily living environment, the product may cause radio interference. In this case, you may need to take practical measures for interference.

Contents

Important Safety Instructions and Maintenance-----	3
Installation precautions -----	4
Power on or power off operation-----	6
Instructions for frequent used ports -----	7

Note

The contents of this document may be updated from time to time due to product version upgrades or other reasons. Unless otherwise agreed, this document is provided as a guide only, and all statements, information, and recommendations in this document are not warranties of any kind, express or implied.

Important Safety Instructions and Maintenance

Please read the following provisions carefully before using this product and carefully observe the following safety precautions.

- In case of smoke, strange noise or strange smell from the unit:
 - Turn off the power switch immediately;
 - Disconnect the power plug from the power outlet;
 - Contact your dealer or service center. For your safety, never attempt to repair by yourself.
- Do not hold the power cord when unplugging it.
- Do not put heat or fire source on or near the machine, such as lighted candle or nightlight.
- If the power cord is damaged, please do not continue to use it.
- To prevent the danger of high voltage, do not remove the back cover without permission. Please contact professional service personnel if necessary.
- Do not let metal or flammable substances fall into the machine. The presence of children requires special attention.
- Do not touch, press or scratch the surface of the machine with hard objects to avoid permanent damage.

About installation


- Keep enough space around the machine to ensure good ventilation, do not cover the vent with articles such as newspapers, tablecloths and curtains to block ventilation.
- Do not put the machine outdoors, avoid direct sunlight, rain, wind.

About Cleaning

- Spraying volatile compounds on the shell of product is prohibited.
- Unplug this apparatus from the AC outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- If the shell is very dirty, please use neutral detergent dissolved in water to clean it, and keep it away from LCD screen.
- Don't use organic solvents such as diluent, gasoline, alcohol etc to clean the product. When you clean the LCD screen, you have to use special LCD cleaning cloth (or very soft cotton lint), spray some non-ionized water on it, and then clean the product softly.
- To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Installation precautions

In order to make sure perfect performance of the products, please keep the screen upright when installing or moving, and do not let the screen lean forward or lay flat for a long time.

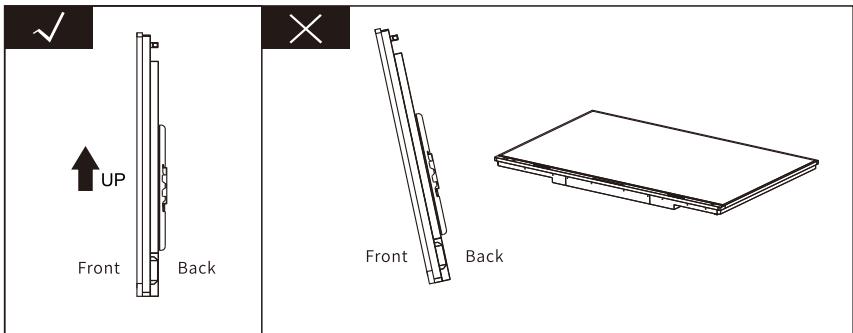

Wall mounting instructions

Tools

Percussion drill, marking pen, screwdriver

Attentions

In order to guide the installation correctly, please read carefully, The picture product is only for installation, and the specific shape is subject to the real object.

Wall mount bracket parts composition	
Serial number	Describe
①	Vertical bracket
②	Horizontal bracket
③	M6*50 Expansion bolt
④	M5*100 Cross round head screw

1. Take out the whole machine from the packing box, loosen the M5 * 100 cross round head screw on the wall bracket, and take out the horizontal bracket, as shown in Figure A.

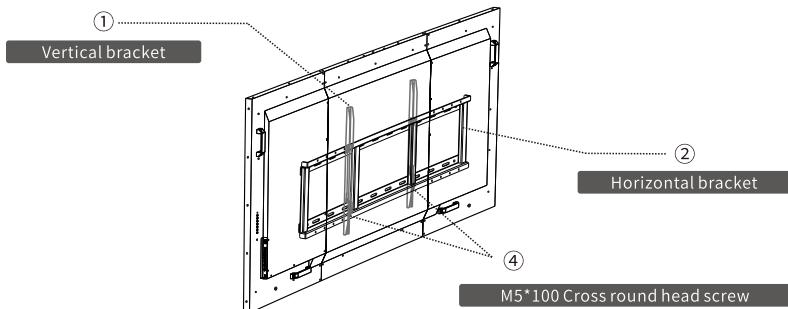


Figure A


2. Install the horizontal bracket on the wall as below figure B.

Remarks: 1) 55"-65" more than 8 screws (up 4, bottom 4) ;

2) 75"-98" more than 12 screws (up 6, bottom 6) ;

3) hole diameter 10mm, depth 65mm;

4) fix the horizontal bracket on the wall with M6*50 expansion bolt.

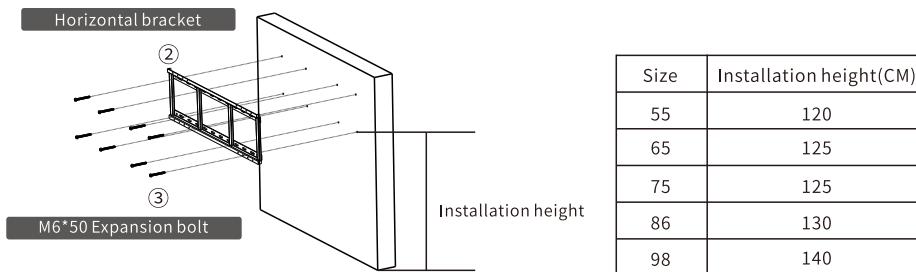

Size	Installation height(CM)
55	120
65	125
75	125
86	130
98	140

Figure B

3. Hang the whole machine on the vertical bracket, as shown in Figure C.

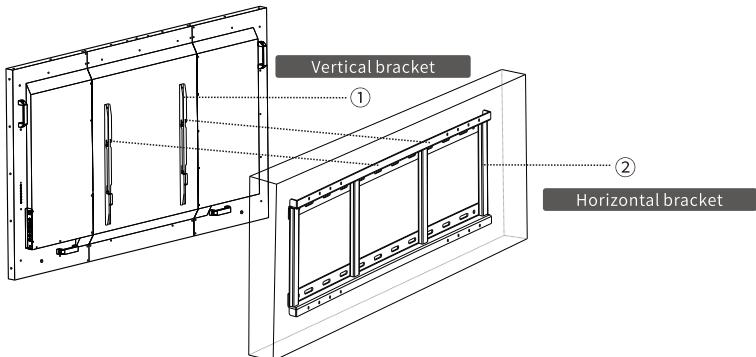


Figure C

4. After hanging the machine, use a long screwdriver to tighten the two M5 * 100 cross round head screws that have been pre locked on the vertical bracket until they are pushed to the horizontal bracket, as shown in Figure D.

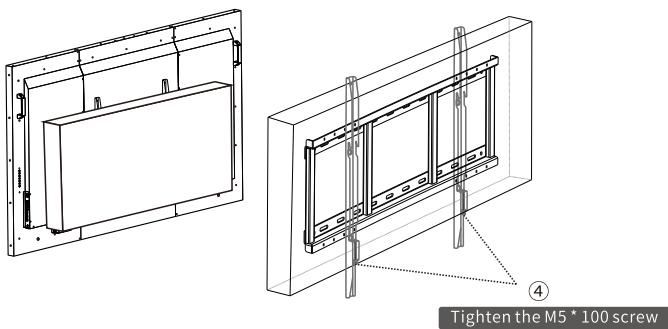



Figure D

Power on or power off operation

Boot operation

- ① Use the power cord to connect the machine and power outlet.
- ② press "I" to turn on the machine.
- ③ Press the button on the front of the machine, the indicator light shows green or blue.

Note: The position of the power switch and the color of the indicator light on the front key switch may be different for different models. Please refer to the actual product.

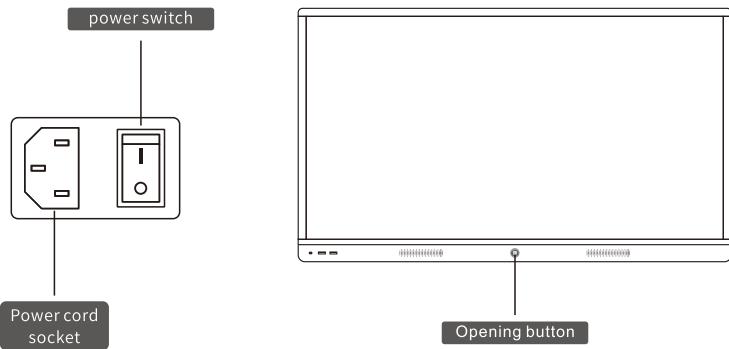

Shutdown operation

- ① Click the button on the front of the machine to enter the independent listening mode. Long press the button on the front, the screen will display the shutdown pop-up box, and operate according to the prompt, and the indicator light will be red after shutdown.
- ② After shutdown, press the power switch on the rear cover of the machine, and press "O" position to turn off.

Warm tip: Do not directly disconnect the power switch on the rear cover when the machine is still working. Which may cause damage to the machine.

Instructions for frequent used ports

Description of port functions frequently used.

① LAN  Connect to the network.

② HDMI  High Definition Multimedia Interface, connecting to digital signal equipment.

③ USB  Connect USB flash disk, mouse, keyboard, camera and other devices.

④ VGA  VGA input connector, connecting to the VGA connector of the computer.

⑤ RS232  Data communication interface.

⑥ Touch  USB 2.0 type-B touch port, connecting to external computer, match the corresponding display interface.

⑦ DP  Display input interface, connecting to computer.

1. Class I earthing connection statement:

The appliance inlet is served as disconnect device, The unit with Class I construction shall be connected to a mains socket-outlet with a protective earthing connection.

Please make sure this product earthed correctly to ensure safety and prevent electrical shock

L'entrée de l'appareil sert de dispositif de déconnexion. L'unité de construction de classe I doit être connectée à une prise de courant avec une connexion à la terre de protection. Veuillez vous assurer que ce produit est correctement mis à la terre pour assurer la sécurité et éviter les chocs électriques.

2. Pluggable equipment disconnection:

For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Pour les équipements enfichables, la prise de courant doit être installée à proximité de l'équipement et doit être facilement accessible.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.