 




WRT101 Remote control

[Instruction Manual]

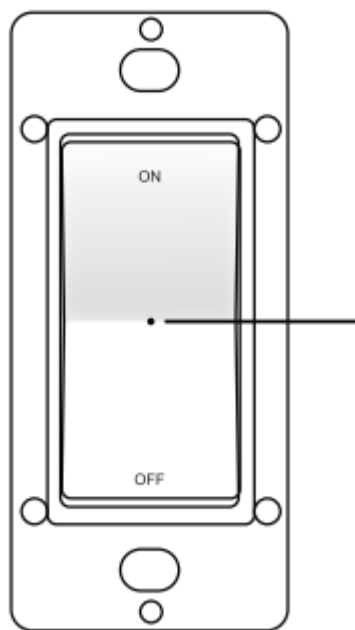

Please pay attention to the warning signs

Read the instructions with caution before operating

 
and keep it properly

Warning:

To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.

1. Indoor use only. Avoid high humidity, high temperature, and areas with a high magnetic field.
2. Always be sure to cut off the power before installing the receiver.
3. Don't connect any device that may exceed the performance limits of the receiver.
4. Don't install or repair the product Only authorized service personnel should undertake such installation and repairs.
5. If the remote is not in use for an extended period time, remove batteries.
6. Used batteries should be disposed of safely and properly.
7. To prevent a choking hazard, keep packing materials away from children.
8. Do not use the battery again if it is dropped or knocked out of shape.

Product Layout

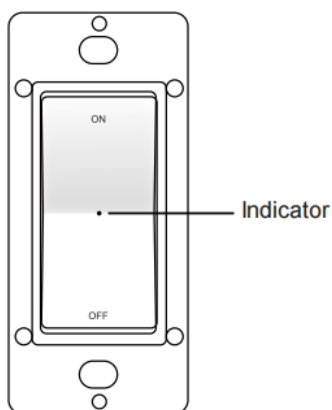

Indicator
ON/OFF Button

Used in conjunction with receivers of different models



Operating Instructions

Notes: The receiver must be located within 100 feet of the remote transmitter. Actual functional range may be affected by the following factors: weather, radio frequency interference, low remote battery, and obstructions between the transmitter and receiver.

 
1. Plug the receiver into a powered outlet.
2. Remove the isolation tab in the battery compartment of the transmitter.
3. Pressing the ON/OFF button on the transmitter will control the corresponding receiver's power state accordingly.

Note:


1. Program button of each receiver can also be used as a manual switch.
2. The receiver will remain "OFF" after a power cut to save energy.

Mounting the Wall Switch


Shown as the figure

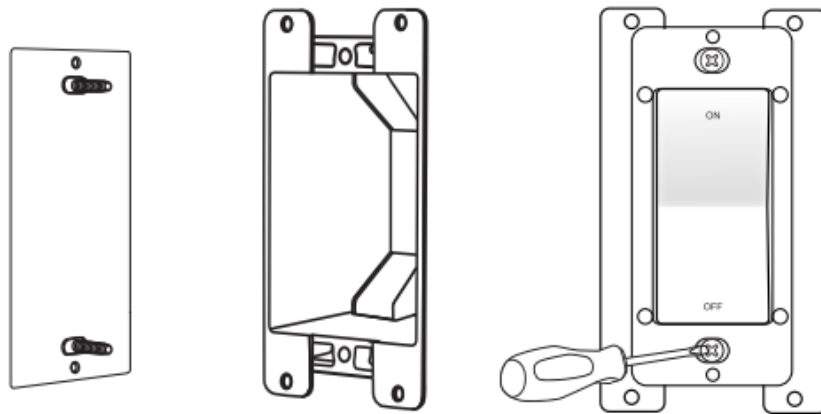

 
1. Use the provided mounting screws to secure the base of the wall-mounted transmitter to the surface of the electrical box.

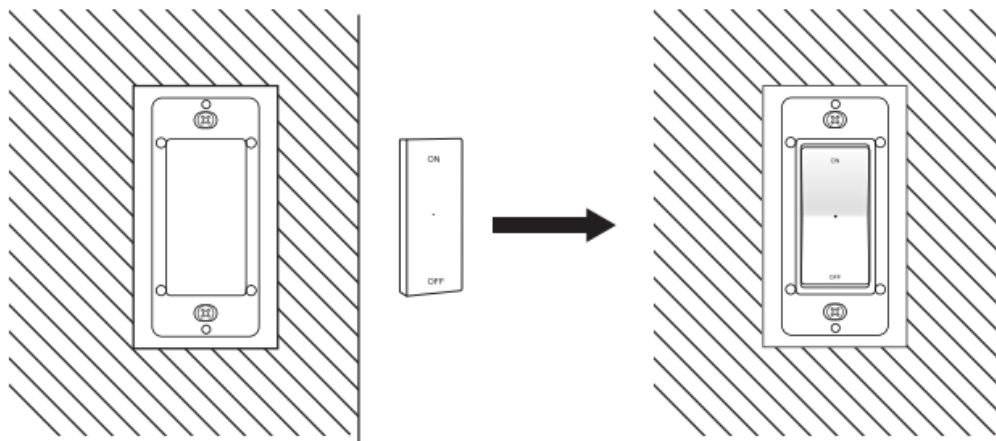

2. Attach the transmitter to the base.

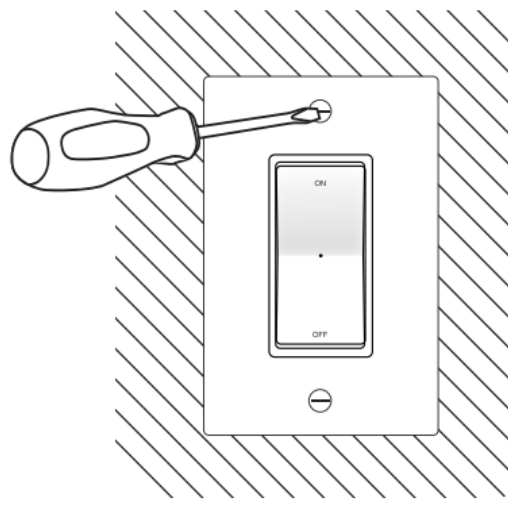 

 3. Secure the wall plate to the emitter storage base with the included matching screws.

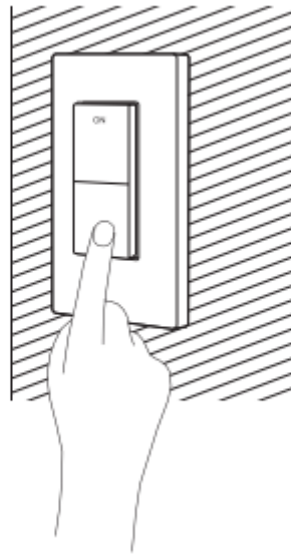


4. Press the ON/OFF button on the wall switch remote control to turn the receiver on and off.

Programming the Receiver

Note: The transmitter and receiver have been pre-programmed for immediate use, but the configuration can be customized to meet your needs.

 To program a remote transmitter and receiver:

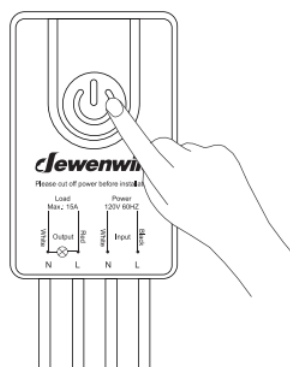

1. Press the program button on the receiver for 3 seconds until the indicator light starts to flash slowly.

2. Release the button and press ON button, then OFF button on your transmitter.

3. Programming / pairing is successful when the indicator light stops blinking.

 
Note:

Each set of ON or OFF button can be paired with and control several receivers

Each receiver can be paired and controlled by multiple transmitters.

Cancel All Programming

Cancel all the programs so that no remote transmitter can control it.

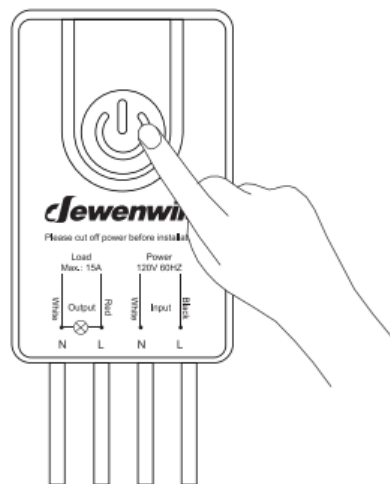

1. Press the program button on the receiver for 6 seconds until the indicator light starts to flash rapidly. (Note: The light flashes from slowly to rapidly.)

2. Release the program button and then press it again. The indicator light will be off. All the programming has been canceled.

 
No Interference

Remote control outlets adopt variable learning codes technology. The codes will be changed each time after re-programming. If this remote control outlet happens to be in the same channels with other RF remote devices, just re-program it and the interference will be eliminated.

Replacing the battery

If you find the receiver works abnormally or the indicator on the remote control becomes dim, please replace the battery.

- Turn the remote control to the back.(The black circle is the buckle).

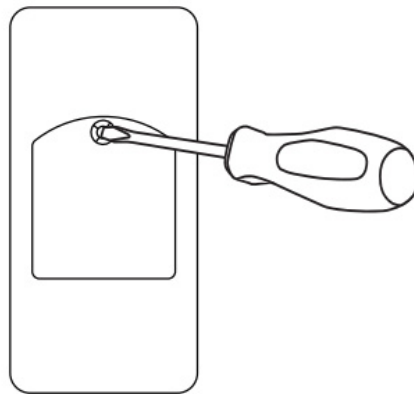

- Use a screwdriver to remove the screws securing the battery cover.
- Remove the battery compartment cover away from the remote.
- Remove the old battery and place a new Type 3V(CR2032)lithium battery into the battery compartment.
- Ensure the battery is installed correctly with the positive (+) side up.
- Replace the battery compartment cover.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws.For detailed information, contact your local solid waste authority.

Caution: Failure to properly align the battery polarity can cause personal injury and/or property damage.

BATTERY HANDLING AND USAGE

·REMOVE AND IMMEDIATELY RECYCLE OR DISPOSE
OF USED BATTERIES ACCORDING TO LOCAL

REGULATIONS AND KEEP AWAY FROM CHILDREN.
DO NOT DISPOSE OF BATTERIES IN HOUSEHOLD TRASH OR INCINERATE.
·EVEN USED BATTERIES MAY CAUSE SEVERE INJURY OR DEATH.
·CALL A LOCAL POISON CONTROL CENTER FOR TREATMENT INFORMATION.
·COMPATIBLE BATTERY TYPE CR2032 LITHIUM BATTERY.
·NOMINAL BATTERY VOLTAGE 3V.
·NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
·DO NOT FORCE DISCHARGE, RECHARGE, DISASSEMBLE, HEAT ABOVE (MANUFACTURER'S SPECIFIED TEMPERATURE RATING) OR INCINERATE. DOING SO MAY RESULT DUE TO VENTING, LEAKAGE OR EXPLOSION RESULTING IN CHEMICAL BURNS.
·ENSURE THE BATTERIES ARE INSTALLED CORRECTLY ACCORDING TO POLARITY (+ AND -).
·DO NOT MIX OLD AND NEW BATTERIES, DIFFERENT BRANDS OR TYPES OF BATTERIES, SUCH AS ALKALINE, CARBON-ZINC, OR RECHARGEABLE BATTERIES.
·REMOVE AND IMMEDIATELY RECYCLE OR DISPOSE OF BATTERIES FROM EQUIPMENT NOT USED FOR AN EXTENDED PERIOD OF TIME ACCORDING TO LOCAL REGULATIONS.
·ALWAYS COMPLETELY SECURE THE BATTERY COMPARTMENT. IF THE BATTERY COMPARTMENT DOES NOT CLOSE SECURELY, STOP USING THE PRODUCT, REMOVE THE BATTERIES, AND KEEP THEM AWAY FROM CHILDREN.

 WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN. • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

Troubleshooting

In the case that one receiver is unresponsive to the remote control, please follow the steps below to resolve the issue:

1. If the wire switch receiver is unresponsive to the remote control, please refer to the "Canceling Programming" and "Programming the Receiver" sections in the manual to reprogram the receiver.
2. Make sure the receiver and appliance are properly connected and powered on.
3. Replace the remote battery with a new CR2032 3V battery.
4. The remote transmitter may be too far away to control the receiver.
5. Make sure not to exceed the maximum load.
6. "Canceling Program" is always prior to "Programming the Receiver" when you would like to make changes.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation. Please attach your Order ID and Name so that our dedicated customer service team can help you better.