



Remote control

[Instruction Manual]



Please pay attention to the warning signs

Read the instructions with caution before operating


and keep it properly

Warning:


To reduce the risk of fire, electric shock or personal injury,
please strictly follow the instructions.

1. For indoor use only. Avoid high humidity, high temperature and high magnetic field.
2. Do not connect any devices that may exceed the performance limits of the outlet.
3. Do not insert needles or any other metal objects into mains outlets.
4. Do not disassemble or repair the product, but only by authorized service personnel.
5. Children are not allowed to use remote outlets without adult supervision.
6. To prevent children from suffocation and chocking, keep them away from packing materials.
7. Do not use the battery again if it is dropped or knocked out of shape.
8. Used batteries should be disposed of safely and in accordance with environmental protection standards.

Product Layout

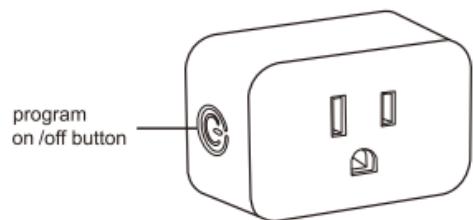

Program Button • ON/OFF Button • Indicator

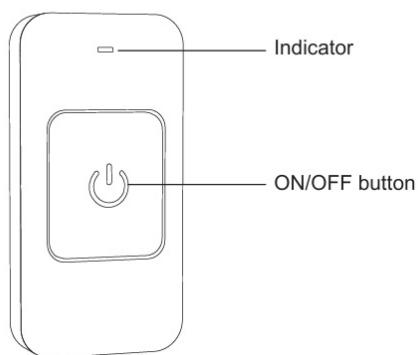

Indicator
ON/OFF Button

Operating Instructions

Notes: The receiver must be located within 100 feet of the remote transmitter.

Actual functional range may be affected by the following factors: weather, radio frequency interference, low remote battery, and obstructions between the transmitter and receiver.

1. Plug the receiver into a powered outlet.
2. Remove the isolation tab in the battery compartment of the transmitter.
3. Pressing the ON/OFF button on the transmitter will control the corresponding receiver's power state accordingly.


Note:

1. Program button of each receiver can also be used as a manual switch.
2. The receiver will remain "OFF" after a power cut to save energy.


Mounting the Wall Switch

Shown as the figure

1. Attach the circular iron piece to the desired position.

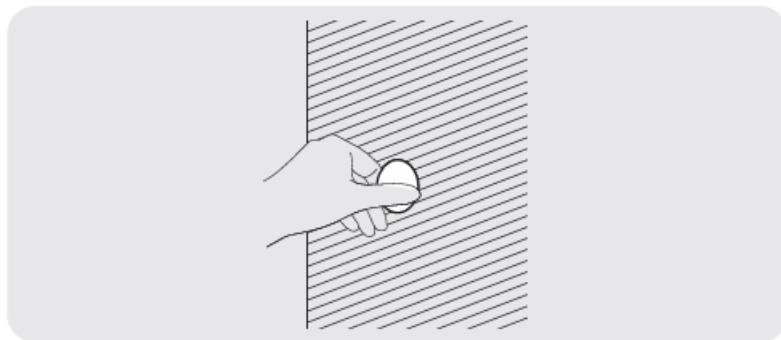

2. Place the central position on the back of the transmitter onto the iron piece.

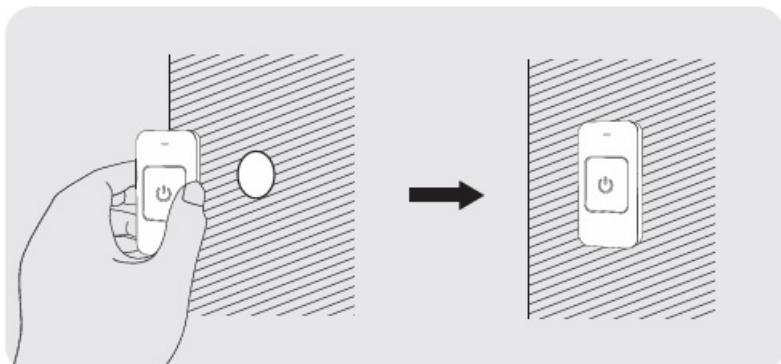

Programming the Receiver

Note: The transmitter and receiver have been pre-programmed for immediate use, but the configuration can be customized to meet your needs.

To program a remote transmitter and receiver:

1. Plug the receiver into the socket.
2. Press and hold the program button on the receiver until the indicator light starts to blink slowly.
3. Release the program button, then press the on/off button on the transmitter.
4. When the indicator light stops flashing, the program is paired successfully.

Repeat Step 1-4 to pair multiple transmitters and receivers.

Cancelling Programming

1. Press the program button on the receiver for 6 seconds until the indicator light starts to flash rapidly. (Note: The light flashes from slowly to rapidly.)
2. Release the program button and then press it again. The indicator light will be off. All the programming has been canceled.

No Interference

Remote control outlets adopt variable learning codes technology. The codes will be changed each time after re-programming. If this remote control outlet happens to be in the same channels with other RF remote devices, just re-program it and the interference will be eliminated.

Replacing the battery

If you find the receiver works abnormally or the indicator on the remote control becomes dim, please replace the battery.

- Turn the remote control to the back.
- Remove the battery compartment cover away from the remote.
- Remove the old battery and place a new Type 12V(23A) battery into the battery compartment.
- Ensure the battery is installed correctly .
- Replace the battery compartment cover.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

Caution: Failure to properly align the battery polarity can cause personal injury and/or property damage.

Troubleshooting

In the case that one receiver is unresponsive to the remote control, pleas

follow the steps below to resolve the issue:

1. If the wire switch receiver is unresponsive to the remote control, please refer to the "Canceling Programming" and "Programming the Receiver" sections in the manual to reprogram the receiver.
2. Make sure the receiver and appliance are properly connected and powered on.
3. Replace the remote battery with a new 12V 23A battery.
4. The remote transmitter may be too far away to control the receiver.
5. Make sure not to exceed the maximum load.
6. "Canceling Program" is always prior to "Programming the Receiver" when you would like to make changes.

Specifications

- Input Voltage: 125VAC 60Hz
- Max Power Rating: 15A 1875W
- Transmission Frequency: 434MHz
- Remote Battery: 23A, 12V
- Remote Control Distance: 100 ft (Free Area)

Safety Information

Federal Communications Commission Interference Statement. This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Redirect or relocate the receiving antenna.
- Increase distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

ISEDC Warning:

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil nedoit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme
Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes.

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.