

Remote Control

Model 52.0

Quick Start Guide

 
Turn On Your Remote

- 1 Remove the back cover by pushing the tab upward, and remove the **PULL** tab




- 2 Replace the back cover

- 3 Open the front panel of your DISH receiver, and press the **SYS INFO** button



 
- 4 Press the **SAT** button on the side of the remote control



You will hear three beeps from the remote control, indicating it has paired with your DISH receiver

Pair Your Remote

 - 1 Press the home button twice
- 2 Select **Settings** and then **Remote Control**
- 3 Select **TV** and then **TV Pairing Wizard**
- 4 Follow the prompts



- 5 If desired, pair your remote with an auxiliary device such as a Blu-ray™ player or stereo

Explore Your Remote

Home
Easily find movies, sports, and shows that are live, on your DVR, or on demand—all in one place

Back/Live TV
Press to go back one menu
Press and hold to go to live TV

Options
Access additional options and features in the current menu

Skip Backward
Press to skip back 10 seconds
Press and hold to rewind
Also, use the skip buttons to change tabs

Device Power
Turn on and off the device you've selected on the side of the remote

TV Power
When the remote is paired with your TV, this button turns it on and off

Info/Help
Press to get more information about a program
Press and hold to get quick tips on most screens

Search
Find your favorite TV shows, movies, and sports

Skip Forward
Press to skip forward 30 seconds
Press and hold to fast-forward

 
Channel Up & Down
In addition to changing channels, use these buttons to page through menus such as the Guide

Recall
While watching TV, press to see the channels you have watched recently

Input
Change inputs on your TV when in TV mode
When in SAT mode, use this button to swap picture-in-picture or multi-view windows

Locate Your Remote Anytime

- 1 Open the front panel of your DISH receiver
- 2 Press the **LOCATE REMOTE** button

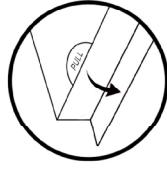

You will hear a series of beeps from your remote, allowing you to find it

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.