

Remote Control

Model 54.0 54.1

Quick Start Guide

 
Turn On Your Remote

- 1 Remove the back cover by pushing the latch upward, and remove the RCL tab.




- 2 Replace the back cover.

- 3 Open the front panel of your DISH receiver and press the SYS INFO button.




 - 4 Press the SAT button on the side of the remote control.



You will hear three beeps from the remote control, indicating it has paired with your DISH receiver.

 Explore Your Remote

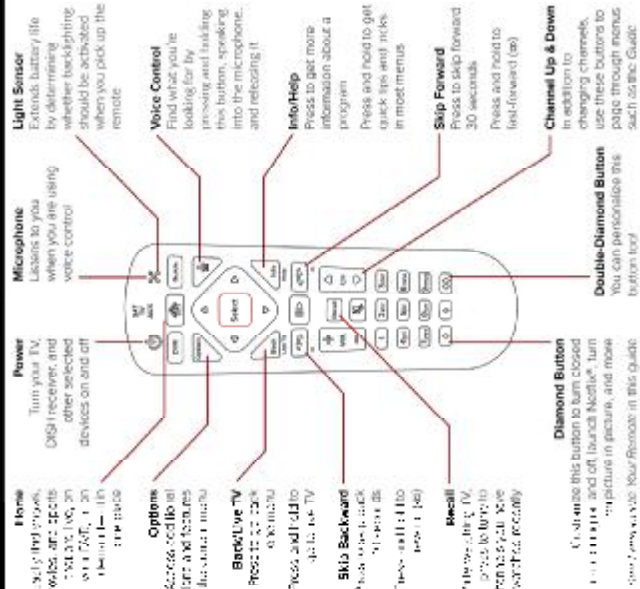


Pair Your Remote


- 1 Press the Home button twice.



 - 2 Select Settings and then Remote Control.



 - 3 Select TV and then TV Pairing Wizard.



- 4 Follow the prompts.

- 5 You can also pair your remote with an Auxiliary Device such as a Blu-ray™ Player or stereo.



Trouble Issue about the Pairing

If can not pair successfully, please follow below step:

1. Remove the Battery and then put back the battery.
2. Press and hold the SAT button on the side of the remote control about 3-4 seconds, until the SAT TV AUX LED Lighting then release.
3. Then simultaneously Press and hold the HOME and Guide key together about 3-4 seconds, until their three beeps then release.
4. Follow the Pairing step.

Explore Your Remote

Device Buttons
Use your remote as a universal remote control by pairing it with your TV and an auxiliary device such as a Blu-ray™ player or stereo.

Input

Change inputs on your TV when in TV mode. When in SAT mode, use this button to view picture-in-picture or multi-view windows.



Take Control With Your Voice

- 1 Press and hold the voice button.



- 2 Say the name of a movie, TV show, sport, sports team, actor, collection, or feature.



- 3 Release the voice button.

- 4 Try other examples such as:

"Watch ESPN"
"Big Bang Theory"
"Batman movies"
"Action movies with Matt Damon"
"Launch Game Finder"
"Denver Broncos"
"Closed captioning on"
"Tail to speech on"

Locate Your Remote Anytime

- 1 Open the front panel of your DISH receiver.



- 2 Press the LOCATE REMOTE button.



You will hear a series of beeps from your remote, allowing you to find it. It's that simple!

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.