 


Magic Remote

MR20GA

INSTALLING BATTERIES

- Please read this manual carefully.
- Press the top of the battery cover, slide it back, and lift the cover as shown below.
- To replace batteries, open the battery cover, replace alkaline batteries (1.5 V, AA) matching ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV.
- To remove the batteries, perform the installation actions in reverse. Don't mix old or used batteries with new ones. Close the cover securely.
- **Caution:** Risk of fire or explosion if the battery is replaced by an incorrect type.
- **Open the battery cover to find the label.**



REMOTE DESCRIPTION

- The remote control image shown may differ from the actual product.
- The order of description may differ from the actual product.
- Some buttons and services may not be provided depending on models or regions.



 (POWER)

 / STB
PWR

Number buttons

9**

— (DASH)

 / LIST

QUICK ACCESS**

••• (MORE ACTIONS)

AD/SAP**

  — (VOL)

 ** (Voice recognition)

 ** (MUTE)

   (CH/P)

 ** (HOME)

 ** (Q. Settings)

 Wheel (OK)

  (up/down/left/right)

 / GUIDE

 ** / BACK**

 ** (INPUT)

Streaming Service buttons

 STB / STB
MENU MENU


RECENTS

 ,  ,  , 

  (Control buttons)

MOVIES

**To use the button, press and hold for more than 1 second.

USING

1. How to register (pair) or deregister (unpair)

 


How to register (pair) the Magic Remote

To use the Magic Remote, first pair it with your TV.

1. Put batteries into the Magic Remote and turn the TV on.
2. Point the Magic Remote at your TV and press the  **Wheel (OK)** on the remote control.

- If the TV fails to register the Magic Remote, try again after turning the TV off and back on.

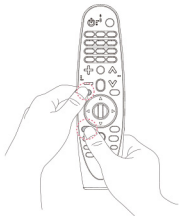 


How to deregister (unpair) the Magic Remote

Press and hold the  (**HOME**) and  / **BACK** buttons at the same time for five seconds, to unpair the Magic Remote with your TV.

- Press and hold the  / **GUIDE** button for more than 5 seconds to disconnect and re-register the Magic Remote at the same time.

2. How to use



- Shake the Magic Remote slightly to the right and left or press  (**HOME**),  (**INPUT**), or  (**Q. Settings**) buttons to make the pointer appear on the screen.
(In some TV models, the pointer will appear when you turn the  **Wheel (OK)** button.)
- If the pointer has not been used for a certain period of time or Magic Remote is placed on a flat surface, then the pointer will disappear.
- If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen.
- The Magic Remote depletes batteries faster than a normal remote due to the additional features.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.