

ETEKJOY RFID Electronic Lock for Wooden Cabinet / Drawer

Warning: Please ensure that batteries are installed before closing the cabinet door, to avoid being locked out.

Video about how to set up admin card and user cards: <https://youtu.be/F876S1dL3YY>

Features:

1. The cabinet wooden door should not exceed 1.2 inches thick
2. Multiple Unlock Mode: Single Unlock Mode, Dual Unlock Mode
3. 2 x AA 1.5V batteries required
4. The batteries can last 8-12 months under normal use
5. The sound alarm will alert when the batteries power is low
6. The lock will unlock (pop open) automatically shortly before the batteries go dead.
7. 1 admin card and up to 10 user cards can be set up on this lock kit.

Operation Instructions

1. Reset

Install 2 x AA 1.5V Batteries. Press the reset button in the backside of the lock body until a long beep.

2. Set Up Admin Card

After resetting the lock, swipe a RFID card / tag, this first card / tag will be configured as the admin card.

3. Select Unlock Mode (Single Mode is 1-card-swipe to unlock. Dual Mode is 2-card-swipes to unlock!!)

After setting the Admin Card, you should select the unlock mode.

- (1) Press the reset button shortly and release, if you hear one short beep and one long beep, this is for Single Mode.
- (2) Press the reset button shortly and release, if you hear two short beep and one long beep, this is for Dual Mode.

4. Set Up User Cards

Swipe the admin card, then swipe the new cards, which you want to add as user cards during the beeping.

5. Delete Cards

- (1) To delete all user cards: swipe the admin card 3 times.
- (2) To delete the admin card and user cards: same as Reset. After Resetting, you can set up new admin card.

6. Low Voltage Alarm

Please use two 1.5V AA Batteries. When you swipe the card to unlock, the voice alarm will alert (you can hear a long beep) if the battery power is low. You still can swipe card to unlock for 50 times max. Please replace the batteries ASAP. The lock will unlock (pop open)) automatically shortly before the batteries go dead.

Package Includes:

1x Lock Body, 1x Latch, 1 set x Screws, 1 set x RFID Card/Tag, 1x Icon



If you have any question, please feel free to contact us by email: support@etekjoy.com

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.