


User Manual

- Basic Operation
- After Service



1. Basic Operation

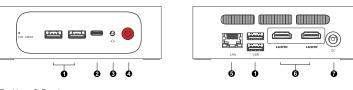

Button & Ports

- 1. USB port 2. Type-C port
- 3. MIC headphone jack
 4. power button
- 5. LAN port 6. HDMI port 7. DC in port

2.Vesa Mount Installation Guide




Failure to use the included power adapter may violate regulatory compliance requirements and may expose the user to safety hazards. specifications are subject to the physical product.

The following operations should be started with the power off


DDR Memory Installation. (As shown in the picture)

1. Align the memory module key along with the memory socket key and insert the memory at a 30 degree angle,Slide the module into place.

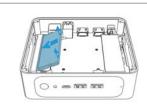


SSD Card Installation. (As shown in the picture) 1. Align the notches on the SSD with the tabs in the M.2

slot on the mother board. 2.Slide ssd in then secure the SSD with screw.

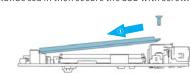

Note: The HDD installation guide is inscribed on HDD cover.

Connection steps

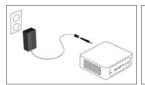





1.Connect the power

system tray).

2.Connect to the monitor with HDMI cable

3.Connect the keyboard and mouse

How to Change Your Audio Playback Devices on Windows

Connect speakers, headphones, a webcam with a built-in microphone, a Bluetooth headset, or another audio devices to your Windows PC and you'll need to choose which devices Windows actually uses.



3.Select the playback device you want to use from the menu.

Cautions

In order to continue to improve the user experience, we may occasionally update app and firmware.

- Do not use harsh of chemical solvent, cleaning products, We recommend using a soft cloth to wipe.
- Do not throw product into fire, avoid having fire accident.
- Do not attempt to open the housing or to repair, if a failure occurs, please contact the customer service.
- Please note seepage while clean electronics, be careful of electric shock.
- Don't arbitrary discard the product, we should protect the environment.
- Check for any frayed or damaged cords or plugs.
- Operating environment: -10°C--45°C, 30%—85% humidity. • Storage environment: -20°C—60°C, 10%—90% humidity.



Compliance FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment $% \left(\mathbf{r}\right) =\mathbf{r}$ and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is
- —Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure com

Power-on and Wake-on-LAN, setting guide file storage path (Select the corresponding file according to the machine model): C:\Power On and WOL System drive file storage path: C:\Driver

After service

Email: Mini PC: support@trigkey.com Sales: wholesale@trigkey.com

Manufacturer: ShenZhen AZW Technology co.,Ltd Address: 4th Floor,Building 18,Longjun Industrial Park, Bujiuwo,Longhua New District,ShenZhen,China





