

Android car player

A2768

User manual

01、Navigation

Click the main interface "navigation" to enter the navigation interface

If the savings card does not have map data, it will prompt download and enter the map management interface after confirming.

- Clicking icon description

- ①. Map download: Click the top left corner, "☰" then click offline data, and then click on the offline map, select the city map data you need to download.
- ②. Download Management: Downloading, can begin all to download or pause, also can click the city to choose to cancel or pause the download.
- ③. Download Manager: to download, you can update all, you can click the city to select delete data or update.
Top left corner. "←" Return to the previous level interface.

 
 


 
 
02、Radio

 
 
Click the main interface "radio" to enter the local radio



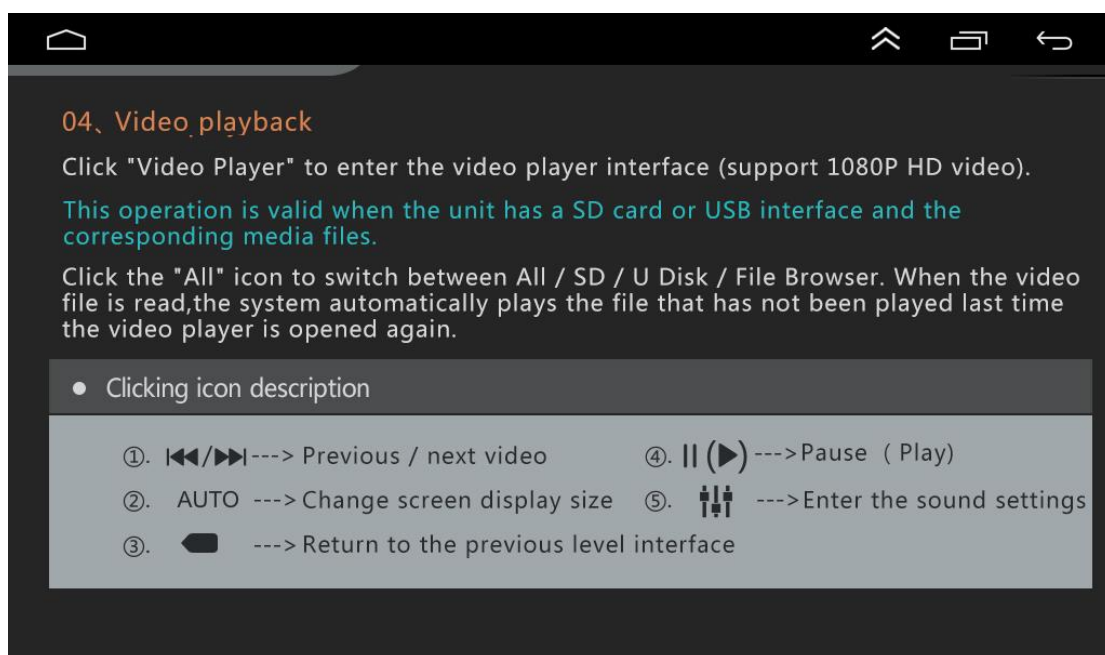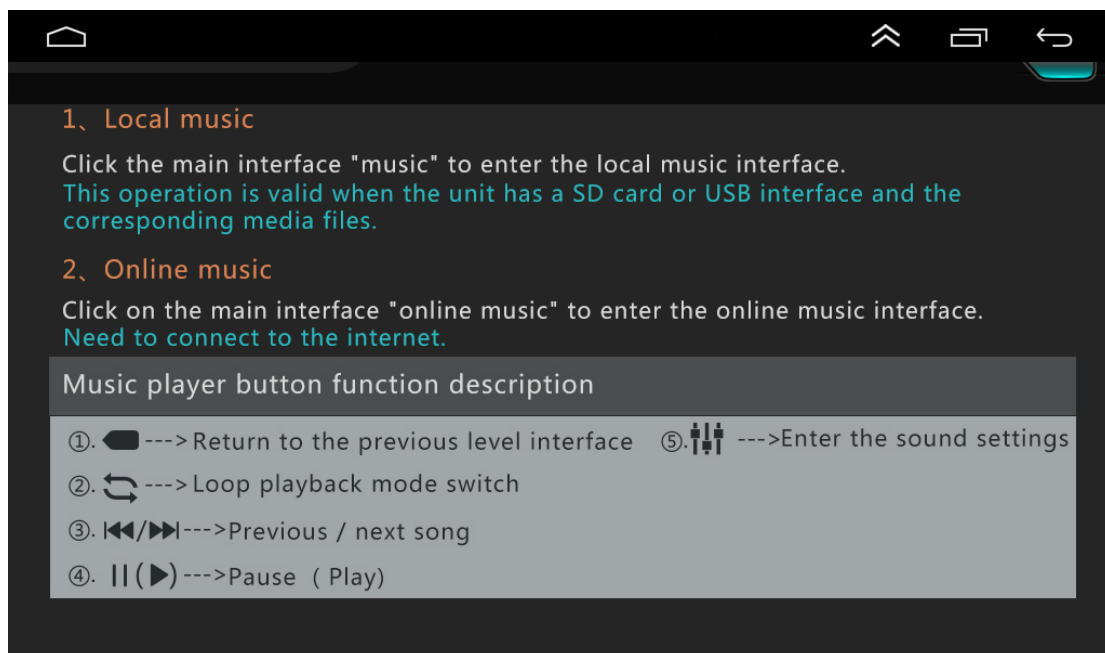

- Clicking icon description interface (FM / AM band can store 40 effective platforms each)

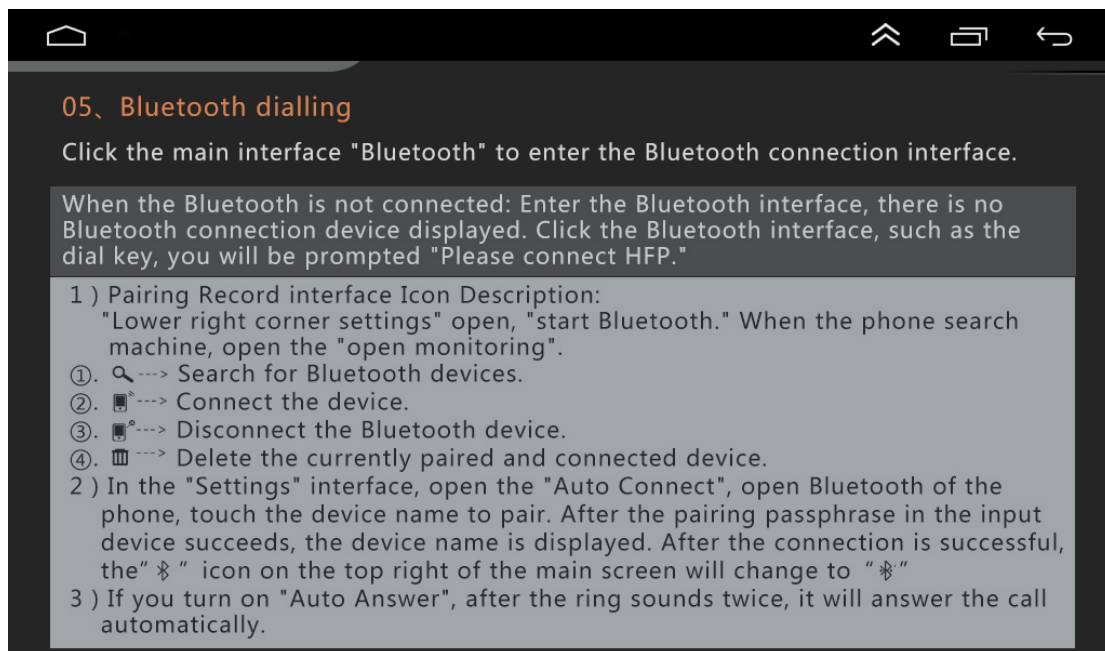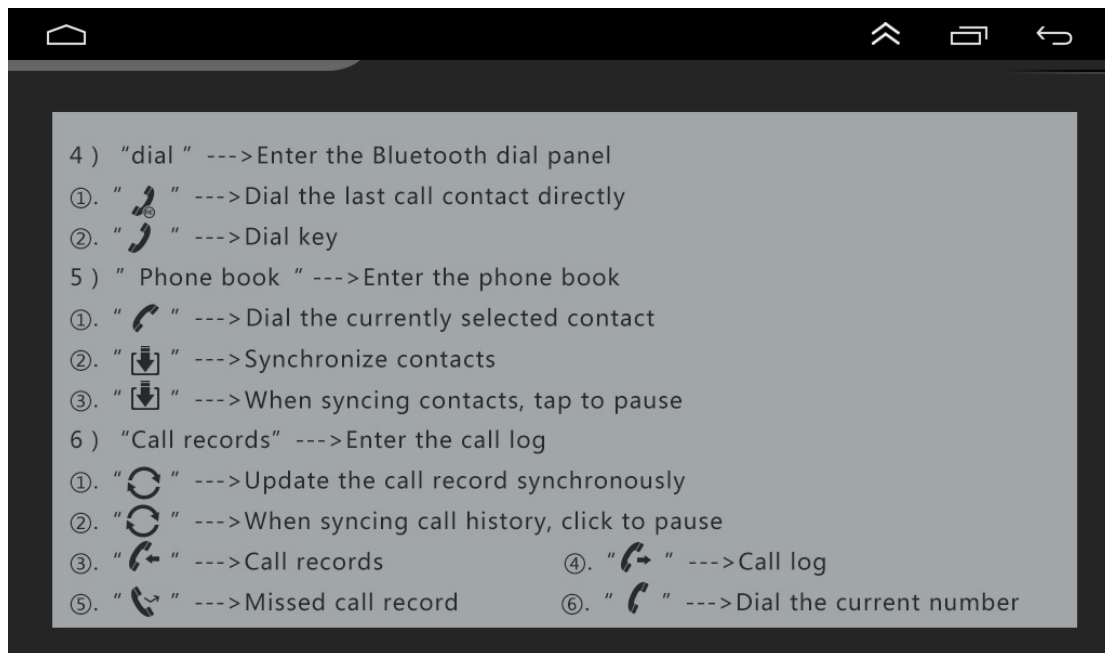- ①. 🏠 ----> Back to Home page
- ②. ⏮/⏭----> Search for stations previous / next, stop searching when it finds a station.
- ③. ⏪ / ⏩ ----> Click to select previous station / next station
- ④. ↶ ----> Return to the previous level interface
- ⑤. FM(AM) ----> Switch between FM / AM bands

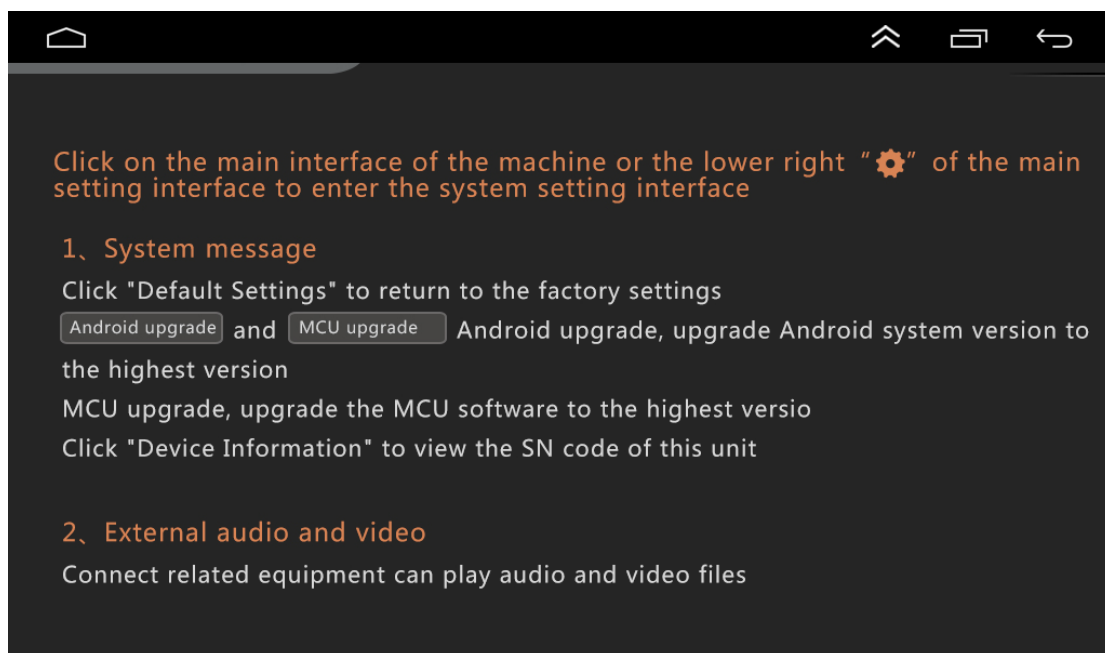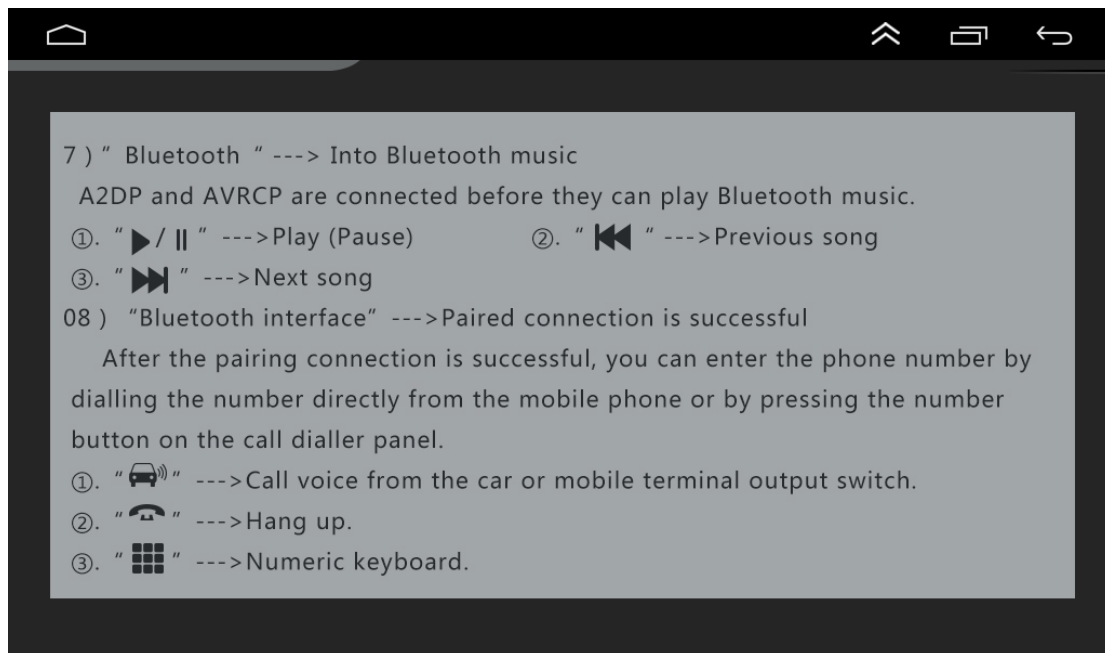











3、Steering wheel learning

Steering wheel learning steps are as follows:

- 1、 Press any key on the steering wheel, the interface will display please long-press a direction key” , without pressing the steering wheel button for a certain period of time will lead to learn failure.
- 2、 Click on the screen to learn the docking function
3. Press the corresponding function button on the steering wheel.





Follow the steps 1/3 in succession until all control buttons on the steering wheel finish.

Note: Click “” will clear all the keys to learn.

If you perform a "System Reset" operation in "Factory Mode Settings", please re-learn the steering wheel before use it again.

The realization of this feature:

1. For non-bus control of the original car steering wheel.
2. The original car steering wheel keys need to be voltage input control.


4、Brightness setting

Click the "+" "-" icon to adjust the value.

5、Volume settings

Slide the button directly to adjust the media volume and call volume.

6、GPS monitoring

View related GPS information, click “” to restart GPS.

7、Sound settings

 
 
- ①.Click the slider to adjust Subwoofer, bass, midrange, treble.
- ②.Settings can be made in Rock / Custom / Classic / Jazz / Pop by clicking the corresponding icon.
- ③.Click the upper right corner of the speaker to “◀ ▶ ▲ ▼” et four icons or click the centre dot to adjust the speaker position settings.
- ④.Click the "default" icon will restore the sound settings parameters to the system default state.

8、Memory clean

Cleaning up memory speeds up the system.

9、Desktop wallpaper

According to your personal preference, you can go from "wallpaper" to "dynamic wallpaper".The "gallery" sets the wallpaper as prompted.

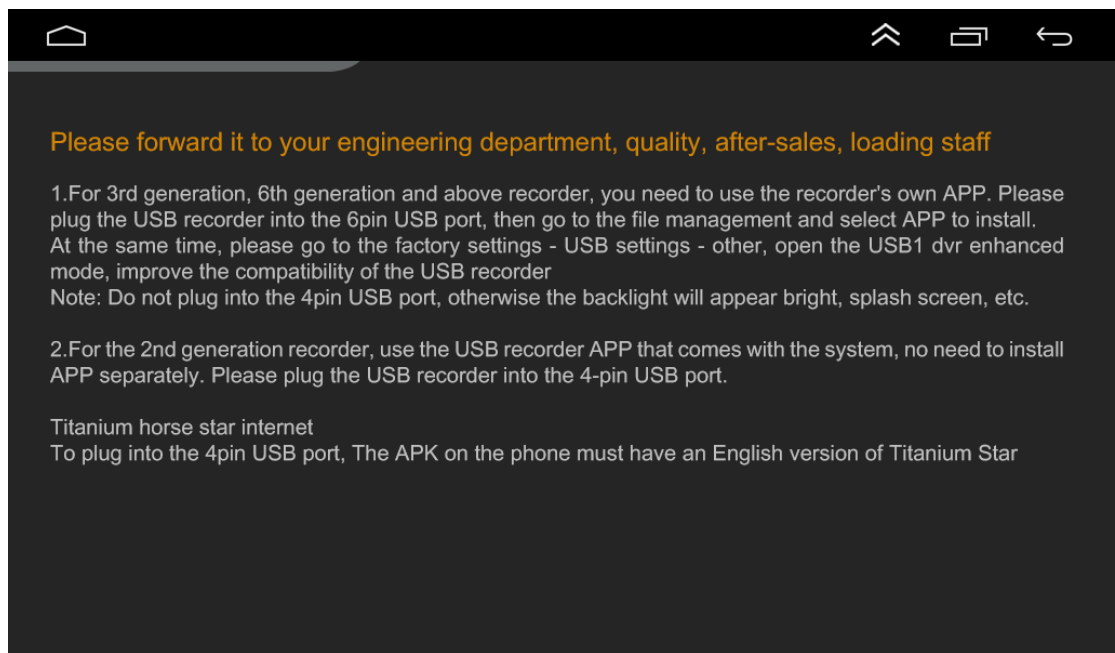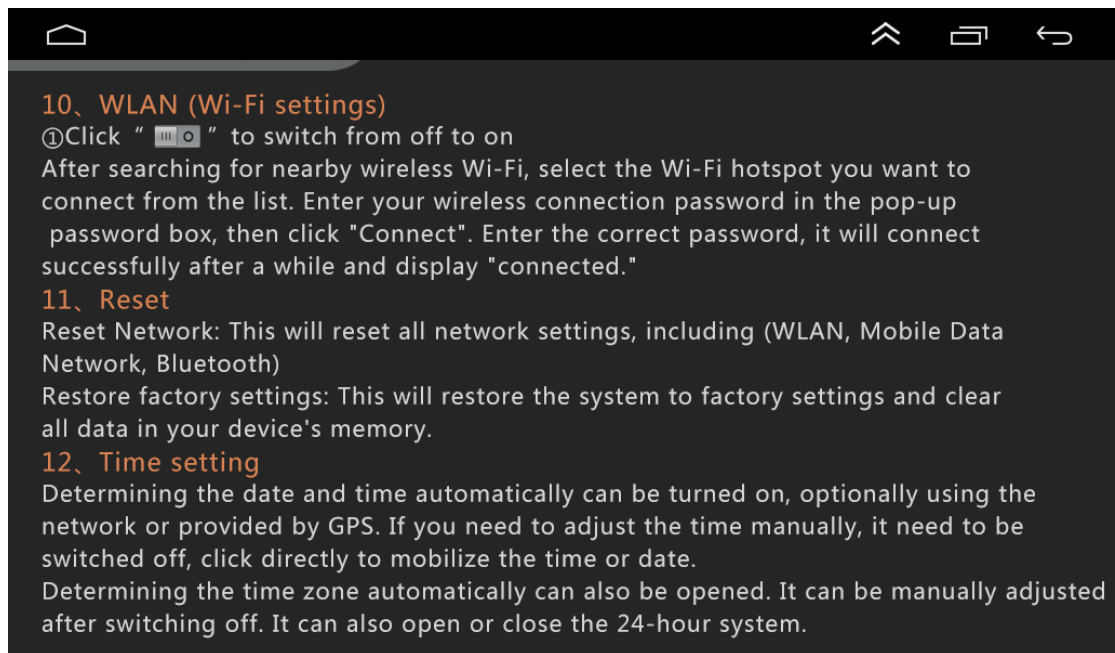

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

This device complies with RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device must operate with a minimum distance of 20 cm between the radiator and user body.