

Mobile computer universal
LIVE SOUND CARD

user's manual



Reminder: Please read the manual carefully before use to avoid any noise or no sound caused by improper use. Thank you for your cooperation!

PRECAUTIONS FOR USE AND COMMON PROBLEMS
1. Long press the power button for about 3 seconds, the sound card is turned on or off, the power-on indicator light is blue, and the red light is displayed when the power is turned off. It will not be turned on again until the power is turned on again.
2. When the sound is low or the sound quality is not good, it means that the battery is insufficient. Please charge it. Try not to charge the sound card during live broadcast. When the current is unstable, it will cause current interference or noise to the sound card.
3. When using, all interfaces need to be fully plugged in. If the phone has a phone case, please remove the phone case, avoid the case against the plug, and turn the plug twice after connecting; if you use a condenser microphone with high sensitivity, the surrounding environment will be noisy. It may be recorded or howling, please adjust the volume of the microphone to reduce the sensitivity.
4. During the live broadcast, the volume of the live mobile phone must be turned off, otherwise there will be heavy sound; the volume of the accompaniment mobile phone and computer must be turned on and the recording knob of the sound card turned on to the right. These are the volume heard by the audience and the recording and volume.
5. For live streaming or recording songs on a single mobile phone, the music volume is adjusted on the mobile phone, and the accompaniment of the music input can be adjusted on the sound card or the accompaniment device; when listening to the live broadcast effect, do not listen to the live broadcast on the mobile phone with the live broadcast mobile phone. When testing the live broadcast effect in the same area, there will be signal interference and whistling sound;
6. When the computer is broadcasting live or recording a song, first unplug the computer speaker, then turn off the power of the speaker, connect the sound card to the computer with the charging cable, first check whether the driver is installed successfully (there will be a prompt in the lower right corner of the computer) to ensure that the computer recognizes Sound card. It is not recommended to use speakers for live broadcast (please use monitor ears), because the sound from the speakers will be recorded by the microphone again, resulting in double sound.
7. Each time you broadcast or record a song, you should test whether the sound card and the device are connected. Click the sound effect of the sound card (such as applause and laughter), and the sound can be recorded or the audience can hear the sound, indicating that the sound card has been connected to the device, and you can rest assured use.
8. The four-section earphone with microphone is inserted into the earphone hole, the three-section monitor earphone without microphone is inserted into the earphone hole of the speaker, and the four-section earphone with microphone is not allowed to be inserted into the earphone speaker hole, which will cause sharp noises. Do not use it with the microphone at the same time, because the headset has its own microphone, which will cause double sound. The headset should be adjusted from the minimum volume. When the volume is too high, there will be howling.
9. Connect the Bluetooth accompaniment, turn on the Bluetooth of the mobile phone, search for the device and find "V8S" and click Connect. After the connection is successful, the Bluetooth indicator light on the display will be high, indicating that the Bluetooth has been connected.

手机电脑通用
直播声卡

使用说明书

 


温馨提醒：请仔细阅读使用说明书，避免造成不必要的损失和安全隐患。


使用注意事项以及常见问题
1. 长按开关键5秒左右，声卡开机或者关机，开机指示灯为蓝灯，充电时显示红灯，充满后自动熄灭，变音短按切换，电音短按切换，切换到其他模式关闭；
2. 当听到声音小的时候或者音质不佳表示电量不足，请及时充电，直播的时候声卡尽量不要充电，电流不稳定的时候，会对声卡产生电流干扰或者杂音；
3. 使用时，所有接口需要完全插紧，手机有手机壳的请取下手机壳，避免壳子顶着插头，接上后转动插头两圈；如果使用的电容麦克风灵敏度比较高，周围环境噪音可能会录进去，或者是产生啸叫，请调节话筒音量大小来降低灵敏度；
4. 直播的时候，直播手机音量一定要关闭，不然有重音；伴奏手机、电脑的音量要打开和声卡的录音音量向右边打开，这些是观众听到的音量和录出来的音量；
5. 单手机直播或者录歌，音乐音量是在手机上调节，音乐输入的伴奏才能在声卡上调节音乐音量或者伴奏设备上调节；试听直播效果的时候，听自己直播的手机不要与直播手机在同一个区域测试直播效果，会有信号干扰，形成啸叫；
6. 电脑直播或者录歌的时候，首先把电脑音箱拔出电脑，然后关掉音箱电源，声卡使用充电线接上电脑，首先查看驱动安装成功没有（电脑右下角会有提示）确保电脑识别到声卡；直播不建议使用音箱直播（请使用监听耳机），因为音箱放出来声音会再一次的被麦克风录制进去，导致双声道；
7. 每次直播或者录歌的时候应测试声卡与设备是否接上，按一下声卡音效（如掌声笑声这些），能录出来或者观众听到声音，表示声卡已经连接上设备，即可放心使用。
8. 带麦的四节的耳机插耳机孔，不带麦的三节耳机插在音箱耳机孔三节监听耳机孔不允许插在耳机孔，四节带麦的耳机也不允许插在耳机音箱孔，会导致尖锐的杂音，使用耳麦就不要和麦克风同时使用，因为耳麦已经自带麦克风，会导致双声道，耳麦要从最小的音量来调节大小，当音量过大的时候会出现啸叫。
9. 连接蓝牙耳机，开启手机蓝牙，搜索设备找到 "V8S" 点击连接，连接成功后显示屏蓝牙指示灯会亮，表示蓝牙已接上。

The product battery is a built-in rechargeable lithium battery. Please do not disassemble and replace it by yourself. Use the correct method to charge the sound card. Do not place the sound card near a fire source or expose it to sunlight. The heating of the battery will destroy the safety device and may cause the battery to explode or burn.

Control panel introduction

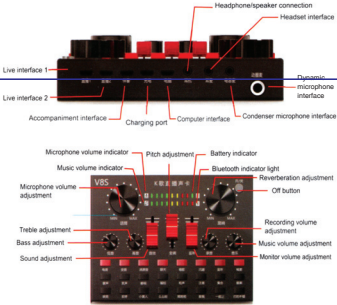

控制面板介绍

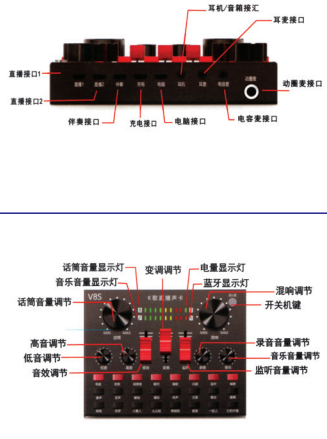 

Please pay attention to keep the warranty with this card

WARRANTY CARD

Product number: _____
Product Series: _____
Where to buyshop: _____
Purchase date: _____
Buy account: _____
Purchaser's name: _____
Purchase order number: _____
contact number: _____
contact address: _____
E-mail: _____

CERTIFICATE OF CONFORMITY
model: _____
inspections: _____
Date of manufacture: _____
This product has been inspected to meet the specified quality standards and is allowed to leave the factory.

 
凭本卡保修
请注意保留

产品保修卡

产品型号: _____
产品系列: _____
购买地点/店铺: _____
购买日期: _____
购买帐号: _____
购买人姓名: _____
购买订单号: _____
联系电话: _____
联系地址: _____
E-mail 邮箱: _____

合格证
型号: _____
检验员: _____
出厂日期: _____
本产品经检验符合规定的质量标准，准予出厂。


单手机K歌录歌的连接方法:
温馨提示：全民K歌使用内置录音棚效果（不要选择其他会覆盖声卡效果）
唱吧爱歌使用原声模式（不要选择其他模式，不然会覆盖声卡效果）

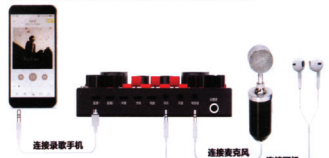


THIS PRODUCT HAS BEEN INSPECTED TO MEET THE SPECIFIED QUALITY STANDARDS AND IS ALLOWED TO LEAVE THE FACTORY.
Reminder: Use the built-in recording studio effect for National K Songs (do not select other effects that will cover the sound card)
Sing it and record songs using the original sound mode (do not choose other modes, otherwise the sound card effect will be overwritten)



 双手机直播的连接方法:
温馨提示：背景音乐可以使用酷狗、酷我、QQ音乐播放，如果需要伴奏的可以搜索伴奏歌曲或者下载类似全民K歌、唱吧之类带伴奏的APP播放。

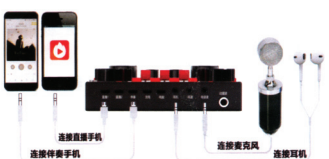

 
THE CONNECTION METHOD OF DUAL MOBILE PHONE LIVE BROADCAST:
Reminder: The background music can be played using KuGou, Kuwo, and QQ music. If you need accompaniment, you can search for accompaniment songs or download apps like Quamin K Song and Sing Bar to sing.

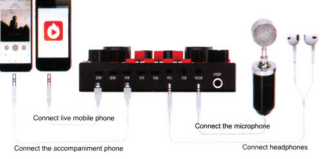


手机直播，电脑伴奏的连接方法:
温馨提示：连接电脑时一定要开机，电脑识别到声卡之后电脑右下角会有提示驱动安装成功。（笔记本和台式电脑的连接方式一样）



 
THE CONNECTION METHOD OF MOBILE LIVE BROADCAST AND COMPUTER ACCOMPANIMENT:
Reminder: The computer sound card must be turned on. After the computer recognizes the sound card, there will be a prompt in the lower right corner of the computer that the driver is installed successfully. (Notebook and desktop computers are connected in the same way)

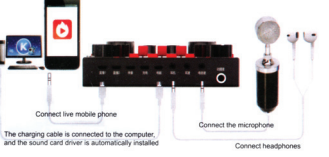

 
电脑直播的连接方法：（电脑放伴奏）
温馨提示：连接电脑时一定要开机，电脑识别到声卡之后电脑右下角会有提示驱动安装成功。（台式电脑/笔记本一体机连接方式一样）

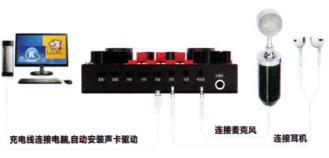

 
THE CONNECTION METHOD OF COMPUTER LIVE BROADCAST:
Reminder: The computer sound card must be turned on. After the computer recognizes the sound card, there will be a prompt in the lower right corner of the computer that the driver is installed successfully. (The connection method of desktop computer/notebook/all-in-one is the same)

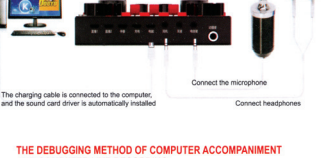

电脑伴奏和电脑直播录音的调试方法:

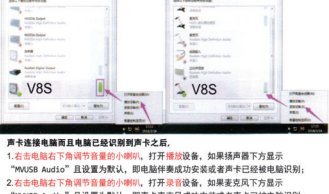 

After the sound card is connected to the computer and the computer has recognized the sound card:
1. Right-click the small speaker in the lower right corner of the computer to adjust the volume and turn on the playback device. If "MVUSB Audio" is displayed under the speaker and set as the default, the computer accompaniment is successfully installed or the sound card has been recognized by the computer.
2. Right-click the small speaker in the lower right corner of the computer to adjust the volume, and turn on the recording device. If "MVUSB Audio" is displayed under the microphone and it is set as default, that is, the acoustic microphone is successfully installed or the sound card has been recognized by the computer.

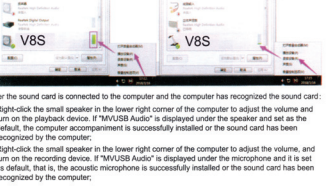 

保修条例

1、本产品自购买之日（凭出货单上注明的日期）起即可享受一年内免费保修和维护。若您在正常使用中出现故障，请与本公司业务联系，保修时应出示此单。
2、对于下列原因导致的机器故障不属于免费保修范围：
A. 人为原因（有可见的物理性伤害等）造成的部件损坏。
B. 由于客户运输的原因引起的部件损坏及故障。
C. 计算机病毒感染导致产品不能正常工作。
D. 不可抗力力：如地震、雷、火灾等，自然灾害意外事故（被盗、丢失等）不可抗力力引起的设备不能正常工作。
E. 因使用第三方软件导致产品不能正常工作。
F. 因不良的电源环境或本机不能承受的异物进入设备所引起的故障损坏。
G. 自行拆卸、修理造成的产品故障。
3、因产品的故障，直接或间接地引起的其他设备的故障不予以负责。

WARRANTY REGULATIONS

1. This product can enjoy free warranty and maintenance within one year from the date of purchase (with the date indicated on the delivery note). If you have a failure during normal use, please contact our company for business, and you should show this form during warranty.
2. Machine failures caused by the following reasons are not covered by the free warranty:
A. Parts are damaged due to man-made reasons (visible physical damage, etc.).
B. Parts damage and malfunctions caused by the customer's transportation.
C. Computer virus infection causes the product to not work normally.
D. Irresistible force: such as earthquake, thunder and lightning, fire, etc., natural disasters cause accidents (stolen, lost, etc.) and the equipment cannot work normally caused by force majeure.
E. The product cannot be used normally due to the use of third-party software.
F. Failure and damage caused by poor power supply environment or foreign matter that the machine cannot withstand entering the equipment.
G. Product failure caused by self-disassembly and repair.
3. We are not responsible for other equipment failures directly or indirectly caused by product failures.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.