

NBVOICE

NBVOICE
PARTY SPEAKER
ARIES CP2



USER MANUAL

INTRODUCTION

Thank you for purchasing the NBVOICE PARTY SPEAKER ARIES CP2.

Please read this manual carefully, and keep it safe if in feature reference.

CONTROL PANEL



1. AUX IN

Accepts 3.5mm Minijack input connections.

2. USB SLOT

Play media files from a USB device by connecting the device to the slot.

3. TREBLE

Increase and decrease the low frequency for MIC/LINE/AUX/MP3 sources at a range between -10dB to +10dB.

4. BASS

Increase and decrease the high frequency for MIC/LINE/AUX/MP3 sources at a range between -10dB to +10dB.

5. M-REVERB

Increase the echo effect of the microphone sound, and make people live more full.

6. M-ECHO

Adjust the knob to make the microphone sound more pleasant.

7. GT-VOL

Adjust the volume of the guitar.

8. M-VOL

Adjust the volume of the microphone.

9. MICROPHONE

Accept 1/4" microphone jack in.

10. GT

Accept 1/4" guitar jack in.

11. POWER

Power switch button


12. AC IN

Plug in the adapter to charge.

DIGITAL MEDIA PLAYER

NBVOICE

The media player can play audio tracks stored on a USB memory stick or stream audio from your Bluetooth-enabled device.

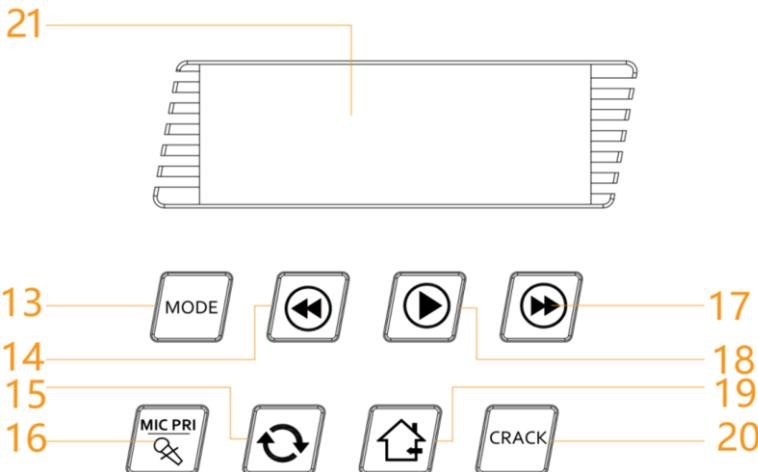

13. MODE

Press this button to switch USB or Bluetooth mode.

14. PREVIOUS

Press this button to play the previous song.

15. PLAY MODE

Press repeatedly to cycle through the available play modes:

1. All. Plays all tracks on loop, regardless of folder.
2. Repeat one. Plays the current track on loop.
3. Random. Plays tracks from all folders in

NBVOICE

random order.

4. Repeat folder. Plays all tracks in the current folder on loop.

16. MIC PRI

Eliminate the singer's voice in the music, allowing you to sing freely.

17. NEXT

Press this button to play the next song.

18. PLAY/PAUSE

Plays or pauses the USB or Bluetooth media.

19. SCENE SWITCHING


Switch the sound mode, outdoor or indoor.

20. CHRACK

There are four voice changing effects. The sound from the microphone can be changed to a different sound.

21. LCD DISPLAY

Display the media panel modes for USB&Bluetooth.

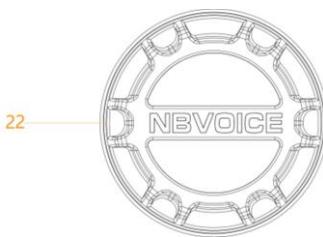


22. MASTER

This knob controls the speaker all of output volume.

Remote control

NBVOICE

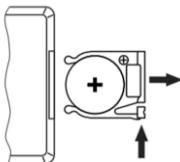

Inserting the battery into the remote control

Press the lock of the battery holder to the centre of the housing

and pull out the battery holder like a drawer. Insert the battery.

The battery is correct if the positive pole points to the housing

base of the remote control. Slide the battery holder back into the

remote until it clicks into place. When shipping, the battery is

already installed in the remote and protected against discharge

by a transparent plastic foil. Remove the plastic foil prior to first

use

Bluetooth connection method

- 1、Open the bluetooth speaker bluetooth

Long press



- 2、In the mobile phone set Open the equipment bluetooth phones Find ARIES CP2 click ARIES CP2 pairing.

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.