



WIRELESS CHARGER
CD/MP3/USB BOOMBOX
BLUETOOTH SPEAKER
DUAL ALARM CLOCK RADIO
LC-10W



User Manual

WARNINGS AND PRECAUTIONS



This symbol, located on the back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the Product's enclosure that may constitute a risk of electric shock to persons.



This symbol, located on the back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature Accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is opened and the CD player's lid is damaged. Invisible laser radiation is present when the CD player is open and the system's interlock has failed or has been damaged. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to damage or bypass the safety switches.

CAUTION: TO PREVENT ELECTRIC SHOCK, ENSURE TO INSERT 2 PIN PLUG CORRECTLY INTO THE MATCHING SOCKET OR ADAPTOR.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Do not mix old and new batteries.

DO not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

SAFETY PRECAUTIONS

1. Away the unit from water.
2. Using dry cloth to clean.
3. Don't block any vents, install by the user manual.
4. Away from the object may caused heat, such as the electrical appliance, stove or any hot supplier.
5. Put the power cable in a suitable way, please take the plug, socket carefully.
6. The main plug shall be used as a disconnecting device, and the disconnecting device shall be operable.
7. Don't expose the unit under the sunshine for a long time.
8. When the unit destroyed, like the power cable ruined, unit touched plenty of water, or faulty operation and so on, please ask professional staff to repair.
9. The information of equipment is on the bottom.
10. Please keep ventilation around, don't cover things on the unit.


FUNCTION & SPECIFICATON

Unit size	215x88x170mm
Unit weight	1. 17kg
Material	ABS
Accessories	1.AC cable (detachable) 2.Instruction manual 3. Remote Controller



Main unit

Power source		AC100~240V/60~50Hz
		AAA size backup dry battery for time memory (NOT INCLUDED)
Power consumptions		25W
Speaker Output		2 x 2W
LED display		Dual display in white color
Out-put terminal		Earphone termial (3. 5mm)
Input terminal		Aux in termial (3. 5mm)
CD	Support DISC	CD/CD-R/CD-RW/MP3 (both 8cm and 12cm)
	Support File	Audio CD /MP3/WMA
	Function	play/pause/stop/repeat/next/prev.
Bluetooth	Version	Ver.5.0+EDR
	Distance	10m
	Support	A2DP, AVRCP
PLL Radio	FM range	87.5-108MHz
	Function	Auto search
	Antenna	Telescopic antenna
USB	USB terminal	USB/MP3/WMA playback
Wireless Charging	Voltage/Ampere	9V/2A
	Output	10W(android),7.5W(IOS)
Time clock	LED display	Full panel display size in white
	Dual alarm by	Radio/CD/Bluetooth/USB/Buzzer
	Sleep/Snooze/Dimmer	Yes
	Time setting	12/24 hours
Remote Controller	Distance	7M


NAMES OF CONTROL

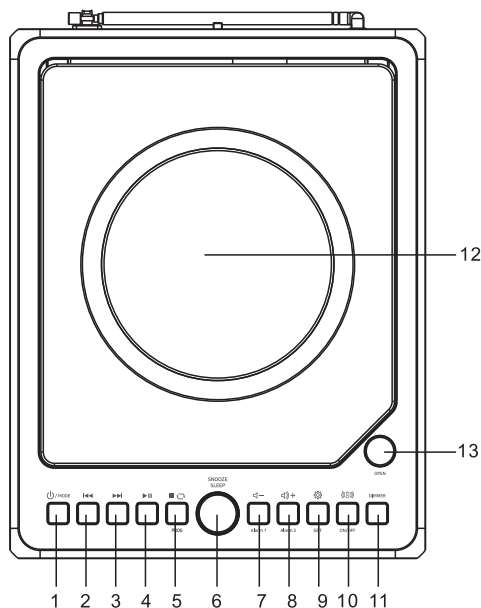

1. Power/Function Mode
2. Previous Selection Button
3. Next Selection Button
4. Play/Pause Button
5. Repeat/Stop/Program Button
6. Snooze/Sleep Function Button
7. Volume Down/alarm 1
8. Volume Up/alarm 2
9. Time Set/FM Auto Scan/FM M+
10. Wireless Charging On/Off
11. Dimmer Label Brightness
12. Wireless Charge Base
13. CD Door Open/Close
14. USB Port For Auto MP3 Playback
15. Aux In Jack
16. Headphone Jack
17. FM Antenna
18. AC-in Let

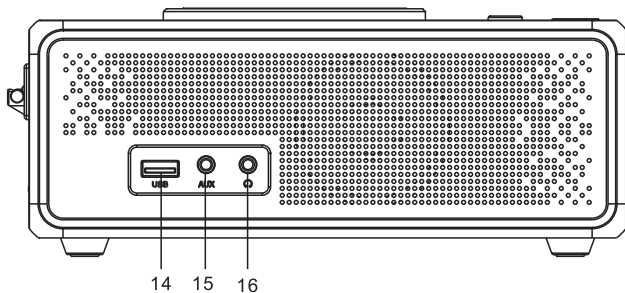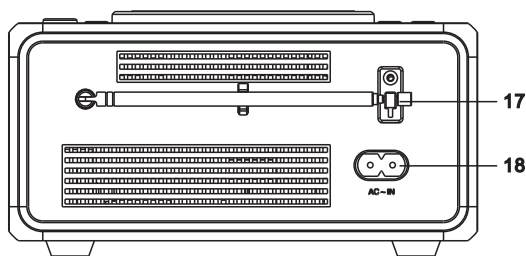

REMOTE CONTROL

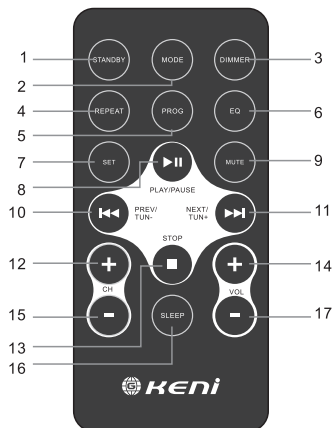 

1.STANDBY

2.MODE

3.DIMMER

4.REPEAT

5.PROGRAM

6.EQ

7.SET

8.PLAY/PAUSE

9.MUTE

10.PREV/TUN-

11.NEXT/TUN+

12.CH+

13.STOP

14.VOL+

15.CH-

16.SLEEP

17.VOL-


NO	MODE BUTTON	Stanby (CLOCK)	CD mode	USB mode	RADIO mode	Bluetooth mode	AUX mode
1	STANBY (or Power)	Short press to switch between standby and function mode. During playback, short press to go to STANDBY mode, and it will resume previous playback mode after shortly press it again.	STANDY MODE				
2	MODE	N/A	Rotation in the " CD - USB - RADIO - BT - AUX "				
3	DIMMER	DIMMER					
4	REPEAT	N/A	REPEAT function	REPEAT function	N/A	N/A	N/A
5	PROGRAM	N/A	PROGRAM	PROGRAM	N/A	N/A	N/A
6	EQ	N/A	Rotation in the " FLAT - ROCK - POP - JAZZ - CLASSIC "				
7	SET	Press longly, SET TIME (CLOCK)	N/A	N/A	AUTO SCAN & MEMORY	BT PAIRING	N/A
8	Play / Pause	N/A	PLAY / PAUSE				
9	MUTE	N/A	MUTE				
10	PREV / TUN-	Set time for Alarm & Clock	Press Shortly : PREVIOUS TRACK, Press Longly : F.R(REWIND)	Press Shortly : PREVIOUS TRACK, Press Longly : F.R(REWIND)	Press Shortly : Frequency fine adjustment- Press Longly : Seek Previous Radio CH	Press shortly : PREV	N/A
11	NEXT / TUN+	Set time for Alarm & Clock	Press Next : NEXT TRACK, Press Longly : F.F(FORWARD)	Press Next : NEXT TRACK, Press Longly : F.F(FORWARD)	Press Shortly : Frequency fine adjustment+ Press Longly : SEEK Next Radio CH	Press shortly : NEXT	N/A
12	CH+	N/A	FOLDER +	FOLDER +	FOLDER +	RAIDO CH +	N/A
13	STOP	N/A	STOP	STOP	STOP	N/A	N/A
14	VOL +	Press Shortly : ALARM 2 ON/OFF Press Longly : ALARM CLOCK SETTING	VOL +	VOL +	VOL +	VOL +	VOL +
15	CH-	N/A	FOLDER -	FOLDER -	FOLDER -	RAIDO CH -	N/A
16	SLEEP	N/A	SLEEP FUNCTION				
17	VOL -	Press Shortly : ALARM 1 ON/OFF Press Longly : ALARM CLOCK SETTING	VOL -	VOL -	VOL -	VOL -	VOL -

OPERATION GUIDE

The following function introductions and button operations are based on the machine itself, but the operations of the corresponding buttons on the remote control are the same.


1. POWER ON/OFF

 Connect the included AC power cord between the main unit and power outlet on the wall or socket, "0:00" will be shown on LED display, (you can set the time before music playback), short press to the POWER/MODE button to turn on, and you can select playback mode as radio, Bluetooth, AUX, CD and USB, Hold the POWER/MODE button for several seconds, the system goes to be standby time mode.

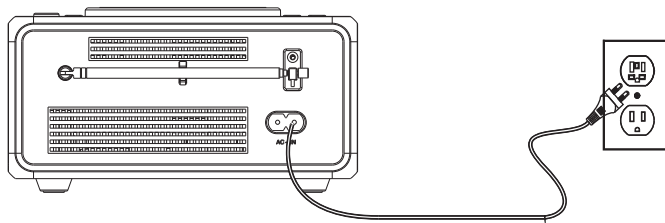


2. HOW TO SET TIME CLOCK?

After connecting to the power cord to the socket, for the 1st time to use, you will see the "0:00" on the LED display, and then you can set the time clock:

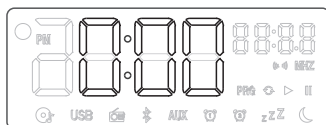

1)Time format setting:


In standby mode, hold the 'SET' ()button until you see the '24H' on display,

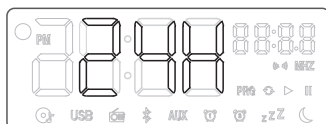


Press 'PREVIOUS' or 'NEXT' ( ) button to choose '24H' or '12H' format.

2)Time set:


After selecting the time format, short press the 'SET' () button to set the hours, you will see the hour digit blinking, use 'PREVIOUS' or 'NEXT' ( ) button to set the current hour;

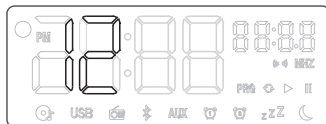

Short press the 'SET' () button again to set the minutes, the minute digit will be blinking, in same way to use the 'PREVIOUS' or 'NEXT' ( ) button to set the current minutes,

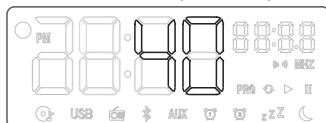


At the last, press 'SET' () button to confirm, then you have successfully set the time.

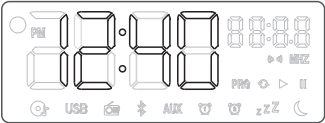


3.BACK UP BATTERY:


At the bottom side, you can find a battery compartment, it is for time back up, please insert 2pcs AAA size dry battery (battery not include) into the compartment .

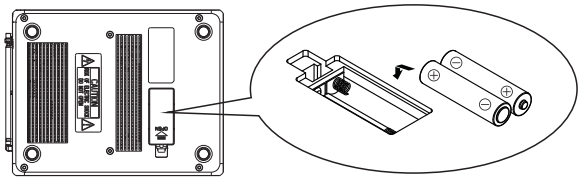


4.HOW TO SET ALARM CLOCK?

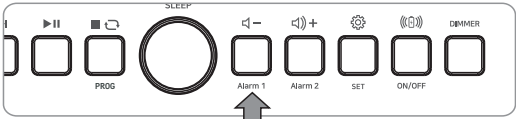


1) In standby time mode, hold the **ALARM 1** button until you see the hour digits is blinking, showing as below picture:

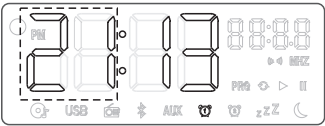

- Then short press the UP  or DOWN  you can adjust the hours as you want.
- 2) After setting the hours, short press **ALARM 1** button to confirm, then the minute digits is blinking as showing below picture.

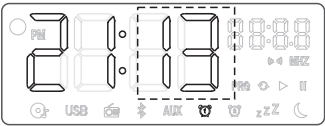

- Just short press the UP  or DOWN  to adjust the minutes as you want.
- 3)After setting the minutes, press the **ALARM 1** button to confirm, it will enter into the alarm mode selection (there are total 5 modes, such as CD, USB, BT, BB and TUNE), Just short press the UP  /DOWN  button to choose the alarm mode, showing as below picture:

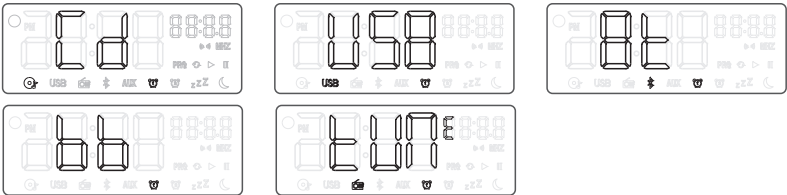

Notice:

**If select CD alarm tone, ensure insert CD disc inside the CD compartment.*

**if select USB alarm tone, ensure insert the USB disk into the USB port.*

**if select Bluetooth alarm tone, ensure pairing to your smart phone and turn on the Bluetooth function.*

**if select radio as alarm tone, it will play the last memory station while alarming.*


**if select BB alarm tone, it will be alarming by the defaulted tone.*

4) Next step to press **ALARM 1** button to confirm, then the LED display will be showing “V15” as below picture, it is defaulted alarm volume.



Short press **UPI◀◀/DOWN▶▶** button, you can adjust your desired volume level.


Finally you just short press the **ALARM 1** button to confirm, then you have successfully set the **ALARM 1**, showing as below picture.

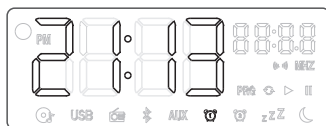


Notice: just in same way to set the ALARM 2.

5) Snooze Function

When alarm tone is ringing out, press **SNOONE/SLEEP** button,

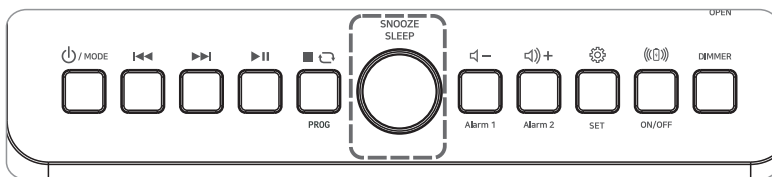

zzZ icon will be shown on display, you can snooze and it will ring again in 10 minutes.

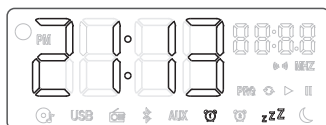

6) Sleep Function

If you want to listen to the radio or enjoy the music from CD/USB/Bluetooth or AUX in before going to sleep, just short press the SNOOZE/SLEEP button, the LED display will be showing "10", it means playback will be auto off after 10 minutes, there are total 9 different time (from 10-20-30-40-50-60-70-80-90-OFF, OFF mean sleep function turns off) for your cyclical selection.

7) Turn On/off Alarm

When alarm is ringing out, press SNOOZE/SLEEP button, the alarming is paused, if you want to turn off the alarm, just press the ALARM 1/2 buttons, and the alarm icon   will be disappeared.

If you want to turn on the alarm, just press ALARM 1/2, it will resume the previous alarm time, the system will be showing alarm status in order of alarm time-alarm tone-alarm volume.

After setting the alarm, and if it is still not reaching the alarm time, you can cancel it by pressing the ALARM 1 or ALARM 2 button, conversely turn on the alarm.

5. DIMMER

Press 'DIMMER' button, can adjust the LED display brightness as your desired at night sleep time, there are totally four levels (from bright to dark).

6. WIRELESS CHARGING FUNCTION

Short press the 'WIRELESS CHARGING ON/OFF' () button, the blue LED charging indicator is on, then the unit is in wireless charge mode. Put correctly your smart phone (it must be with wireless charging function) in center wireless charging base, when you see the red LED charging indicator is steady on, it means on charging, after 100% fully charged to your phone, the LED indicator will change to be blue again.

If you won't need to use this function, just short press this ON/OFF () button to turn off.

Notice: it is not suitable for all phones, only your phone itself has wireless charging function, then you can achieve this wireless charging function.

7. FM RADIO RECEPTION:

**In the standby time mode, short press 'MODE' button to be 'TUNE', the frequency of "87.5MHz" will be showing on the small LED display, Extend the FM antenna to improve FM radio reception.

**Hold the 'SET' () button for 2 seconds to auto search all available stations, it will be automatically saved when finish searching, and start to play the first (P01) memory station, you can choose the saved stations by short press this 'SET' () button.

**You can also use NEXT/PREVIOUS ( ) button for manual adjustment, short press the buttons to up or down 0.01MHz, hold the buttons for fast up or down until it catches the available stations and stops.

**Press 'VOLUME DOWN/VOLUME UP' ( ) buttons to adjust the volume level as your desired, short press the 'PLAY/PAUSE' () button to pause, and resume playback after press it again.

Notice: when the radio reception happening with noise, it might be causing by weak signal, you can adjust the unit position or adjust the FM antenna direction to get the best reception.

8. AUDIO CD/MP3 PLAYBACK:

Step 1: For the 1st time to use, please open the CD door, take out the laser protective cover.

Step 2: Switch FUNCTION MODE ( / MODE) button to be CD mode, CD icon will be shown on LED display, open the CD door, insert the CD disc (printing face up), close the CD door. It will automatically play the NO.1 song.

Step 3: Press the PLAY/PAUSE() Button to pause playback, press again to resume playback, you can use the 'VOLUME DOWN/VOLUME UP' ( - ) buttons to adjust the volume level, and hold the STOP() button to stop playback.

Step 4: During the CD playback, if you want to search your favorite songs, just short press the NEXT/PREVIOUS( ) button to select. If you want to search specific segment, just hold the NEXT/PREVIOUS( ) button and release it until it reaches your desired segment.

Notice:

***MP3 disc playback operation is same as CD.**

***Compatible DISC: 12CM/8CM**

***Do not paste any sticker on the CD/MP3 disc surface, it would effect the music sound output.**

***Do not open the CD door during the playback.**

***Do not inset the blank disc.**

***Different quality discs would be leading different music playback ability.**

9.USB DEVICE PLAYBACK

Short press the FUNCTION MODE ( /MODE)Button to be USB mode, insert the USB hard disk into the USB port, make sure you have saved the music songs (MP3 or WMA format files only) inside, it will be automatically playback the inside musics, relevant operation instructions will be same as CD playback.

Notice:

***Due to different decoding chip with different function, it is possible not to read the some non-compatible MP3/USB disk, and it is not available for the portable HARD DISK.**

***Not compatible with NTFS disk format.**

10.BLUETOOTH PLAYBACK

****Short press FUNCTION MODE ( /MODE) button to be 'BT' mode. The "bt" word will be blinking on LED display, turn on your smart phone, go to the Bluetooth menu, and find the pairing name as "LC-10W", click it to aim to the unit, once successfully paired, the "bt" word will be always on, you just open your music player app on your smart phone and playback your favorite music.**

****PREVIOUS/NEXT, PLAY/PAUSE,etc., all buttons are same function as CD or USB playback operation.**

****If you need to disconnect the Bluetooth playback, just short press to the SET () button, or you can do it from your smart phone.**

11.REPEAT PLAYBACK

In CD/MP3/USB playback mode, you can achieve the REPEAT playback function, there are REPEAT ONE, REPEAT SHUF, REPEAT ALL and REPEAT OFF for selection:

****REPEAT ONE:** during the playback, select your favorite song which you want to repeat playback, short press the REPEAT () button, you will see "ONE" word on small display, then it will repeat playback current song until you change it, and the repeat icon will be always shown on the display.

****REPEAT SHUF:** continuously short press REPEAT () button until you see the word of "SHUF" on the display, then all songs inside the file will repeat playback until you do any change.

**REPEAT ALL: continuously short press the REPEAT () button until you see the word of "ALL" on the display, then all songs of the disc or USB will repeat playback.

**REPEAT OFF: continuously short press the REPEAT () button until you see the word of "OFF" on the display, then you exist the repeat playback function.

Notice: In AUX/BT mode: The button no function.

12.PROGRAM PLAYBACK

**During the playback, hold the STOP () button, you can stop the playback, and then you can apply to the program function.

**Just short press the PROGRAM () button, LED display will show "P01", "01" means the NO.1 programmed song, press NEXT/PREVIOUS button to select your designed programmed tracks, and press the PROGRAM button to confirm, repeat in turn, you can program max. 20 songs for CD and 99 songs for MP3 disc, when you finish programming, press the PLAY/PAUSE button to play.

**Clean the program memory: During the playback of CD/MP3/USB, hold the STOP button to stop playback, hold the button one more time, or change another CD/mp3 disc, or power off/on, then it will clean all the memory of programmed songs.

13.AUX in

This G kenii player can be used as a amplifier for your other audio devices, just connect a mini-phone 3.5mm aux in cable (not included) to the Auxiliary input jack at the side of unit, another side plug to your audio device, short press 'MODE' () button to be 'AUX' mode, then audio playback through the connected audio device will now be heard through the G Kenii player.

14.HEADPHONE JACK

For your private listening, insert a 3.5mm headphone plug into the HEADPHONE JACK. The speaker output is automatically cut off, and you can listen the music from your headphone.

Caution: listening at high power for a long time, which would damage to your ears.

SIMPLE TROUBLESHOOTING

PHENOMENON	REASON	COUNTER MEASUREMENTS
System doesn't work	AC plug doesn't connect	Insert AC plug into the AC socket
	Power doesn't turn on	Press POWER button to be on
Unit no sound output	Volume is not turning up	Press Volume up button to increase
	Function button wrong operation	Switch to correct function
	Earphone plug doesn't pull out	Pull out the earphone plug
CD not working	Whether in CD function mode?	Switch to be CD function mode
	Wrong format CD disc inserted	Insert correct CD format disc
	Dirty CD disc surface	Do clean it
	CD laser is dirty	Clean the laser
	Unit unevenly placed	Place it in a flat position
	laser protection cover not taken out	Take out the protective cover
Radio reception defective	Function mode not in RADIO position	Switch to be RADIO function mode
	Not able to receive the correct stations	Press AUTO SCAN button to auto searching available stations
	Reception with noise	Adjust unit or FM antenna to be proper direction
	Hard to receive station in a enclosure space	Move the unit to be a non-enclosure space
Can not play USB disk	Might be not compatible disk	Change correct USB disk
	Capacity over 32 GB, it is not able to play	Change USB disk less than 32GB
Can not play Bluetooth	whether it pairs your phone?	Please do pair it before playback
	Whether you have paired with other BT speakers?	Please disconnect it and aim at GKen LC-10W
Can not wireless charging	Whether the charging indicator is turn on?	Please turn on the wireless charging function.
	Whether your phone has wireless charging function?	Please use the phone with build-in wireless charging function?
	Whether the connection position correct?	Please place your phone at the centre of charging case
Remote Is Not Working	Check Whether The Battery Is Out Of Power?	Change A New Button Battery
	Check The Remote Distance	Keep The Distance Within 7 Meters

A/S CENTER

Thank you for purchasing G ken product, if you have any questions during the operation, or have found any quality issues , request additional information from the store where you purchased the product, please contact our service center by below email:

Shop name: K&K INTERNATIONAL CO.,LIMITED

Email: kennykwok@foxmail.com