

PN-W28

尺寸: 70mm*105mm

105克铜版纸

折页

黑白印刷


风琴折

User Manual

PN-W28

Thank you for purchasing our product, we provide detailed instructions for you to have the wonderful experience. You can find all information here. Before using this product, please read this instruction carefully.

1. Product Details:

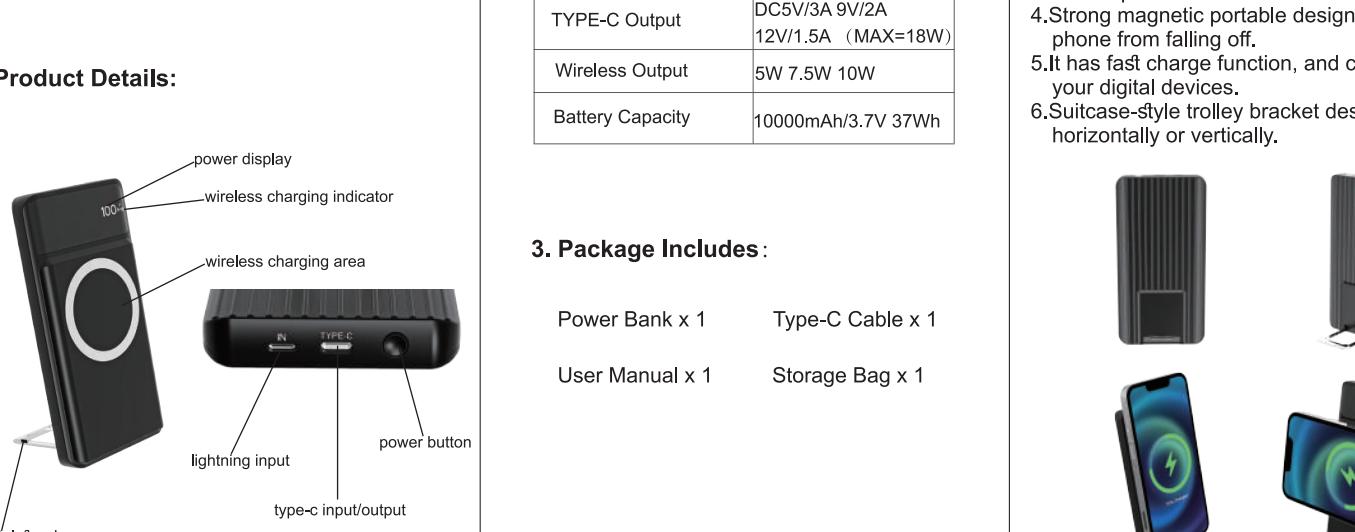

power display
wireless charging indicator
wireless charging area
lightning input
power button
type-c input/output
metal stand

2. Product Specifications:

Lightning Input	DC5V/2A
TYPE-C Input	DC5V/2.4A 9V/2A 12V/1.5A
TYPE-C Output	DC5V/3A 9V/2A 12V/1.5A (MAX=18W)
Wireless Output	5W 7.5W 10W
Battery Capacity	10000mAh/3.7V 37Wh

3. Package Includes:

Power Bank x 1	Type-C Cable x 1
User Manual x 1	Storage Bag x 1

4. Product Features:

- Exclusive fashion design.
- Using original Grade-A polymer battery which is safe and stable.
- Wireless output, compatible with all Qi-compliant mobile phones.
- Strong magnetic portable design, can avoid the phone from falling off.
- It has fast charge function, and can quickly charge your digital devices.
- Suitcase-style trolley bracket design, you can put it horizontally or vertically.

5. Instructions:

a.Turn On/Off

Gently press the power switch to turn on the machine, and the display will light up to show the current remaining power, if no charging device is connected, the machine will automatically shut down after 30 seconds.

b.To Charge the Power Bank

Plug one end of the cable into the type-c or lightning port on top of the power bank. Plug the other end into the USB port of the adapter. The display will flash when it is charging and be solid when it is fully charged.

c.Charging for a long time but can not be fully charged

Please make sure you are using the charging cable correctly with the product and adapter that supports 5V/2A or more output.

d.Check whether the charging indicator is normal.

e.Check whether the USB input port is in working condition and whether there are any problems after connecting the power bank.

f.Check whether the USB output port of the power bank is in working condition and whether there are any problems when connecting the device that needs to be charged.

6. Product Maintenance:

g.Wireless Charging

Turn on the power bank, and put the phone at the wireless charging launch area. As illustrated below, align the power adapter or cable, then try charging again.

h.Charge the power bank at least once every six months.

8. Troubleshooting:

- Keep away from damp and corrosive substances.
- Do not use chemicals to clean this product.
- Charge the power bank at least once every six months.

9. Warranty and After-sales Service:

a.Warranty:

Every product is provided with 12 months of warranty from the date of purchase.

b.To Charge Digital Devices

Turn on the power bank. One end is connected with the digital product, and the other end is connected with the type-c output port of the power bank.

10. Warm Tip:

- In order to ensure the best magnetic absorption effect, remove the phone case to charge. The phone will be more firmly absorbed.
- The magnetic function is only available for iPhone 12 series and later.
- You need to turn on the power bank first when charging. When you want to use the stand function also, do not need to turn on the power switch.

FC Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product. NOTE: This equipment has been tested and found to comply with the limits for a wireless power charger, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which is determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.