

128克铜版纸  
成品尺寸: 85 \*125 mm


双面印刷 折页

FM radio solar power bank  
PN-W29

11 12

## User Manual

Thank you for choosing our product. To ensure a smooth user experience, we have provided a detailed manual containing product introduction, usage instructions, and other information. Please read this manual carefully before using the product to ensure correct operation. We apologize for any printing or translation errors.

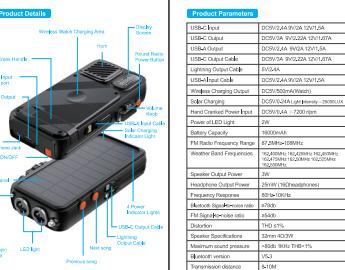

## Product Features


## 2. Charging time



- 1. Power Button: The power button is located on the left side of the device. The LED power indicator is located on the right side of the device, just below the power button. The LED power indicator will turn on during charging and will turn off when the device is fully charged.
- 2. Previous Track: The previous track button is located on the left side of the device, just above the power button. It is used to skip to the previous track in a media file.
- 3. Next Track: The next track button is located on the right side of the device, just above the power button. It is used to skip to the next track in a media file.
- 4. Volume Knob: The volume knob is located on the top right side of the device. It is used to adjust the volume of the device.
- 5. Charging Digital Products like iPhone: Please connect the device to a power source using the included USB cable. The 12V power adapter is located on the left side of the device, just below the power button. The 12V power adapter is used to charge the device. The other end of the charging cable is used to charge the iPhone. Please connect the iPhone to the 12V power adapter and then connect the 12V power adapter to the device. The iPhone will begin charging as soon as it is connected to the 12V power adapter.
- 6. Wireless Charger: The wireless charger is located on the top left side of the device. The 12V power adapter is located on the top right side of the device. Align your phone with the wireless charging area on the top left of the device. Turn on the device and then turn on the wireless charger. The LED on the top left of the device will turn green to indicate that the device is being charged.



### Display Content Explorer

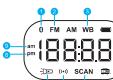

- Bluetooth Connection Status Display:** Blinks when not connected, remains solid when connected to a device.
- FM Radio Status Display:** Remains solid in FM mode.
- Weather Status Display:** Remains solid in Weather mode.
- Frequency Display:** Displays the current frequency.
- Scan/Auto Search Display:** Remains solid when searching for radio stations.
- Wireless Charging Status Display:** Remains solid in the **Wireless Charge Watch Status**.
- Light-Hair Status Display:** Remains solid when the **BS** is turned on.
- Alarm:** Displays when the current time is in the **Alarm** mode.
- Morning:** Displays when the current time is in the **Morning** mode.

Instructions for using the radio

When using the radio to listen to radio programs, simultaneously using the power bank function (radio charging/without charging) may affect the clarity of FM reception and cause noise. If you feel that the reception signal becomes poor or unclear when listening to radio programs, please turn off the power bank to turn on. Turning on the power bank may interfere with radio stations with weak transmission signals, and the interference ability is strongest when the power bank is charging.

1

Long press the radio button to turn on the radio, and then double-click the radio button to enter Bluetooth mode. The Bluetooth on display and the speaker is in **Bluetooth searching state**.  
Turn on Bluetooth function of smartphone or other Bluetooth device, find and connect to the device "A237", if password is required, please enter "0000", The Bluetooth device prompt "Bluetooth Connected" while Bluetooth pairing is successfully done.  
It is necessary to manually connect to Bluetooth for a new device, the product will automatically reconnect to the last connected Bluetooth device when turn it on. You can see and play the song via the Bluetooth device while the Bluetooth connection is complete.

Produc

To ensure the maximum efficiency of this product, please pay attention to the following matters:

1. Keep away from moisture and corrosive substances.
2. Do not use chemicals to clean the product.

Do not use the charger and charging cable on any charging device again.

- **Unable to charge a mobile phone or digital product.**  
—Please reconnect the charging cable to the phone end and the device.

3. If the mobile power supply is not used for a long time, overcharge may occur. It is recommended to charge the mobile power supply to 100% and discharge the mobile power supply at least once every 3 months.

**Other Important Notes**

- 1. Do not disassemble or modify this product.
- 2. Please pay attention to the protection, moisture prevention, and heat dissipation when using this product.
- 3. Do not use the product in high temperature environments (40°C+).
- 4. Please connect devices that comply with the input specifications of this product.
- 5. If the battery is broken, leaking, or exhibits a strange odor, please stop using it immediately.

**Other Common Treatment Methods**

- When the battery cannot be turned on or the LCD battery indicator is not lighting:
  - 1. Please do not touch the metal parts of the mobile power supply.
  - 2. Please do not touch the metal parts of the mobile power supply.
- When the mobile power supply is not charged:
  - 1. Please use the cable provided with this device and a charger that supports an output of 5V/2A or above.
  - 2. Check if the battery has **overcharged**.
  - 3. Check if the charge indicator is normal during charging.
  - 4. Check if the USB output port is in good condition and if there is any damage to the port or the cable.
  - 5. Check if the USB output port is in good condition and if there are any abnormalities when connecting to the device.
  - 6. Check if there are any abnormal sounds or odors from the product.
  - 7. Please do not use the product in a high-temperature environment, as it will affect the service life of the warranty.
- When the product cannot be recharged after the above steps, please contact our company's after-sales service department.

Warranty and After

1. The warranty period for the product is one year.
2. The warranty and repair expenses are limited to the main body power bank, and accessories such as packaging, volume converter, and other auxiliary materials are not covered by warranty and repair expenses.
3. In the event of any quality issue arising within 7 days of purchase, and provided that this is a visible damage or defect, the user may return the product to the place of purchase, and without any delivery charge. The user may repeat this process up to 3 times within 1 year of purchase.
4. When seeking a repair from our service centers, **Please bring along the accompanying invoice and product serial number** so that we can process your repair request faster. In cases where a product undergoes part replacement, the user will be responsible for the shipping cost of up to 3 months from the date of repair. **Please ensure to close your repair request for future reference.**
5. Products that have undergone exchange or repair requests, **will not be eligible for an additional warranty period** in addition to the original specified warranty period.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.