

T16 User Manual

Thank you for choosing intelligent Tablet PC. Based on a fashion intelligent tablet PC Android™ operating system, it is equipped with a 7-inch high-definition screen with high-definition screen, fantastic appearance, streamlined shape, and taste different. Using the latest Android™ 4.4.4 system, the industry's high-end performance guarantees a perfect experience. The 7-inch display screen restores natural, pure and bright colors; the new design interface is more concise, and the desktop is small and exquisite, which perfectly decorates your personalized desktop; exclusive dedicated software, the book will be easily done. Shiny is worth your savoring! Do not use any tablet root tool, otherwise it may fail and cannot be recovered, and the root tablet is not covered by warranty! Please read the instruction manual carefully before use.

The following is a brief introduction to how to use this product:

ADDING YOUR GOOGLE ACCOUNT

- 1 Tap Settings on the Home screen.
- 2 Tap Accounts and then tap Add an account.
- 3 Tap Google on the Add an account screen.
- 4 Follow the instructions to setup your Google account.

ACCESSING APPLICATIONS

- 1 Press the Home button.
- 2 Tap the Application icon at the bottom of the Home screen.
- 3 The screen shows all applications installed on your device.
- 4 Tap and hold the icon for any application to create a shortcut on the Home screen.
- 5 Tap Play Store to find and install new applications.

ACCESSING WIDGETS

- 1 Press the Home button.
- 2 Tap and hold a blank spot on the Home screen.
- 3 Icons for Wallpapers, Widgets, and Settings are shown at the bottom of the screen.
- 4 Tap Widgets.
- 5 Tap and hold the icon for any widget to install it on the Home screen.

CONNECT TO WI-FI (WIRELESS LAN)

- 1 Press the Menu button.
- 2 Tap System settings.
- 3 Tap OFF on the Wi-Fi line to turn Wi-Fi on. The Wi-Fi indicator will appear at the top of the screen and Wi-Fi will read ON.
- 4 Tap Wi-Fi to view the list of nearby networks and connect to a specific network.
- 5 Tap on the network you want to access.

CONNECT A BLUETOOTH DEVICE

- 1 Press the Menu button.
- 2 Tap System settings.
- 3 Tap OFF on the Bluetooth line to turn Bluetooth on. The Bluetooth indicator will appear at the top of the screen and Bluetooth will read ON.
- 4 With Bluetooth on, this screen shows a list of nearby Bluetooth devices.
- 5 Tap on the device you want to access.

OPERATING THE CAMERA

- 1** Tap Home >> Applications >> Camera.
- 2** Compose the photo using the pinch-to-zoom gesture on the screen.
- 3** Tap the camera icon in the bottom right to use the front facing camera.
- 4** Tap other icons on the left side of the screen for other options such as flash.
- 5** Tap the gear icon (bottom left corner of the screen) for additional camera options.
- 6** Tap the capture icon to take the picture.
- 7** You can capture video with sound by tapping the video icon.

SUPPORT

Web: <http://www.junipersys.com/Juniper-Systems-Rugged-Handheld-Computers/products/Cedar-Products/Support>

Email: CedarSupport@junipersys.com

Phone: 435-753-1881

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.